


# 17", 19" Auto scan Color Monitor

Service  
Service  
**Service**

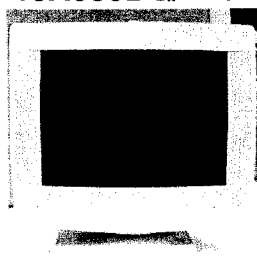

17A580BQ/74C  
19A580BQ/74C



MANUAL 6604  
PCEC Model: 17A580 BQ11  
19A580 BQ11  
Chassis: CM5800  
File: 1997: 6604

DDC/Audio/Power saving/Tilt correction

# Service Manual

Horizontal frequencies  
30 - 95 kHz

## TABLE OF CONTENTS

Description	Page	Description	Page
<b>PART-I : Technical data</b>		U-CTRL (B3) Schematic Diagram-----	22
Important Safety Notice -----	2	Power Supply (C) Schematic Diagram-----	23
Hex Data of DDC1/2B-----	3~6	Main Panel (B1, B2, B3, C & D) C.B.A.-----	24
Warning and Notes -----	7	Audio (D) and USB (E) Schematic Diagram-----	25
Electrical Adjustments -----	8,9	Earphone (F), Rotary and Power Switch (G)-----	26
USB Connections-----	10	Rotary Panel (G) & USB Panel C.B.A. (E)-----	27
Quick Reference for OSD Adjustment-----	11~14	Repair Tips and Exploded View -----	28
Mechanical Adjustments and Wiring diagram ----	15	Spare parts list-----	29~33
Block Diagram -----	16	Quick Reference for 17" & 19" Monitors -----	34,35
Video (A), Power Switch (G), Earphone (F) &		CM5800 BRIEF -----	36~39
Terminal Panel (A1) C.B.A.-----	17	<b>PART-II : Service Information 4822 7272 1995</b>	
Terminal Panel (A1) Schematic Diagram -----	18	(for using the Service DDC Kit)	
Video Panel (A2) Schematic Diagram -----	19	<b>PART-III: The control software for monitors</b>	
Main Panel (B1) Schematic Diagram-----	20	through USB (Installation Manual)	
Main Panel (B2) Schematic Diagram-----	21	<b>PART-IV: Directions For Use</b>	

REFER TO BACK COVER FOR IMPORTANT SAFETY GUIDELINES

## SAFETY NOTICE

ANY PERSON ATTEMPTING TO SERVICE THIS CHASSIS MUST FAMILIARIZE HIMSELF WITH THE CHASSIS AND BE AWARE OF THE NECESSARY SAFETY PRECAUTIONS TO BE USED WHEN SERVICING ELECTRONIC EQUIPMENT CONTAINING HIGH VOLTAGES.

**CAUTION: USE A SEPARATE ISOLATION TRANSFORMER FOR THIS UNIT WHEN SERVICING.**



# PHILIPS

Proper service and repair is important to the safe, reliable operation of all Philips Consumer Electronics Company\*\* Equipment. The service procedures recommended by Philips and described in this service manual are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Philips could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Philips has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Philips must first satisfy himself thoroughly that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

\*\* Hereafter throughout this manual, Philips Consumer Electronics Company will be referred to as Philips.

## WARNING

Critical components having special safety characteristics are identified with a  $\Delta$  by the Ref. No. in the parts list and enclosed within a broken line\* (where several critical components are grouped in one area) along with the safety symbol  $\Delta$  on the schematics or exploded views.

Use of substitute replacement parts which do not have the same specified safety characteristics may create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from Philips. Philips assumes no liability, express or implied, arising out of any unauthorized modification of design. Servicer assumes all liability.

\* Broken Line 

FOR PRODUCTS CONTAINING LASER :

DANGER- Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

CAUTION- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION- The use of optical instruments with this product will increase eye hazard.

**TO ENSURE THE CONTINUED RELIABILITY OF THIS PRODUCT, USE ONLY ORIGINAL MANUFACTURER'S REPLACEMENT PARTS, WHICH ARE LISTED WITH THEIR PART NUMBERS IN THE PARTS LIST SECTION OF THIS SERVICE MANUAL.**

# Hex Data of DDC1/2B (17A580BQ/74C)

17A CM5800

3

```
*****
ddc_v17.chk
*****

Vendor/Product Identification
  ID Manufacturer Name      : PHL
  ID Product Code          : 1107
  ID Serial Number         : 12345678
  Week of Manufacture      : 38
  Year of Manufacture       : 1997

EDID Version, Revision
  Version                  : 1
  Revision                 : 1

Basic Display Parameters/Features
  Video Input Definition    : Analog Video Input
                           : 0.700V/0.300V (1.00Vpp)
                           : without Blank-to-Black Setup
                           : Separate Sync
                           : Composite Sync
                           : Sync on Green
                           : no Serration required

  Maximum H Image Size     : 30 cm
  Maximum V Image Size     : 23 cm

  Display Transfer Characteristic: 2.850
                           : (gamma)

  Feature Support (DPMS)   : Standby
                           : Suspend
                           : Active Off
                           : RGB color display

Color Characteristics
  Red X coordinate         : 0.625
  Red Y coordinate         : 0.340
  Green X coordinate       : 0.285
  Green Y coordinate       : 0.605
  Blue X coordinate        : 0.150
  Blue Y coordinate        : 0.065
  White X coordinate       : 0.283
  White Y coordinate       : 0.298

Established Timings
  Established Timings I    : 640 x 480 @60Hz (VGA,IBM)
                           : 640 x 480 @75Hz (VESA)

  Established timings II   : 800 x 600 @75Hz (VESA)
                           : 1024 x 768 @75Hz (VESA)
                           : 1280 x 1024 @75Hz (VESA)

  Manufacturer's timings  : 1152 x 870 @75Hz
                           : (MacII,Apple)

Standard Timing Identification #1
  Horizontal active pixels : 640
  Aspect Ratio             : 4:3
  Refresh Rate             : 70

Standard Timing Identification #2
  Horizontal active pixels : 800
  Aspect Ratio             : 4:3
  Refresh Rate             : 85

Standard Timing Identification #3
  Horizontal active pixels : 1024
  Aspect Ratio             : 4:3
  Refresh Rate             : 85

Standard Timing Identification #4
  Horizontal active pixels : 1280
```

```
Aspect Ratio              : 5:4
Refresh Rate              : 85

Standard Timing Identification #5
  Horizontal active pixels : 1600
  Aspect Ratio             : 4:3
  Refresh Rate             : 75

Detailed Timing #1
  Pixel Clock (MHz)        : 108.000
  H Active (pixels)        : 1152
  H Blanking (pixels)      : 352
  V Active (lines)         : 900
  V Blanking (lines)       : 43
  H Sync Offset (F Porch) (pixels): 16
  H Sync Pulse Width (pixels) : 64
  V Sync Offset (F Porch) (lines): 2
  V Sync Pulse Width (lines) : 8
  H Image Size (mm)        : 300
  V Image Size (mm)        : 225
  H Border (pixels)        : 0
  V Border (lines)         : 0
  Flags                    : Non-interlaced
                           : Normal Display, No stereo
                           : Digital Separate Sync
                           : Positive V Sync
                           : Positive H Sync

Monitor Descriptor #2
  Serial Number            : CM58C12345678

Monitor Descriptor #3
  Monitor Name             : TYPHOON17A

Monitor Descriptor #4
  Min. Vt rate Hz          : 50
  Max. Vt rate Hz          : 160
  Min. Horiz. rate kHz     : 30
  Min. Horiz. rate kHz     : 95
  Max. Supported Pixel not specified

Extension Flag            : 0

Check sum                  : 5e(hex)
```

## Hex Data of DDC1/2B (17A580BQ/74C)

0: 0	1: ff	2: ff	3: ff	4: ff	5: ff	6: ff	7: 0
8: 41	9: c	10: 7	11: 11	12: 4e	13: 61	14: bc	15: 0
16: 26	17: 7	18: 1	19: 1	20: e	21: 1e	22: 17	23: b9
24: e8	25: 0	26: b9	27: a0	28: 57	29: 49	30: 9b	31: 26
32: 10	33: 48	34: 4c	35: 24	36: 43	37: 80	38: 31	39: 4a
40: 45	41: 59	42: 61	43: 59	44: 81	45: 99	46: a9	47: 4f
48: 1	49: 1	50: 1	51: 1	52: 1	53: 1	54: 30	55: 2a
56: 80	57: 60	58: 41	59: 84	60: 2b	61: 30	62: 10	63: 40
64: 28	65: 0	66: 2c	67: e1	68: 10	69: 0	70: 0	71: 1e
72: 0	73: 0	74: 0	75: ff	76: 0	77: 43	78: 4d	79: 35
80: 38	81: 43	82: 31	83: 32	84: 33	85: 34	86: 35	87: 36
88: 37	89: 38	90: 0	91: 0	92: 0	93: fc	94: 0	95: 54
96: 59	97: 50	98: 48	99: 4f	100: 4f	101: 4e	102: 20	103: 31
104: 37	105: 41	106: a	107: 20	108: 0	109: 0	110: 0	111: fd
112: 0	113: 32	114: a0	115: 1e	116: 5f	117: ff	118: 0	119: a
120: 20	121: 20	122: 20	123: 20	124: 20	125: 20	126: 0	127: 5e



# Hex Data of DDC1/2B (19A580BQ/74C)

19A CM5800

5

Display data channel :DDC1/2B

## Vendor/Product Identification

ID Manufacturer Name : PHL  
ID Product Code : 1109  
ID Serial Number : 12345678  
Week of Manufacture : 36  
Year of Manufacture : 1997

## EDID Version, Revision

Version : 1  
Revision : 1

## Basic Display Parameters/Features

Video Input Definition : Analog Video Input  
0.700V/0.300V (1.00Vpp)  
without Blank-to-Black Setup  
Separate Sync  
Composite Sync  
without Sync on Green  
no Serration required

Maximum H Image Size : 34 cm  
Maximum V Image Size : 25 cm

Display Transfer Characteristic (gamma) : 2.760

Feature Support (DPMS) : Standby  
Suspend  
Active Off  
RGB color display

## Color Characteristics

Red X coordinate : 0.625  
Red Y coordinate : 0.340  
Green X coordinate : 0.285  
Green Y coordinate : 0.605  
Blue X coordinate : 0.150  
Blue Y coordinate : 0.065  
White X coordinate : 0.283  
White Y coordinate : 0.298

## Established Timings

Established Timings I : 640 x 480 @60Hz (VGA,IBM)  
640 x 480 @75Hz (VESA)

Established Timings II : 800 x 600 @75Hz (VESA)  
1024 x 768 @75Hz (VESA)  
1280 x 1024 @75Hz (VESA)

Manufacturer's Timings : 1152 x 870 @75Hz  
(MacII, Apple)

## Standard Timing Identification #1

Horizontal active pixels : 800  
Aspect Ratio : 4:3  
Refresh Rate : 85

## Standard Timing Identification #2

Horizontal active pixels : 1024  
Aspect Ratio : 4:3  
Refresh Rate : 85

## Standard Timing Identification #3

Horizontal active pixels : 1280  
Aspect Ratio : 5:4  
Refresh Rate : 85

## Standard Timing Identification #4

Horizontal active pixels : 1600  
Aspect Ratio : 4:3  
Refresh Rate : 75

## Detailed Timing #1

Pixel Clock (MHz) : 202.500  
H Active (pixels) : 1600  
H Blanking (pixels) : 560  
V Active (lines) : 1200  
V Blanking (lines) : 50  
H Sync Offset (F Porch) (pixels) : 304  
H Sync Pulse Width (pixels) : 192  
V Sync Offset (F Porch) (lines) : 46  
V Sync Pulse Width (lines) : 3  
H Image Size (mm) : 340  
V Image Size (mm) : 255  
H Border (pixels) : 0  
V Border (lines) : 0  
Flags : Non-interlaced  
Normal Display, No stereo  
Digital Separate Sync  
Positive V Sync  
Positive H Sync

## Monitor Descriptor #2

Serial Number : 5800C12345678

## Monitor Descriptor #3

Monitor Name : TYPHOON19A

## Monitor Descriptor #4

Min. Vt rate Hz : 50  
Max. Vt rate Hz : 160  
Min. Horiz. rate kHz : 30  
Min. Horiz. rate kHz : 95  
Max. Supported Pixel not specified

Extension Flag : 0

Check sum : 5e(hex)

## Hex Data of DDC1/2B (19A580BQ/74C)

For Hitachi CRT

0: 0	1: ff	2: ff	3: ff	4: ff	5: ff	6: ff	7: 0
8: 41	9: c	10: 9	11: 11	12: 4e	13: 61	14: bc	15: 0
16: 24	17: 7	18: 1	19: 1	20: c	21: 22	22: 19	23: b0
24: e8	25: 0	26: b9	27: a0	28: 57	29: 49	30: 9b	31: 26
32: 10	33: 48	34: 4c	35: 24	36: 43	37: 80	38: 45	39: 59
40: 61	41: 59	42: 81	43: 99	44: a9	45: 4f	46: 1	47: 1
48: 1	49: 1	50: 1	51: 1	52: 1	53: 1	54: 1a	55: 4f
56: 40	57: 30	58: 62	59: b0	60: 32	61: 40	62: 30	63: c0
64: e3	65: 48	66: 54	67: ff	68: 10	69: 0	70: 0	71: 1e
72: 0	73: 0	74: 0	75: ff	76: 0	77: 35	78: 38	79: 30
80: 30	81: 43	82: 31	83: 32	84: 33	85: 34	86: 35	87: 36
88: 37	89: 38	90: 0	91: 0	92: 0	93: fc	94: 0	95: 54
96: 59	97: 50	98: 48	99: 4f	100: 4f	101: 4e	102: 20	103: 31
104: 39	105: 41	106: a	107: 20	108: 0	109: 0	110: 0	111: fd
112: 0	113: 32	114: a0	115: 1e	116: 5f	117: ff	118: 0	119: a
120: 20	121: 20	122: 20	123: 20	124: 20	125: 20	126: 0	127: 8e



**a: Service DDC Kit**

DDC Module (DDC cable), Part number = 4822 320 12004

DDCV2N.EXE software (3.5" disk), Part number = 4822 711 00024

**b: Please refer to Service Information 4822 727 21995 for using the Service DDC Kit.**

## Warnings

1. Safety regulations require that the unit should be returned in its original condition and that components identical to the original components are used. The safety components are indicated by the symbol .
2. In order to prevent damage to ICs and transistors, all high-voltage flash-overs must be avoided. In order to prevent damage to the picture tube, the method shown in Fig. 1 should be used to discharge the picture tube. Use a high-voltage probe and a multimeter (position DC-V). Discharge until the meter reading is 0 V (after approximately 30 seconds).
3. **ESD**  All ICs and many other semiconductors are sensitive to electrostatic discharges (ESD). Careless handling during repair can drastically shorten their life. Make sure that during repair you are connected by a pulse band with resistance to the same potential as the ground of the unit. Keep components and tools also at this same potential.
4. When repairing a unit, always connect it to the AC Power voltage via an isolating transformer.
5. Be careful when taking measurements in the high-voltage section and on the picture tube panel.
6. It is recommended that safety goggles be worn when replacing the picture tube.
7. When making adjustments, use plastic rather than metal tools. This will prevent any short-circuit or the danger of a circuit becoming unstable.
8. Never replace modules or other components while the unit is switched on.
9. Together with the deflection unit, the picture tube is used as an integrated unit. Adjustment of this unit during repair is not recommended.
10. After repair, the wiring should be fastened in place with the cable clamps.

## Notes

1. The direct voltages and waveforms are average voltages. They have been measured using the Service test software and under the following conditions :
  - Mode : 1024 \* 768 (56.5kHz / 70Hz)
  - Signal pattern : grey scale
  - Adjust brightness and contrast control for the mechanical mid-position (click position)
2. The picture tube panel has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.
3. The semiconductors indicated in the circuit diagram(s) and in the parts lists are completely interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.

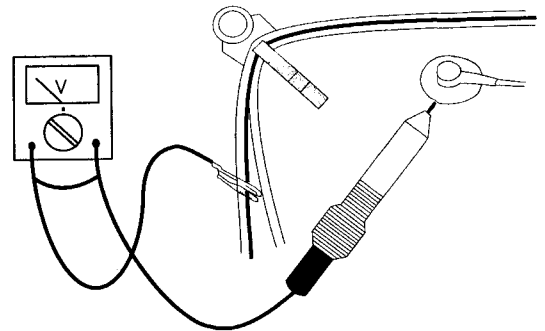


Fig.1

# Electrical Adjustments

## 0. General

When carry-out the electrical settings in many cases a video signal must be applied to the monitor. A computer with :

- ATI GPT-1600 (4822 397 10065), Mach 64 (up to 107kHz)

are used as the video signal source. The signal patterns are selected from the "service test software" package, see user guide 4822 727 21046 (GPT-1600).

0.1 This monitor has 12 factory-preset modes as below.

640 x 400 31.5 kHz/70 Hz	1152 x 870 68.7 kHz/75 Hz
640 x 480 31.5 kHz/60 Hz	1152 x 900 71.8 kHz/76 Hz
640 x 480 37.5 kHz/75 Hz	1280 x 1024 80.0 kHz/75 Hz
800 x 600 46.9 kHz/75 Hz	1280 x 1024 91.1 kHz/85 Hz
800 x 600 53.7 kHz/85 Hz	1600 x 1200 93.7 kHz/75 Hz
1024 x 768 60.0 kHz/75 Hz	
1024 x 768 68.7 kHz/85 Hz	

0.2 With normal VGA card:

If not using the ATI card during repair or alignment, The service engineer also can use this service test software adapting with normal standard VGA adaptor and using standard VGA mode 640 x 480, 31.5 kHz/60 Hz (only) as signal source.

0.3 AC/DC Measurement:

The measurements for AC waveform and DC figure is based on 640 x 480 31.5 kHz/60 Hz resolution mode with test pattern "gray scale".  
Power input: 110V AC

### 1. B+ supply voltage (3194) 185Vdc

- Apply a video signal in the 1024 x 768 with 69 kHz/85Hz mode.
- Select the "cross-hatch" pattern.
- Set the brightness control and the contrast control to the minimum position.
- Pre-set trimming potentiometer 3194(+) and 3644(EHT) in mid-position.
- Set Vg2 (screen) to fully Counter-clockwise (zero beamcurrent).
- Connect a dc voltmeter between the joint of capacitor 2181 and ground (common ground).
- Set the B+ trimming potentiometer 3194 so that the reading on the dc voltmeter is 185 V +/- 0.5 Vdc.

### 2. High-voltage EHT (3644)

- Apply a video signal in the 1024 \* 768 with 69 kHz/85Hz mode.
- Select the "cross-hatch" pattern.
- Set the brightness control and the contrast control to the minimum position.
- Turn off the power.
- Connect a "high-voltage voltmeter" between the high-voltage connection of the picture tube and earth.
- Turn on the power.
- Set the EHT trimming potentiometer 3644 so that the "high-voltage voltmeter" reads 26.0 kV +/- 0.2 kV (for 19").  
25.0 kV +/- 0.2 kV (for 17").
- Turn off the power.
- Remove the "high-voltage voltmeter" from the picture tube.
- Turn on the power again.
- Remove the "high-voltage voltmeter" from the picture tube.
- Turn on the power again.

### 3. Monitor the following auxiliary voltages.

- + 12.0V SOURCE ACROSS C2192 + 12.0V +/- 0.5VDC.
- + 15.0V SOURCE ACROSS C2187 + 15.0V +/- 1.0VDC.
- 15.0V SOURCE ACROSS C2189 - 15.0 V +/- 1.0VDC.
- + 6.3 V SOURCE ACROSS D6195 "-" 6.3V +/- 0.5VDC.
- +125.0V SOURCE ACROSS C2182 +125.0V +/- 2.0VDC.
- +185.0V SOURCE ACROSS C2181 + 185.0V +/- 1.5VDC.
- + 81.0V SOURCE ACROSS C2185 + 81.0 V +/- 2.0VDC.

## 4. General conditions for alignment

- 4.1 During all alignments, supply a distortion free AC mains voltage to set via an isolating transformer with low internal impedance.
- 4.2 Align in pre-warmed condition, at least 30 minutes warm-up with nominal picture brightness.
- 4.3 Purity, geometry and subsequent alignments should be carried out in magnetic cage with correct magnetic field.

Northern hemisphere : H=0, V=430 mG, Z=0  
Southern hemisphere : H=0, V=-520 mG, Z=0  
Equatorial Support : H=0, V=0 mG, Z=0

- 4.4 All voltages are to be measured or applied with respect to ground.

**Note: Do not use heatsink as ground.**

- 4.5 Adjust function controls " " to center position except for contrast control which should be set to MAX.
- 4.6 Apply a video signal in the 1280 x 1024 with 64kHz/60Hz mode, select cross hatch pattern, set the Brightness for visible raster, adjust H-size for 340mm (19" monitor)/300mm (17" monitor) "raster width", adjust R3551 for Horizontal raster center.

## 5. To access factory mode:

 
- Turn off monitor (don't turn off PC)
  - Press " " and " " simultaneously on the front control panel, untill the OSD menu with characters " factory mode (below OSD menu)" come on the screen of monitor.
  - If OSD menu disappears on the screen of monitor, press " " again (anytime), then the OSD menu comes on the screen again.
  - using " " : to select OSD menu.  
: to increase or decrease the setting.
- (Please also refer to page 4,5,6 and 7 for OSD adjustment)
- Using " " to confirm the selection.

### 5.1. To leave factory mode

\* After alignment of factory mode, turn off monitor (if you do not turn off monitor, the OSD menu is always at the factory mode), then turn on monitor again (at this moment, the OSD menu goes back to user mode).

## 6. OSD CONTROLS (During alignment)

During alignment, please use the "OSD controls" to keep OSD menu, or to shift OSD menu as below.



- ⏪ **TIMER** Set OSD display time, select "OFF", then the OSD menu will stay on the screen (won't disappear).
- ⬆ **VERTICAL POSITION** Move the OSD windows up or down.
- ⬅ **HORIZONTAL POSITION** Move the OSD window left or right.

## USB Connections

### If you have Windows '95...

follow these steps to complete setting up your monitor.

1. Start Windows '95 and install CD ROM supplied with this monitor.
2. Click on the "START" icon. Next, click on the "SETTINGS" icon. Then click on "CONTROL PANEL."
3. Double-click on "DISPLAY" icon. Next, click on "SETTINGS" tab. Then click on "ADVANCED PROPERTIES" dialog box.
4. Click on "MONITOR" tab.
- 5.(a) If you have an old computer, click on "CHANGE" dialog box. Next, "SELECT DEVICE" screen appears. Now click on "HAVE DISK" dialog box. and select CD-ROM drive  
Or
- 5.(b) If you have a new computer, "SELECT DEVICE" screen automatically appears. Click on "HAVE DISK" dialog box and select CD-ROM drive.
6. Select "OK" in the "INSTALL FROM DISK" dialog box. If model name of the Philips monitor is correct, click "OK" tab in the "SELECT DEVICE" dialog box.
7. Click "CLOSE" tab in the "ADVANCED PROPERTIES" dialog box. If your Windows'95 version is different or you need more detailed installation information, please refer to the windows '95 user's manual. **For additional information on the monitor, please refer to the owner's manual.**




### USB CONNECTIONS

USB (Universal Serial Bus ) is an innovation in connecting your IBM- compatible computer to your monitor. By using the USB, you will be able to connect your keyboard, mouse, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. Plus, you will have true plug-and-play capability. While the software is still being developed, Philips has included the hardware so you will be ready to take advantage of this next generation in computer development.

For an IBM-compatible Computer:

1. Turn off the computer.
2. Connect the (optional) USB Hub and cable to the computer and to the monitor. (Computer must have USB port.)
3. Connect the power cable.
4. Turn on the monitor. Then turn on the computer.
5. With the installation of the correct software, you will be able to connect specially-made peripherals to the monitor.

Note : USB Hub and cables sold separately. USB Bay exists in back of monitor.

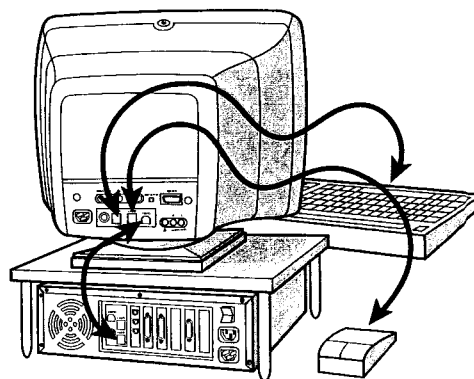

## Use the information file (philips.inf) for Windows'95 (Philips Monitors-Driver Disk)

Philips' monitors build in VESA DDC1/2B feature to support Plug & Play requirement for Windows'95. You can install this information file (philips.inf) in order to select your Philips monitor from "Monitor" dialog box in Windows 95 to activate Plug & Play application. The installation procedure based on Windows '95 OEM Release 2 is specified as follows,

1. Start Windows'95
2. Click the 'Start' button, point to 'Settings', and then click 'Control Panel'
3. Double-click the 'Display' icon, select the 'Settings' tab, then select "Advanced Properties" tab.
4. Select "Ok" in the "Install From Disk" dialog box.
5. Now, you can see the Philips monitor is appeared.
6. If the model name of Philips monitor is correct, click "Ok" tab in "Select Device" dialog box.
7. Then, click "Close" tab in "Advanced Properties" dialog box.
8. Now, you can select "Refresh Rate" to change monitor resolution

If your Windows'95 version is different or you need more detail installation information, please refer to Windows 95 user's manual.

## 7. Alignment of Vg2 cut-off point, white tracking (OSD control)

Equipment : 1. Video Test Generator-801GC (Quantum Data)  
2. Color-analyzer (Minolta CA-100)

VG2 [(screen), at the bottom of the L.O.T.].

- \* Apply a video signal in the 1024 x 768 with 69 kHz/85 Hz mode, select the "full white pattern".
- \* Use color-analyzer (Minolta CA-100) to adjust cutoff and white uniformity.

OSD R/G/B cut-off and R/G/B gain can be accessed, with initial data:

R cutoff = 50%, R gain = 70%  
G cutoff = 50%, G gain = 70%  
B cutoff = 50%, B gain = 70%

Step 1: To select the character "FACTORY MODE" as shown in Fig. 2.1, press " " to access the OSD menu for R/G/B gain & cutoff as shown in Fig. 2.2.

Step 2: Use " " to increase or decrease the value as shown in Fig. 2.3.

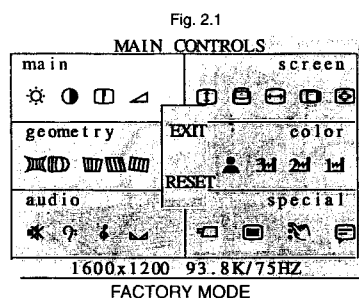


Fig. 2.1

	GAIN	CUTOFF
9300K	R G B	R G B
6500K	R G B	R G B
5500K	R G B	R G B
FULL-SIZE	HOR	VER
H-LIN		

Fig. 2.2

	GAIN	CUTOFF
9300K	R G B	R G B
6500K	R G B	R G B
5500K	R G B	R G B
FULL-SIZE	HOR	VER
H-LIN		63%

Fig. 2.3

- 7.1 Connect the video input, set brightness control at 50% and contrast at minimum position, Vg2 at Minimum (counter clockwise, and ABL (3647, potentiometer) at center position. Slowly increase Vg2 voltage until light output is at 0.17Ft-L +/- 0.05Ft-L (Y=0.17Ft-L, on the screen of CA-100).

7.2 (The screen of monitor is dark now)

- : Press " " to show the OSD menu as shown in Fig. 2.1.
- : Select the character "FACTORY MODE" to access the R/G/B adjustment as shown in Fig. 2.2 and Fig. 2.3.
- : Adjust the cutoff of R/G/B to get 9300K (x=0.281 +/- 0.015, y=0.311 +/- 0.015), and brightness output at 0.17 +/- 0.05 Ft-L (Y=0.17Ft-L).

7.3 : Press " " to set contrast at maximum (100%).

- : Adjust gain of R/G/B to get 9300K (x=0.281 +/- 0.015, y=0.311 +/- 0.015, don't care about the Y value)

7.4 Apply a small white square 60 x 60 mm pattern, or 8% fill of full screen, brightness set to center (50%), and contrast at maximum (100%), adjust gain control (OSD) to reach 34 +/- 2 Ft-L.

7.5 : Select the 6500K colour temperature as shown in Fig. 2.2.

- : Adjust the R/G/B cutoff and R/G/B gain as shown in procedure 7.2~7.4 to get R/G/B cutoff x= 0.313 +/- 0.015 y= 0.329 +/- 0.015 Y= 0.17 +/- 0.05 Ft-L
- R/G/B gain x= 0.313 +/- 0.015 y= 0.329 +/- 0.015 Y= 30 +/- 2 Ft-L

- 7.6 : Select the 5500K colour temperature as shown in Fig. 2.2.  
: Adjust the R/G/B cutoff & R/G/B gain as procedure 7.2~7.4

to get R/G/B cutoff x= 0.332 +/- 0.015 y= 0.347 +/- 0.015 Y= 0.17 +/- 0.05 Ft-L  
R/G/B gain x= 0.332 +/- 0.015 y= 0.347 +/- 0.015 Y= 25 +/- 2 Ft-L

7.7 Apply full white pattern at 9300K, adjust ABL R3647 to reach 31 +/- 2 Ft-L (19" contrast at maximum, brightness at center). 30 +/- 2 Ft-L (for 17" monitor).

## 8. Picture geometry setting (factory pre-set modes)

- Apply a video signal with cross-hatch pattern.
- Apply a video signal in the 1024 x 768 with 69 kHz/85 Hz mode.
- Set brightness and contrast controls to their center positions (OSD control).

8.1 Horizontal geometry (OSD control)

- Adjust the H-width to 340 mm (for 19" monitor). 300 mm (for 17" monitor).
- Adjust the H-phase to center position.

8.2 Vertical geometry (OSD control)

- Adjust vertical size to 255 mm (for 19" monitor). 225 mm (for 17" monitor).
- Adjust V-phase to center position.

8.3 Trapezoid distortion (OSD control)

- Adjust the trapezoid to get optimal vertical lines.

8.4 Pincushion (OSD control)

- Adjust the pincushion to get optimal vertical line.

8.5 Parallelogram (OSD control)

- Adjust parallelogram so that vertical lines are vertical or symmetrically about the center vertical axis.

8.6 Unbalance-pin (OSD control)

- Adjust the unbalance-pin so that that vertical border lines are aligned symmetrically.

8.7 Rotation (OSD control)

- Adjust picture so that vertical tilt is less than +/- 0.5mm.

8.8 Store the preset results by selecting the "exit" (OSD control).

8.9 Repeat the procedure 8.1 to 8.8 until all the preset timings have been adjusted completely

## 9. Focus adjustment

- : Apply a video signal in the 1024 x 768 with 69 kHz/85 Hz mode.
- : Select "ME" pattern.
- : Set the brightness at center (50%) and the contrast at maximum (100%).
- : Adjust focus potentiometers (top of L.O.T.) Focus 1 for horizontal focus and Focus 2 for vertical focus so that the picture at 2/3 of the diagonal lines (from center to four corners) of the displayed screen is as sharp as possible.

## 10. Loading DDC code

The DDC HEX data should be written into the DDC IC (7331) by EEPROM writer or equivalent method.


a: Service DDC Kit



DDC Module (DDC cable), Part number = 4822 320 12004

DDCV2N.EXE software (3.5" disk), Part number = 4822 711 00024

b: Please refer to Service information 4822 727 21995 for using the Service DDC Kit.


# Quick Reference for OSD Adjustment


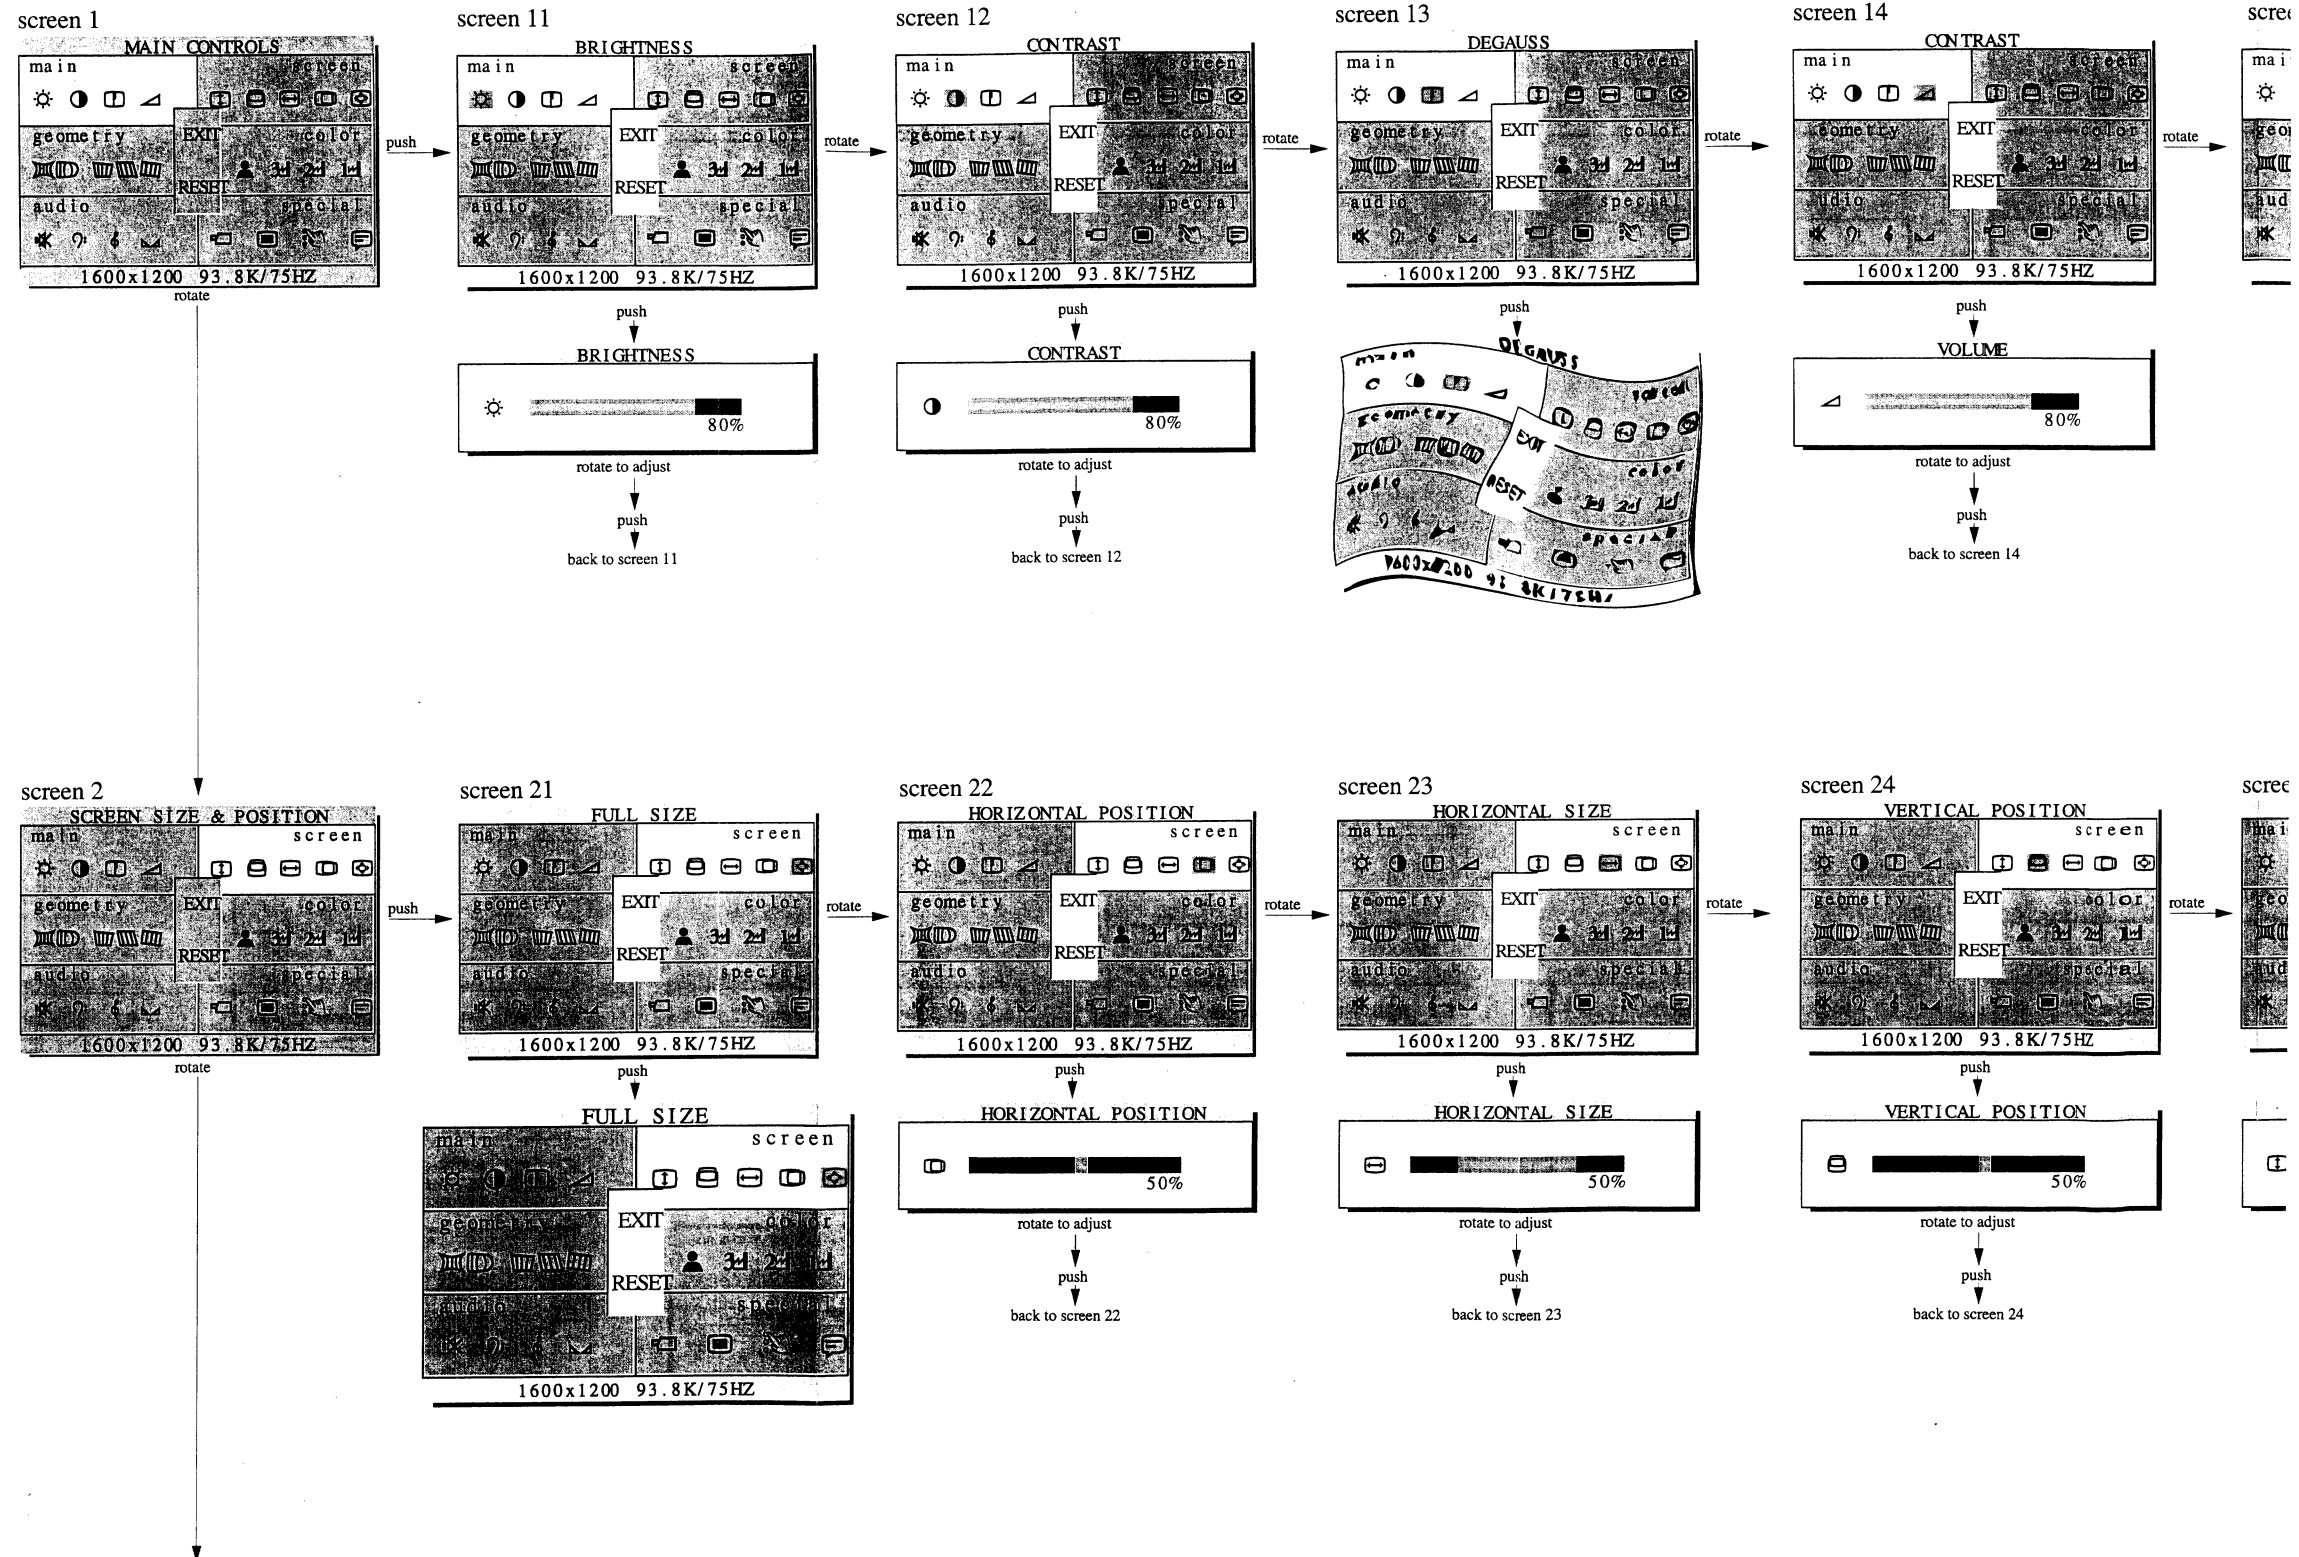


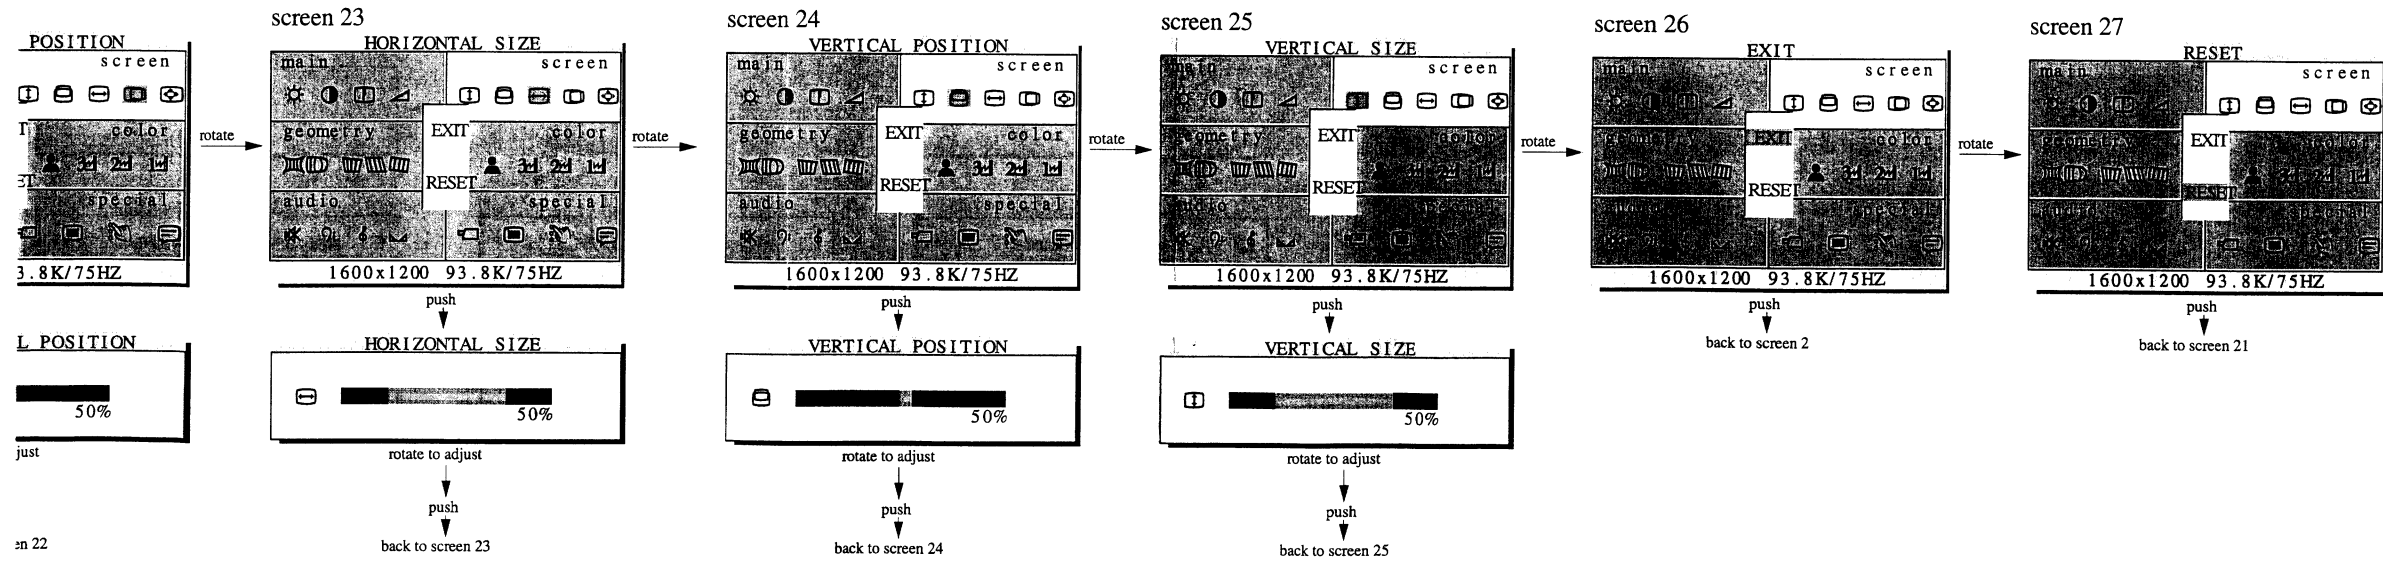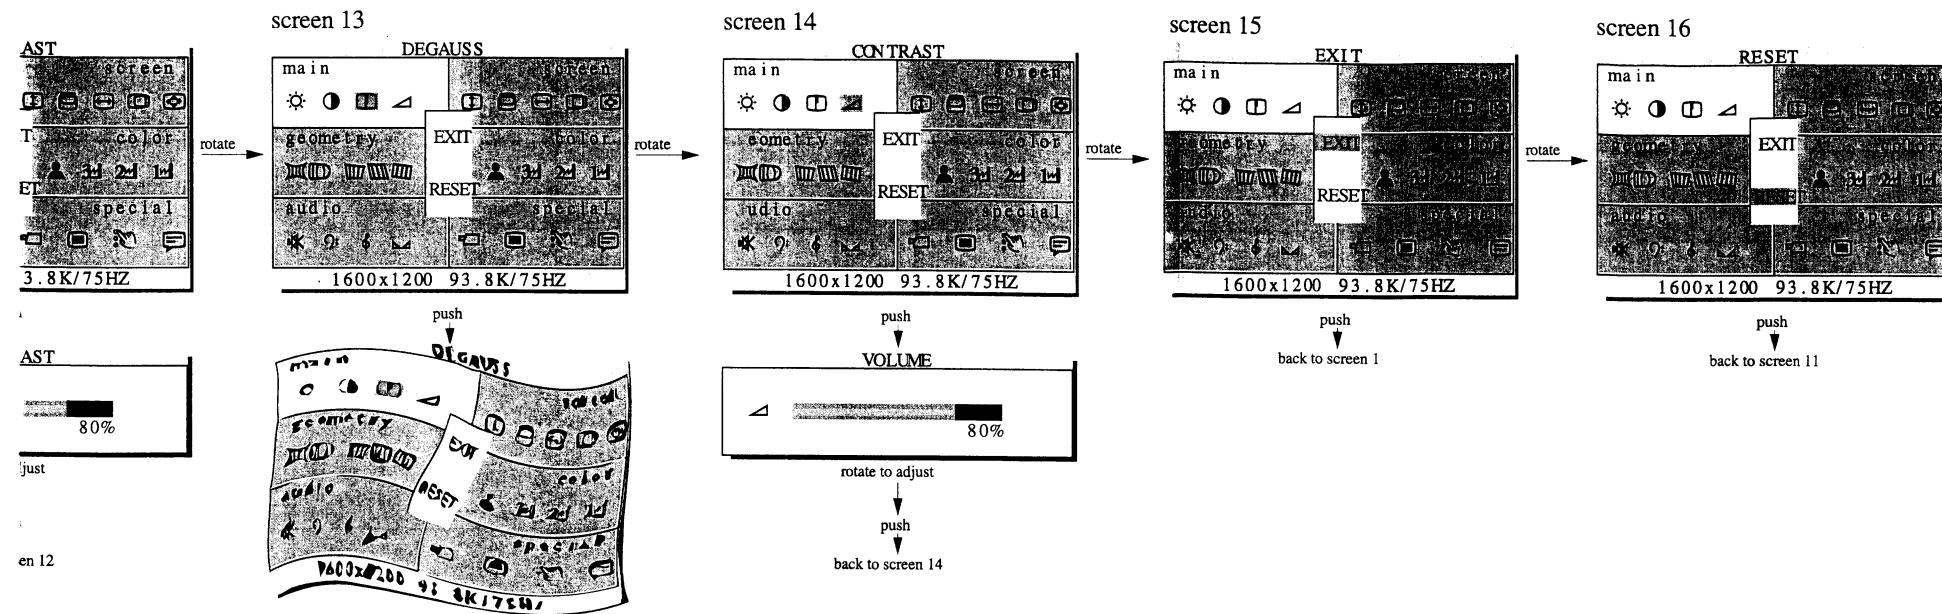






# Quick Reference for OSD Adjustment (Continued)

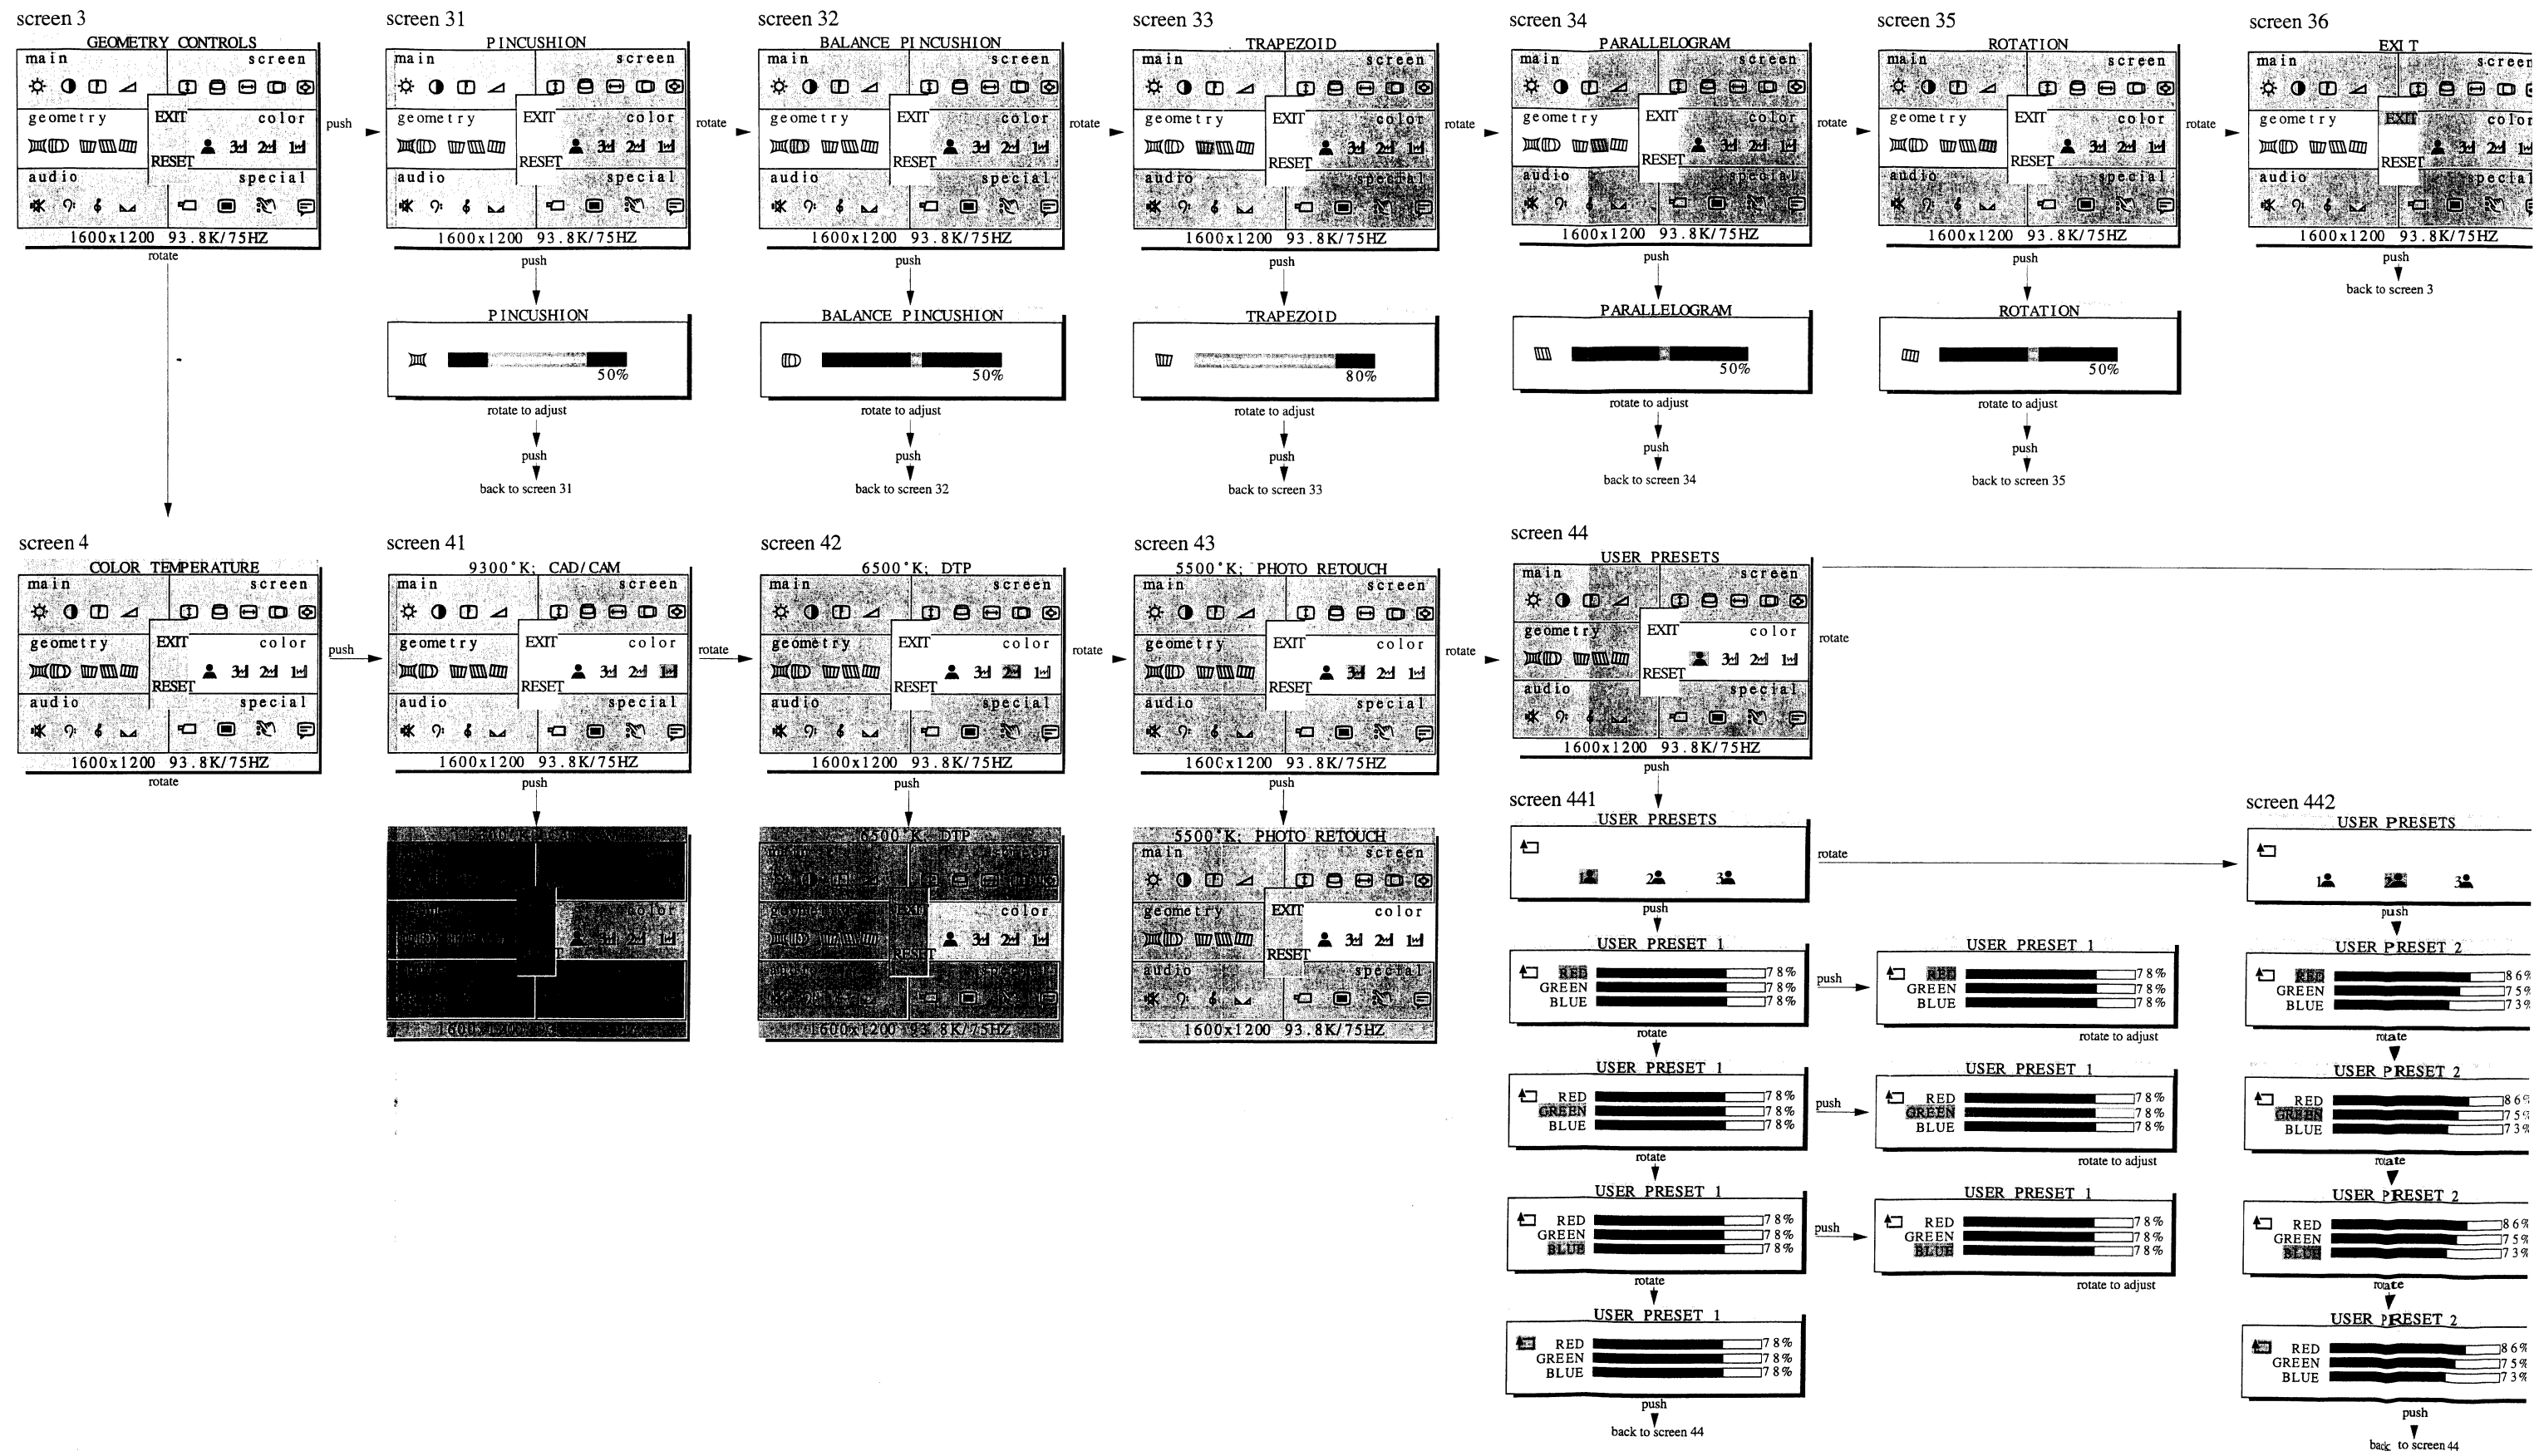

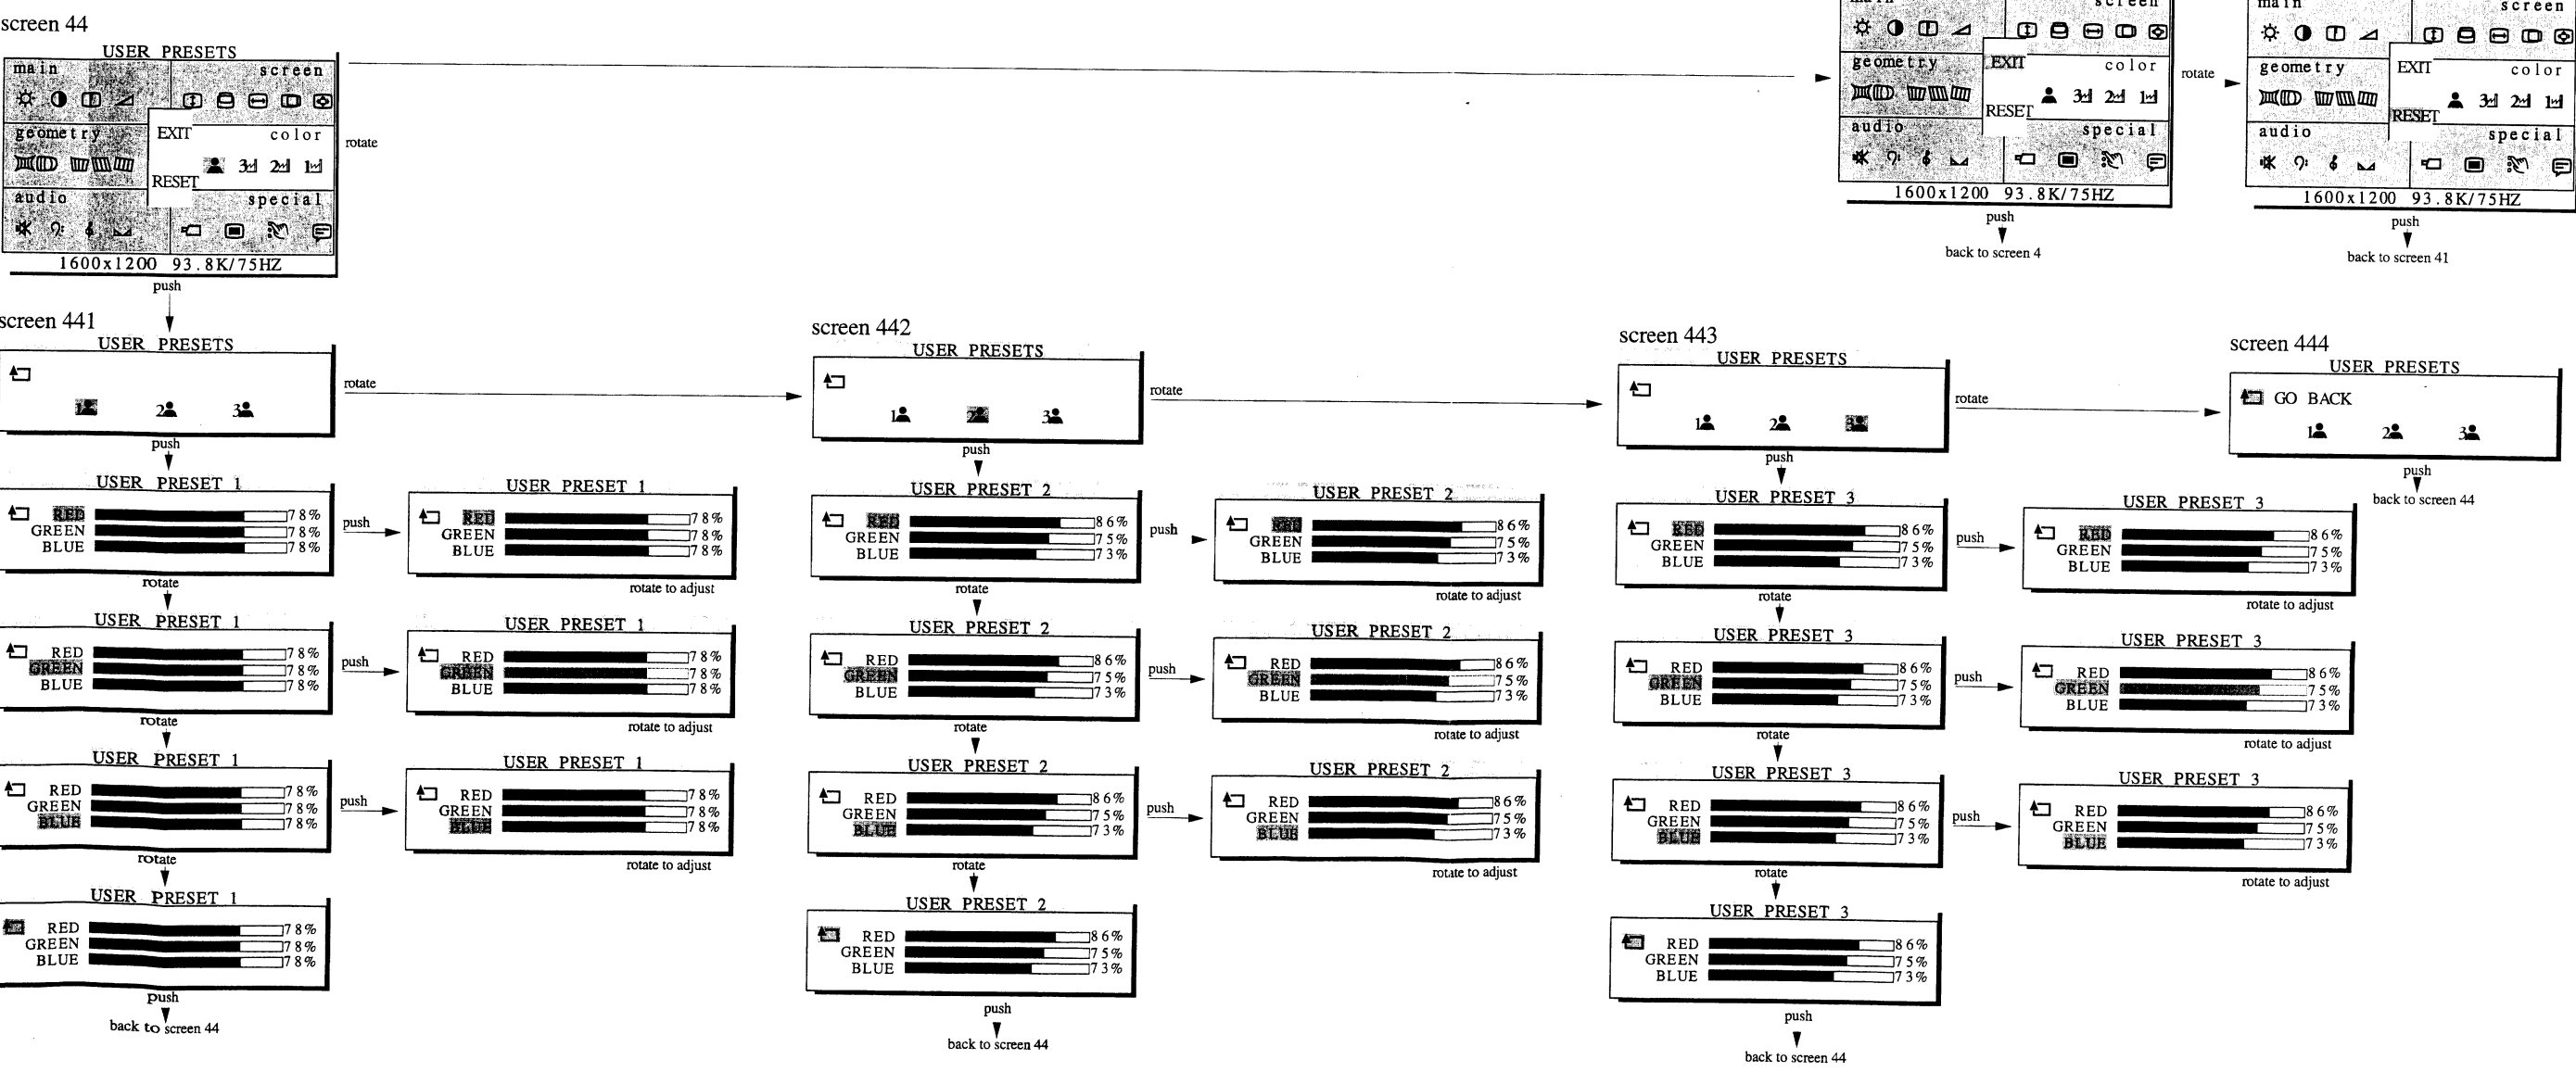
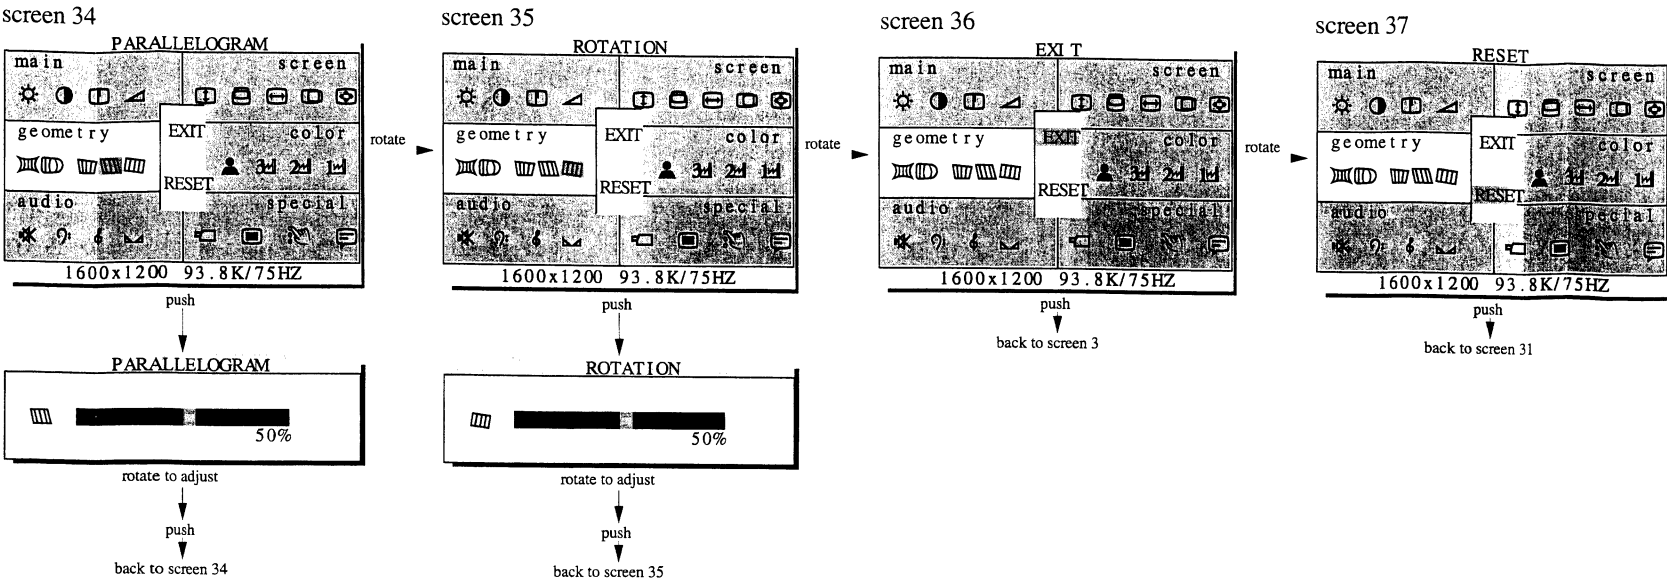


Quick Reference for OSD Adjustment (Continued)

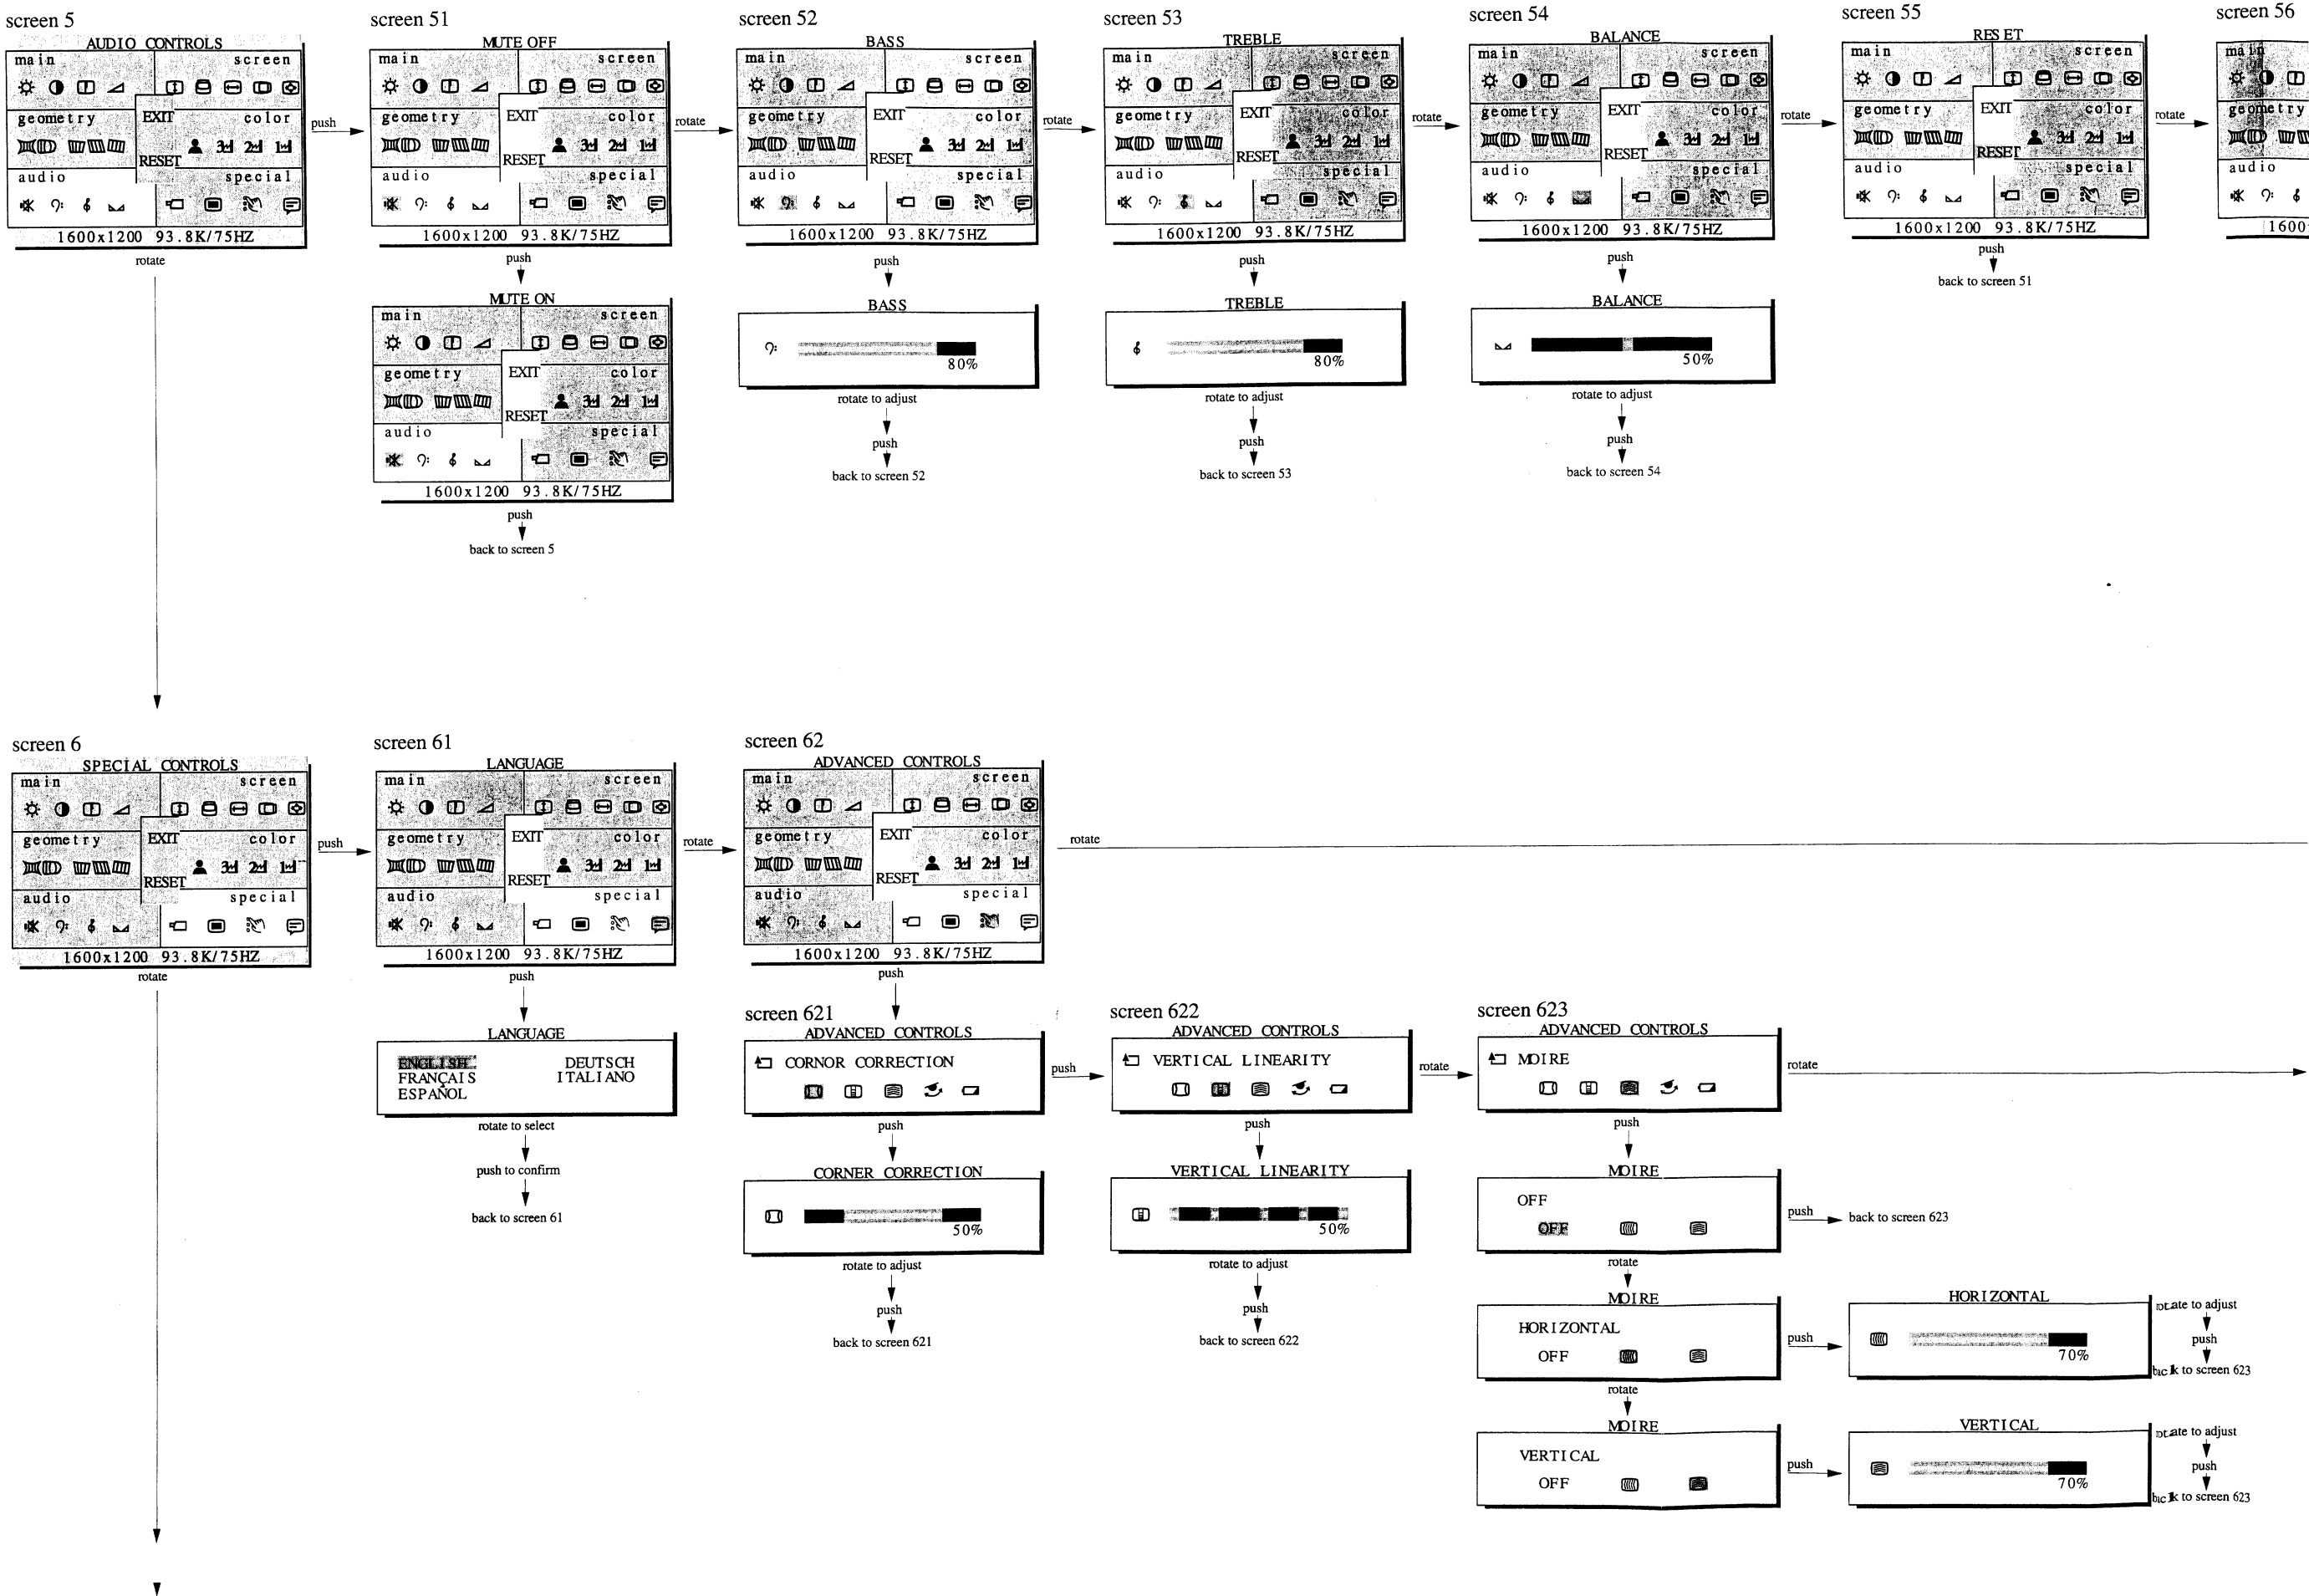


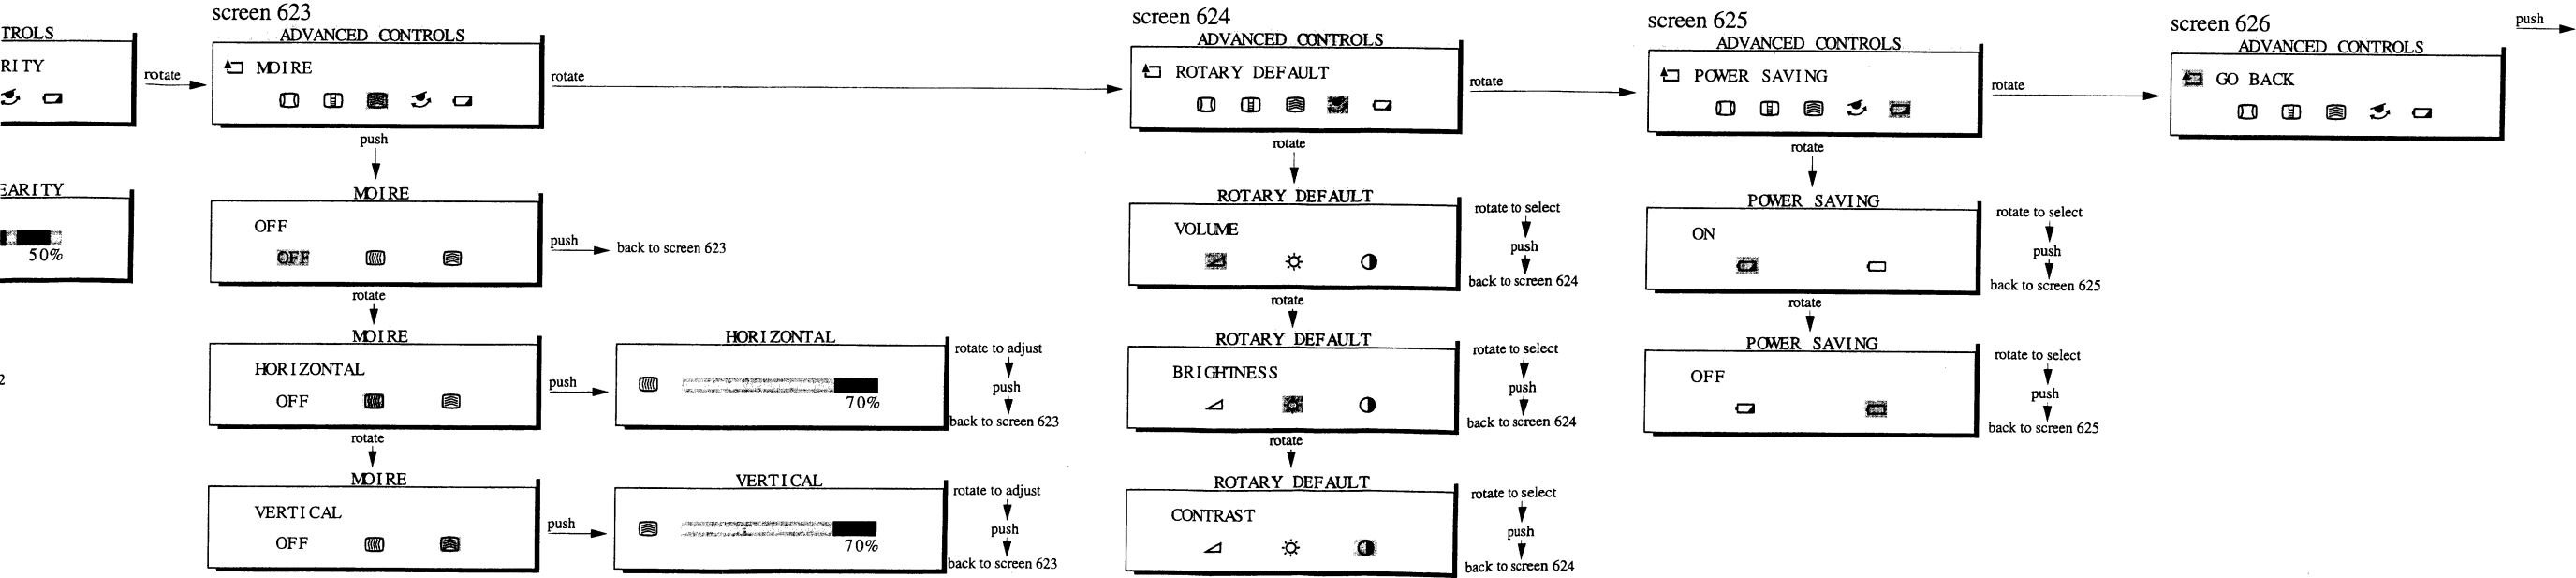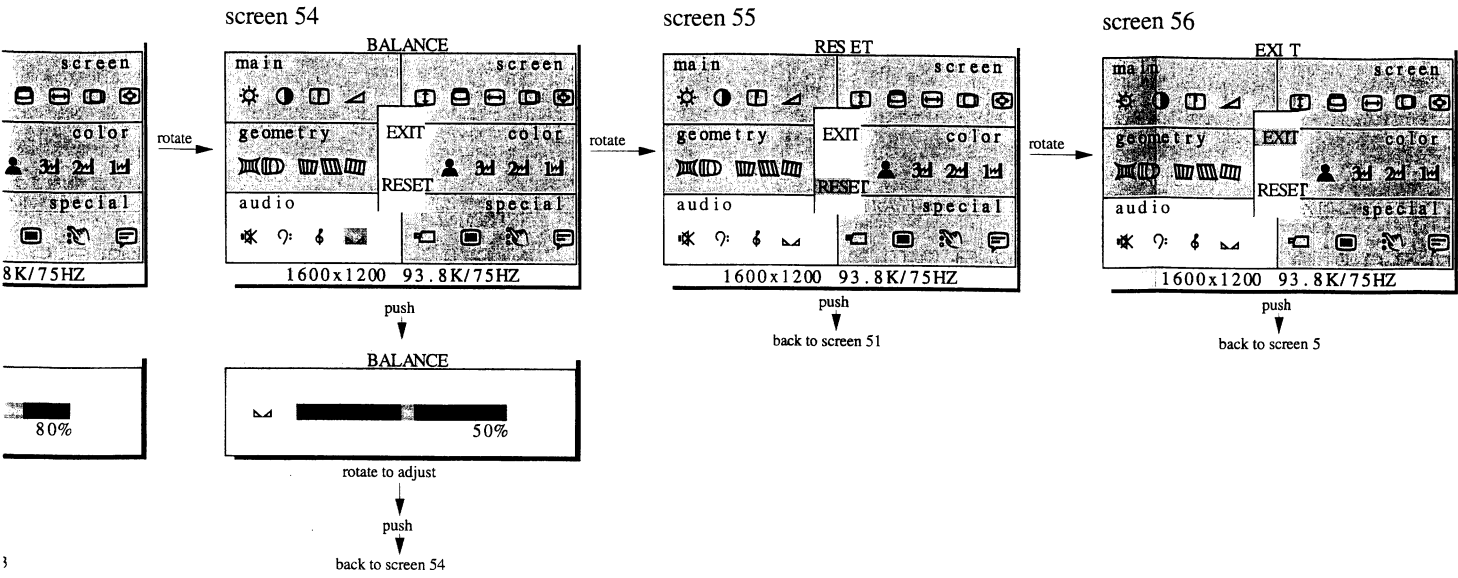

# Quick Reference for OSD Adjustment (Continued)

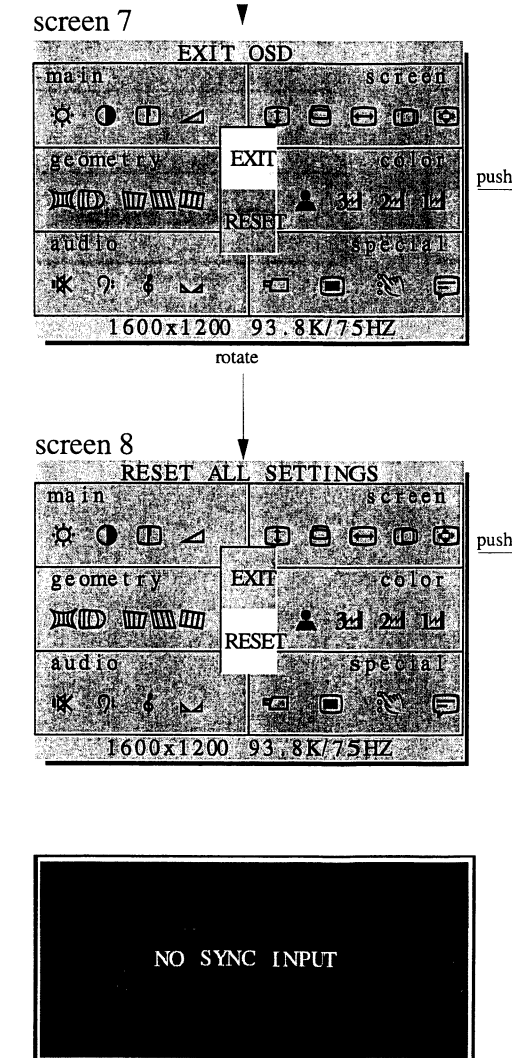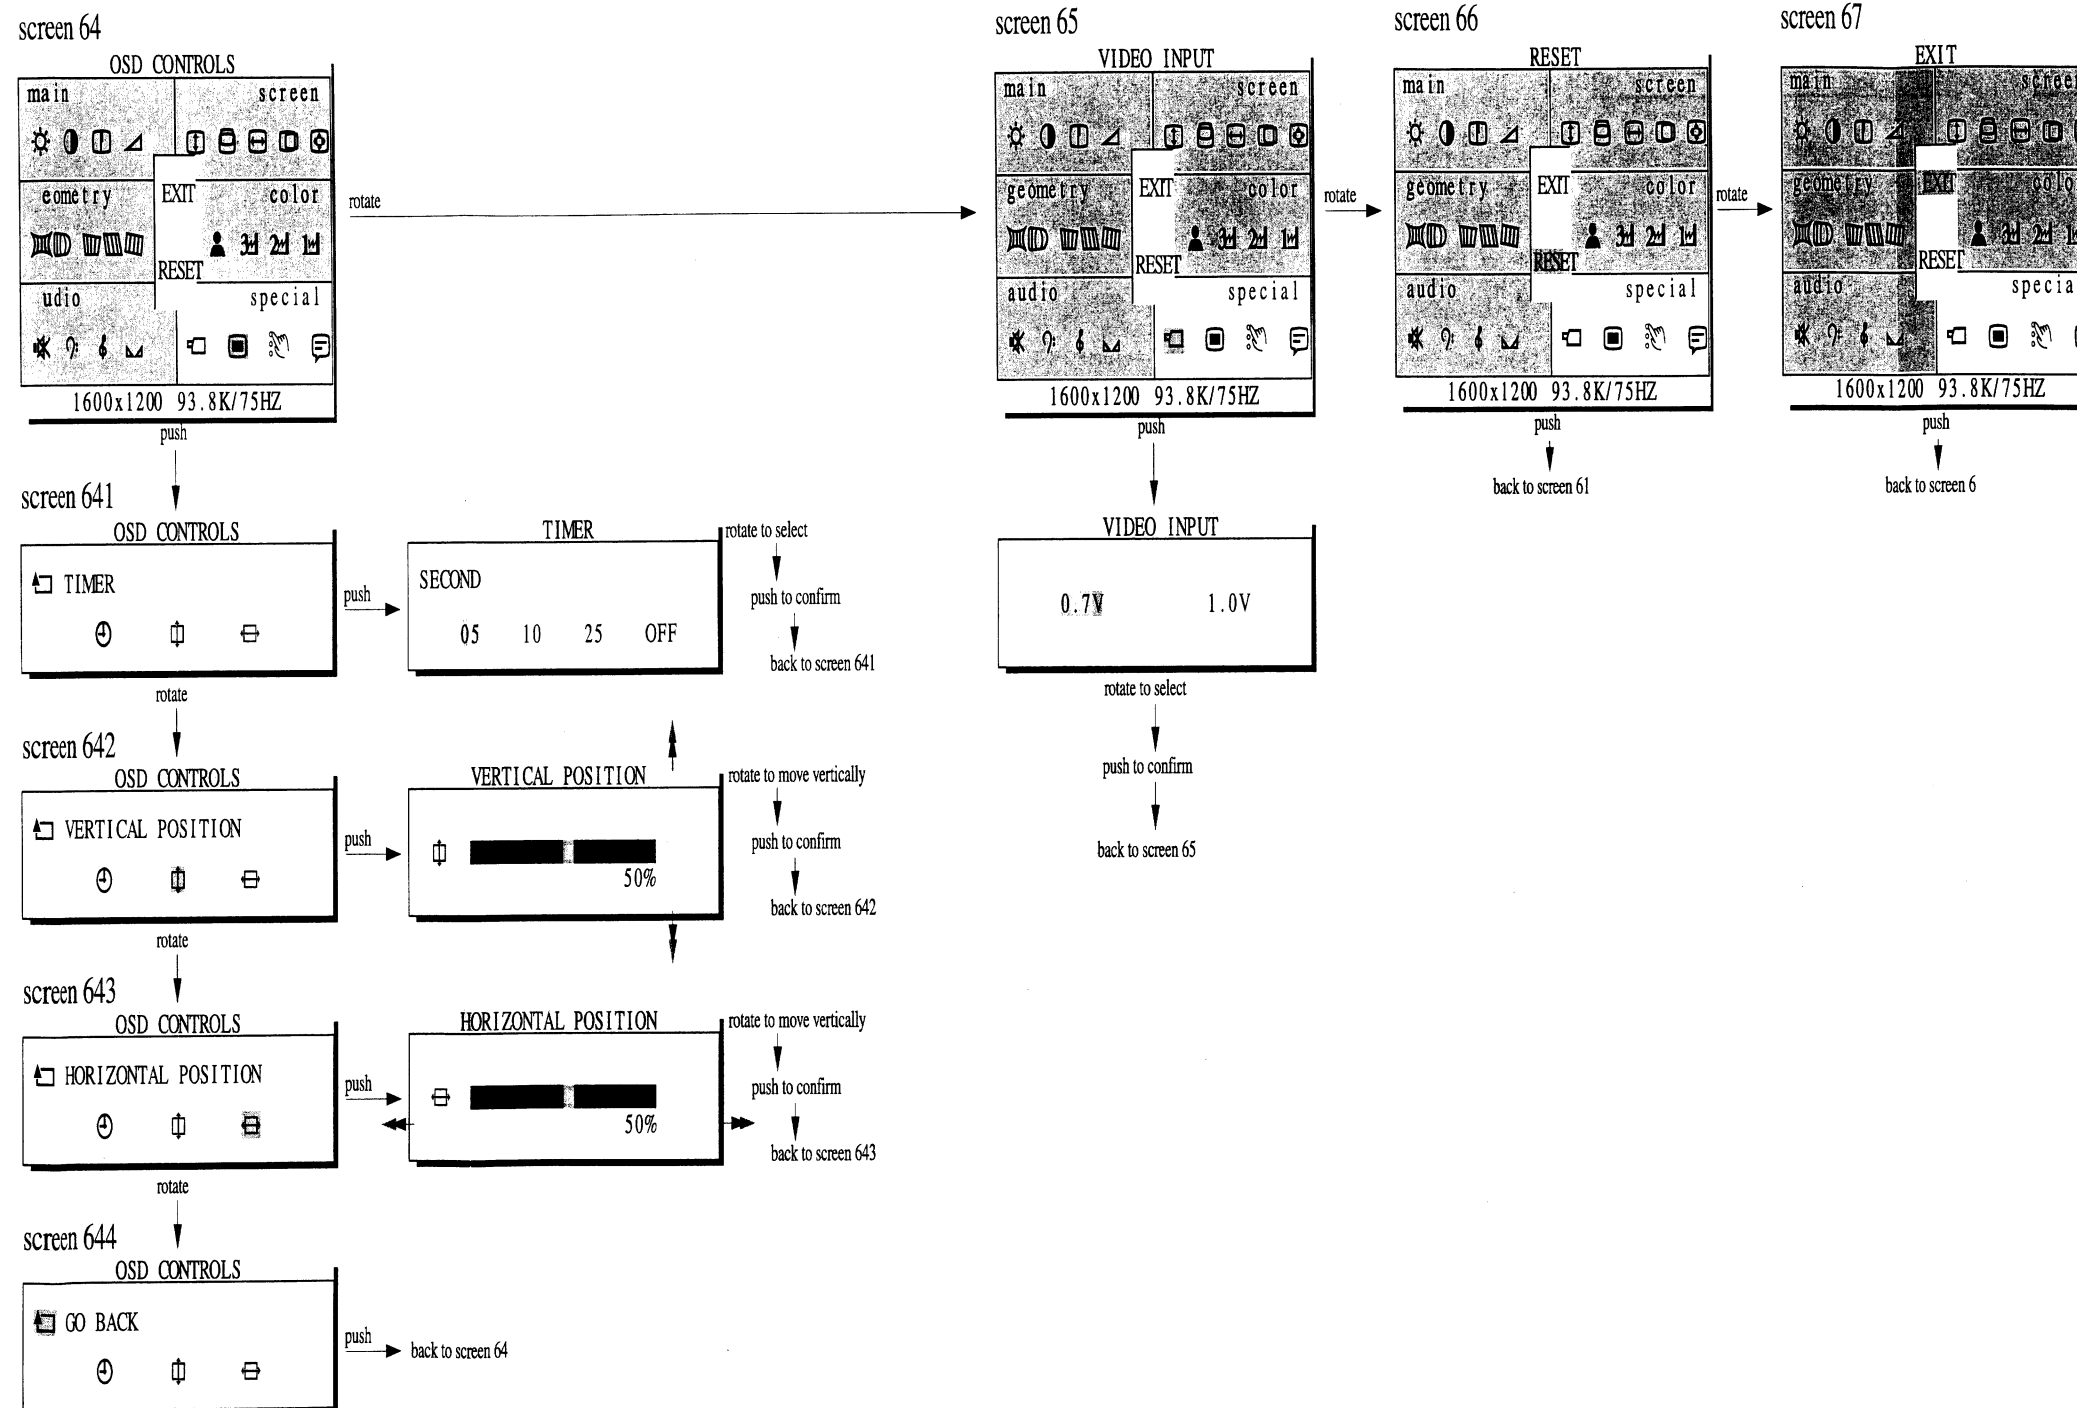


een 67

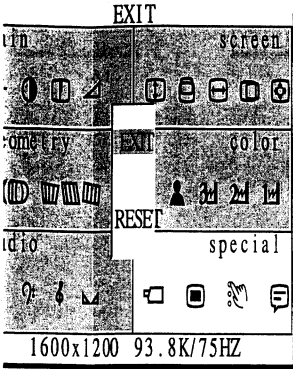


back to screen 6

screen 7

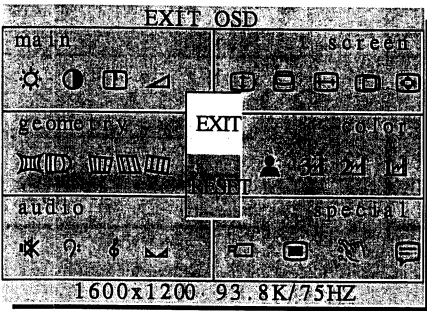


push → exit OSD


screen 8

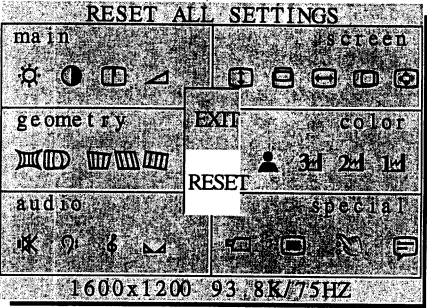




push →

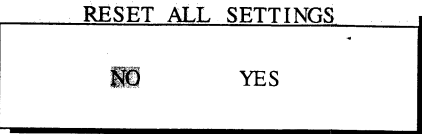

push → back to screen 1

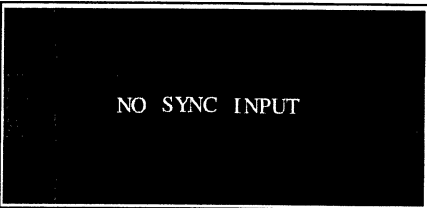

"When rotary default setting selected"

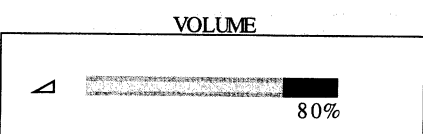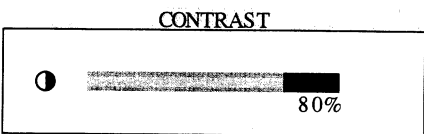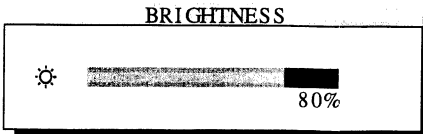



# Mechanical Adjustments

## 0. Location of the panel

- 0.1 Main panel (1156)
- 0.2 Video panel (1157)
- 0.3 Earphone panel (1158)
- 0.4 Terminal panel (1159)
- 0.5 USB panel (1160) - optional
- 0.6 Encoder panel (1162)
- 0.7 Power switch panel (1163)

## 1. General

To be able to perform measurements and repairs on the circuit boards, the monitor should be placed in **Service Position (Fig. 3.1)** first:

*How to remove the back cover of monitor :*

There are 4 screws [2 screws are at the rear of the monitor, the other two screws are on the bottom of the monitor] to fix the front cabinet and back cover of the monitor.

Step 1: Remove the "cable cover" as shown in Fig. 3.2.

Step 2: Remove 2 screws (rear view) as shown in Fig. 3.3.

Step 3: Turn the set to remove the other 2 screws, as shown in Fig. 3.4 .

Step 4: Turn the set to its original position.

Step 5: Remove back cover (\* There are two "plastic clips" on the "front cabinet" to hold the "rear cover" as shown in Fig. 3.5).

*Chassis :*

After removing the back cover, you can see the inside the monitor with metal frame and metal shield.

- Remove 26 screws for service position as Fig. 3.6 to Fig. 3.15.

## Video panel :

- After removing the metal frames, remove the metal shielding on rear side of Video panel for measurement.

## Main panel :

After removing the metal frames,

- Disconnect "Video panel"
- Disconnect EHT cable (EHT cap)
- Disconnect 4 pin connector "M1501" (wire of YOKE, on Main panel)
- Disconnect 2 pin connector "M1114" (degaussing coil, on Main panel)
- Disconnect 1 pin connector "M1701" (on Video panel)
- Disconnect 2 pin connector "M1219" (on Main panel)
- Disconnect 9 pin connector "M1217" (on Main panel)
- Disconnect 3 pin connector "M1213" (on Main panel)
- Disconnect 3 pin connector "M1504" (on Main panel)
- Disconnect 2 pin connector "M1218" (on Main panel)
- Disconnect 2 pin connector "M1220" (on Main panel)
- Disconnect 7 pin connector "M1212" (on Main panel)

- To slide out Main panel.

- Remove 2 screws as shown in Fig. 3.14, then push the clips to the right as shown in Fig. 3.13, to separate the bottom plate.

- Remove the plastic frame as shown in Fig. 3.15.

- Remove the "Rotary panel" "Earphone panel" from Front cabinet and place it on the table as shown in Fig. 3.1.

















- Connect all the connectors and panels for service position.






## Service position :

Place monitor in service position as shown in Fig. 3.1 through Fig. 3.15.

## 2. Repair instructions


After the service position is obtained, all the panel's copper trace sides may be accessed.

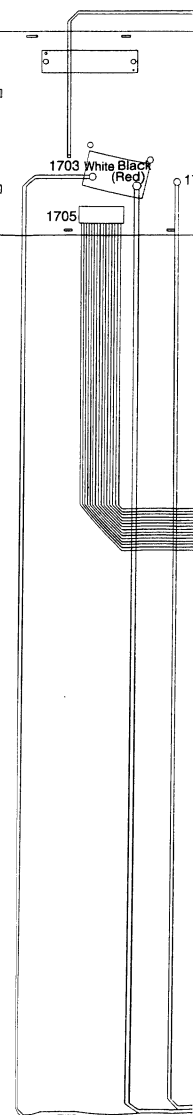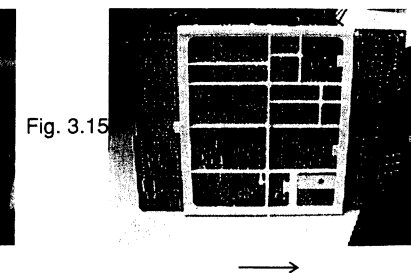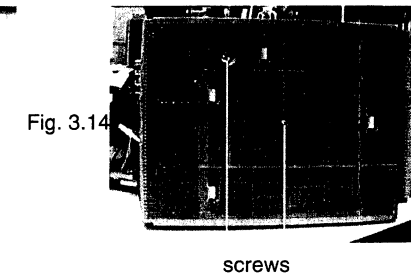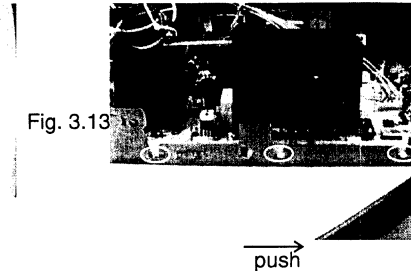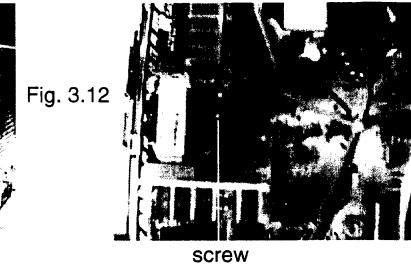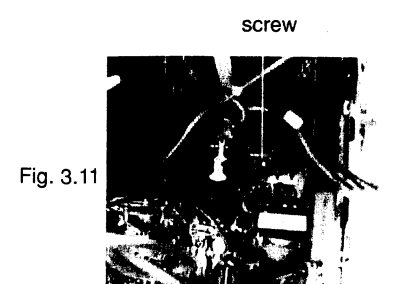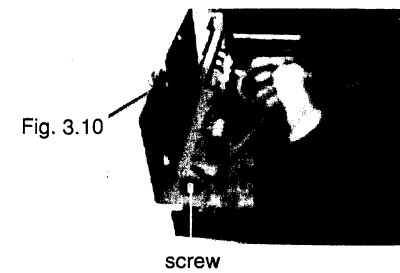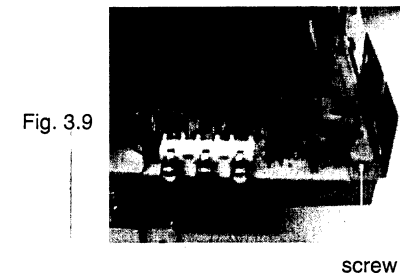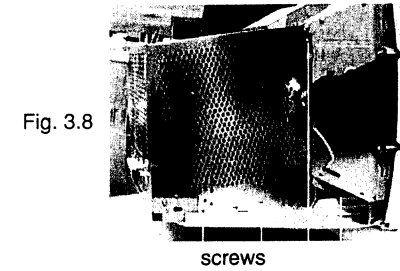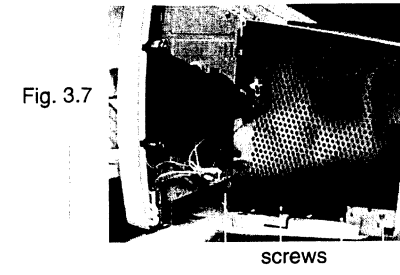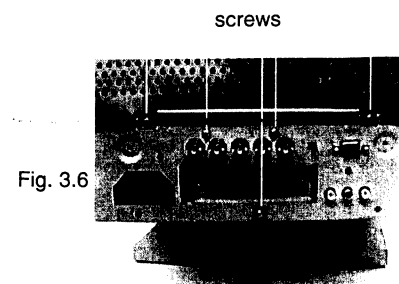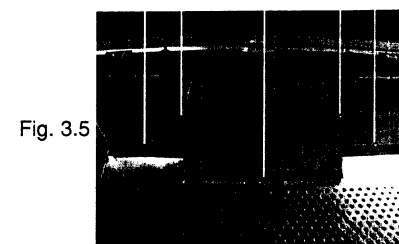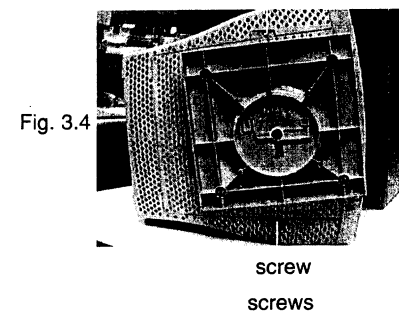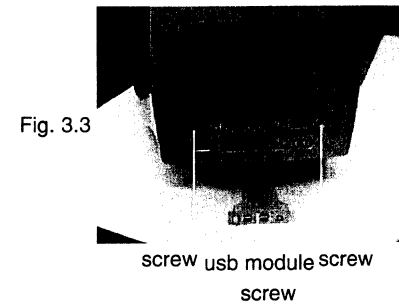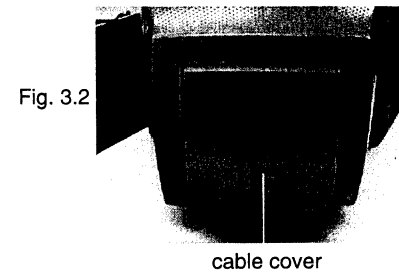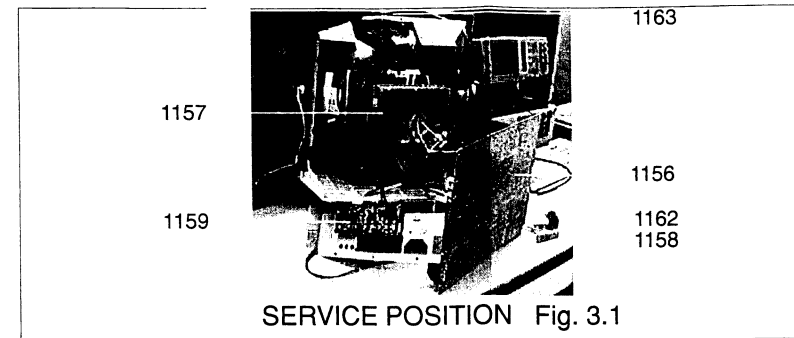

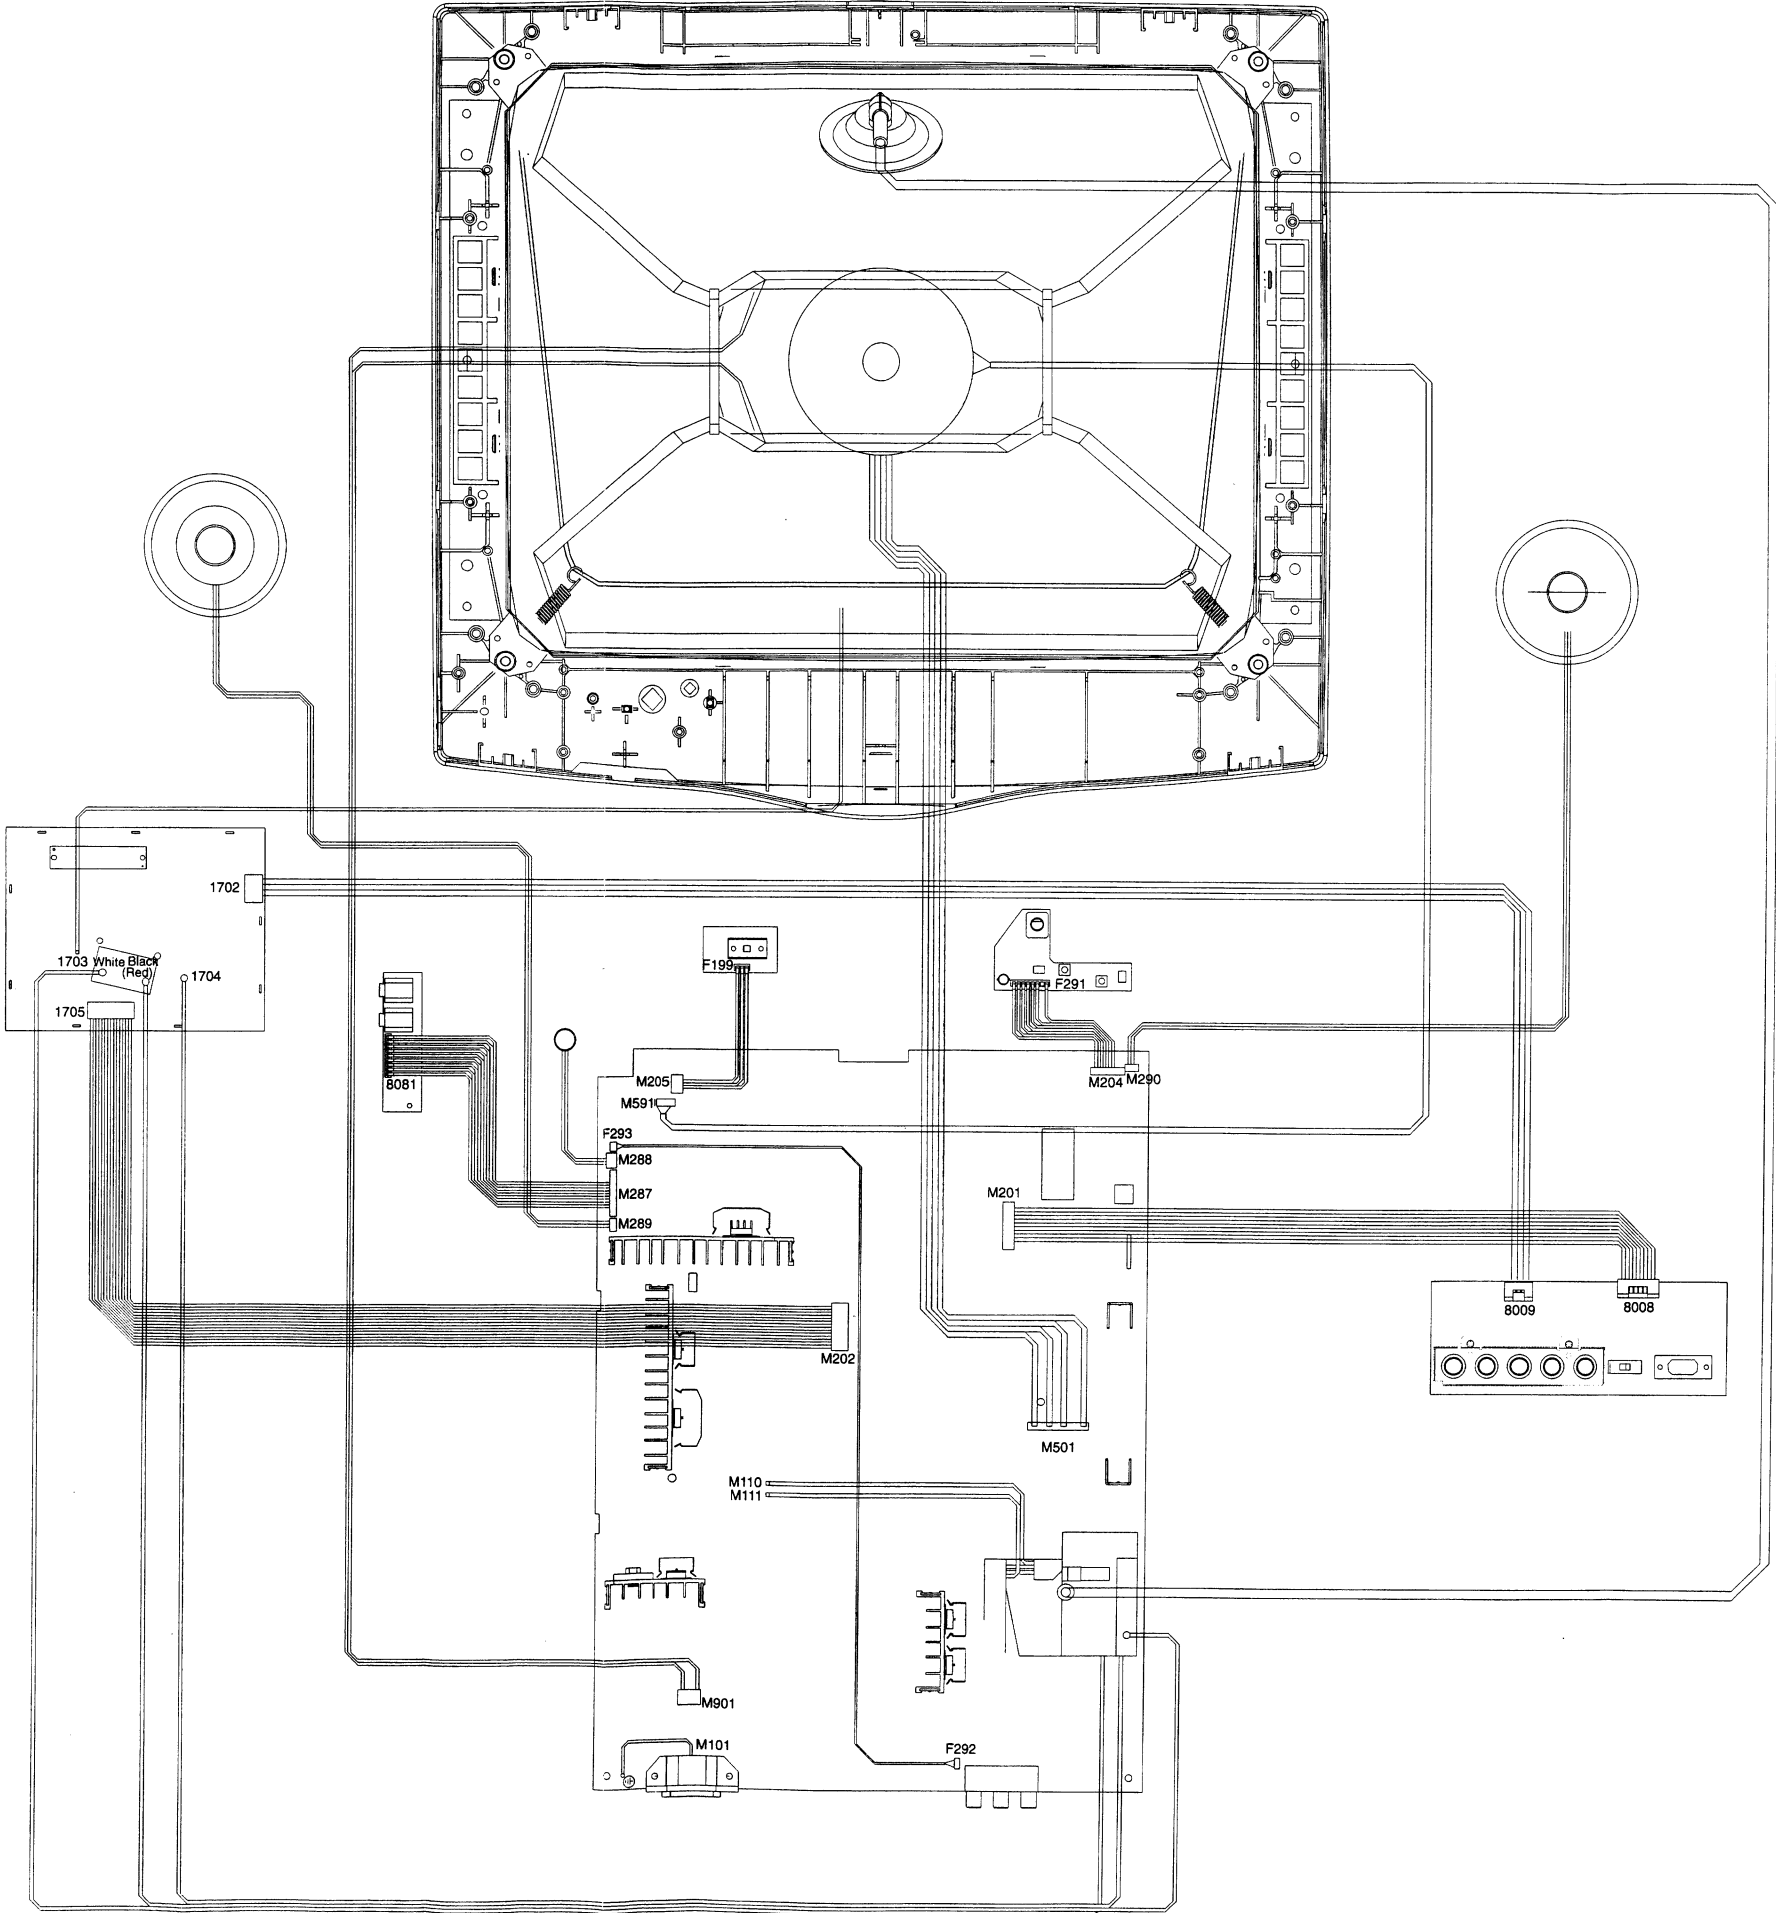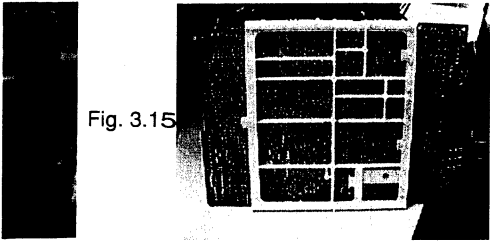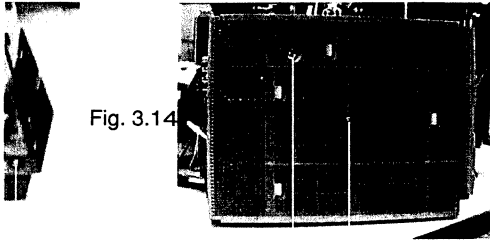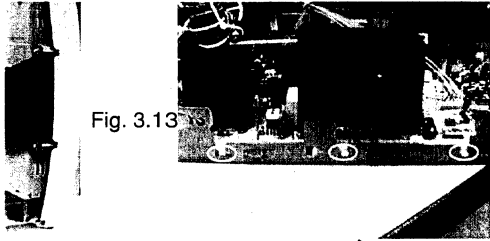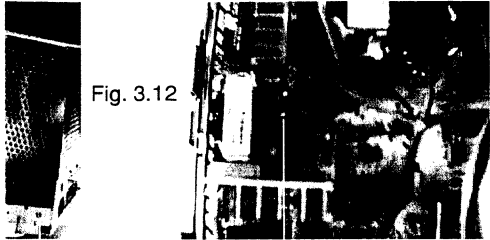




## Block Diagram

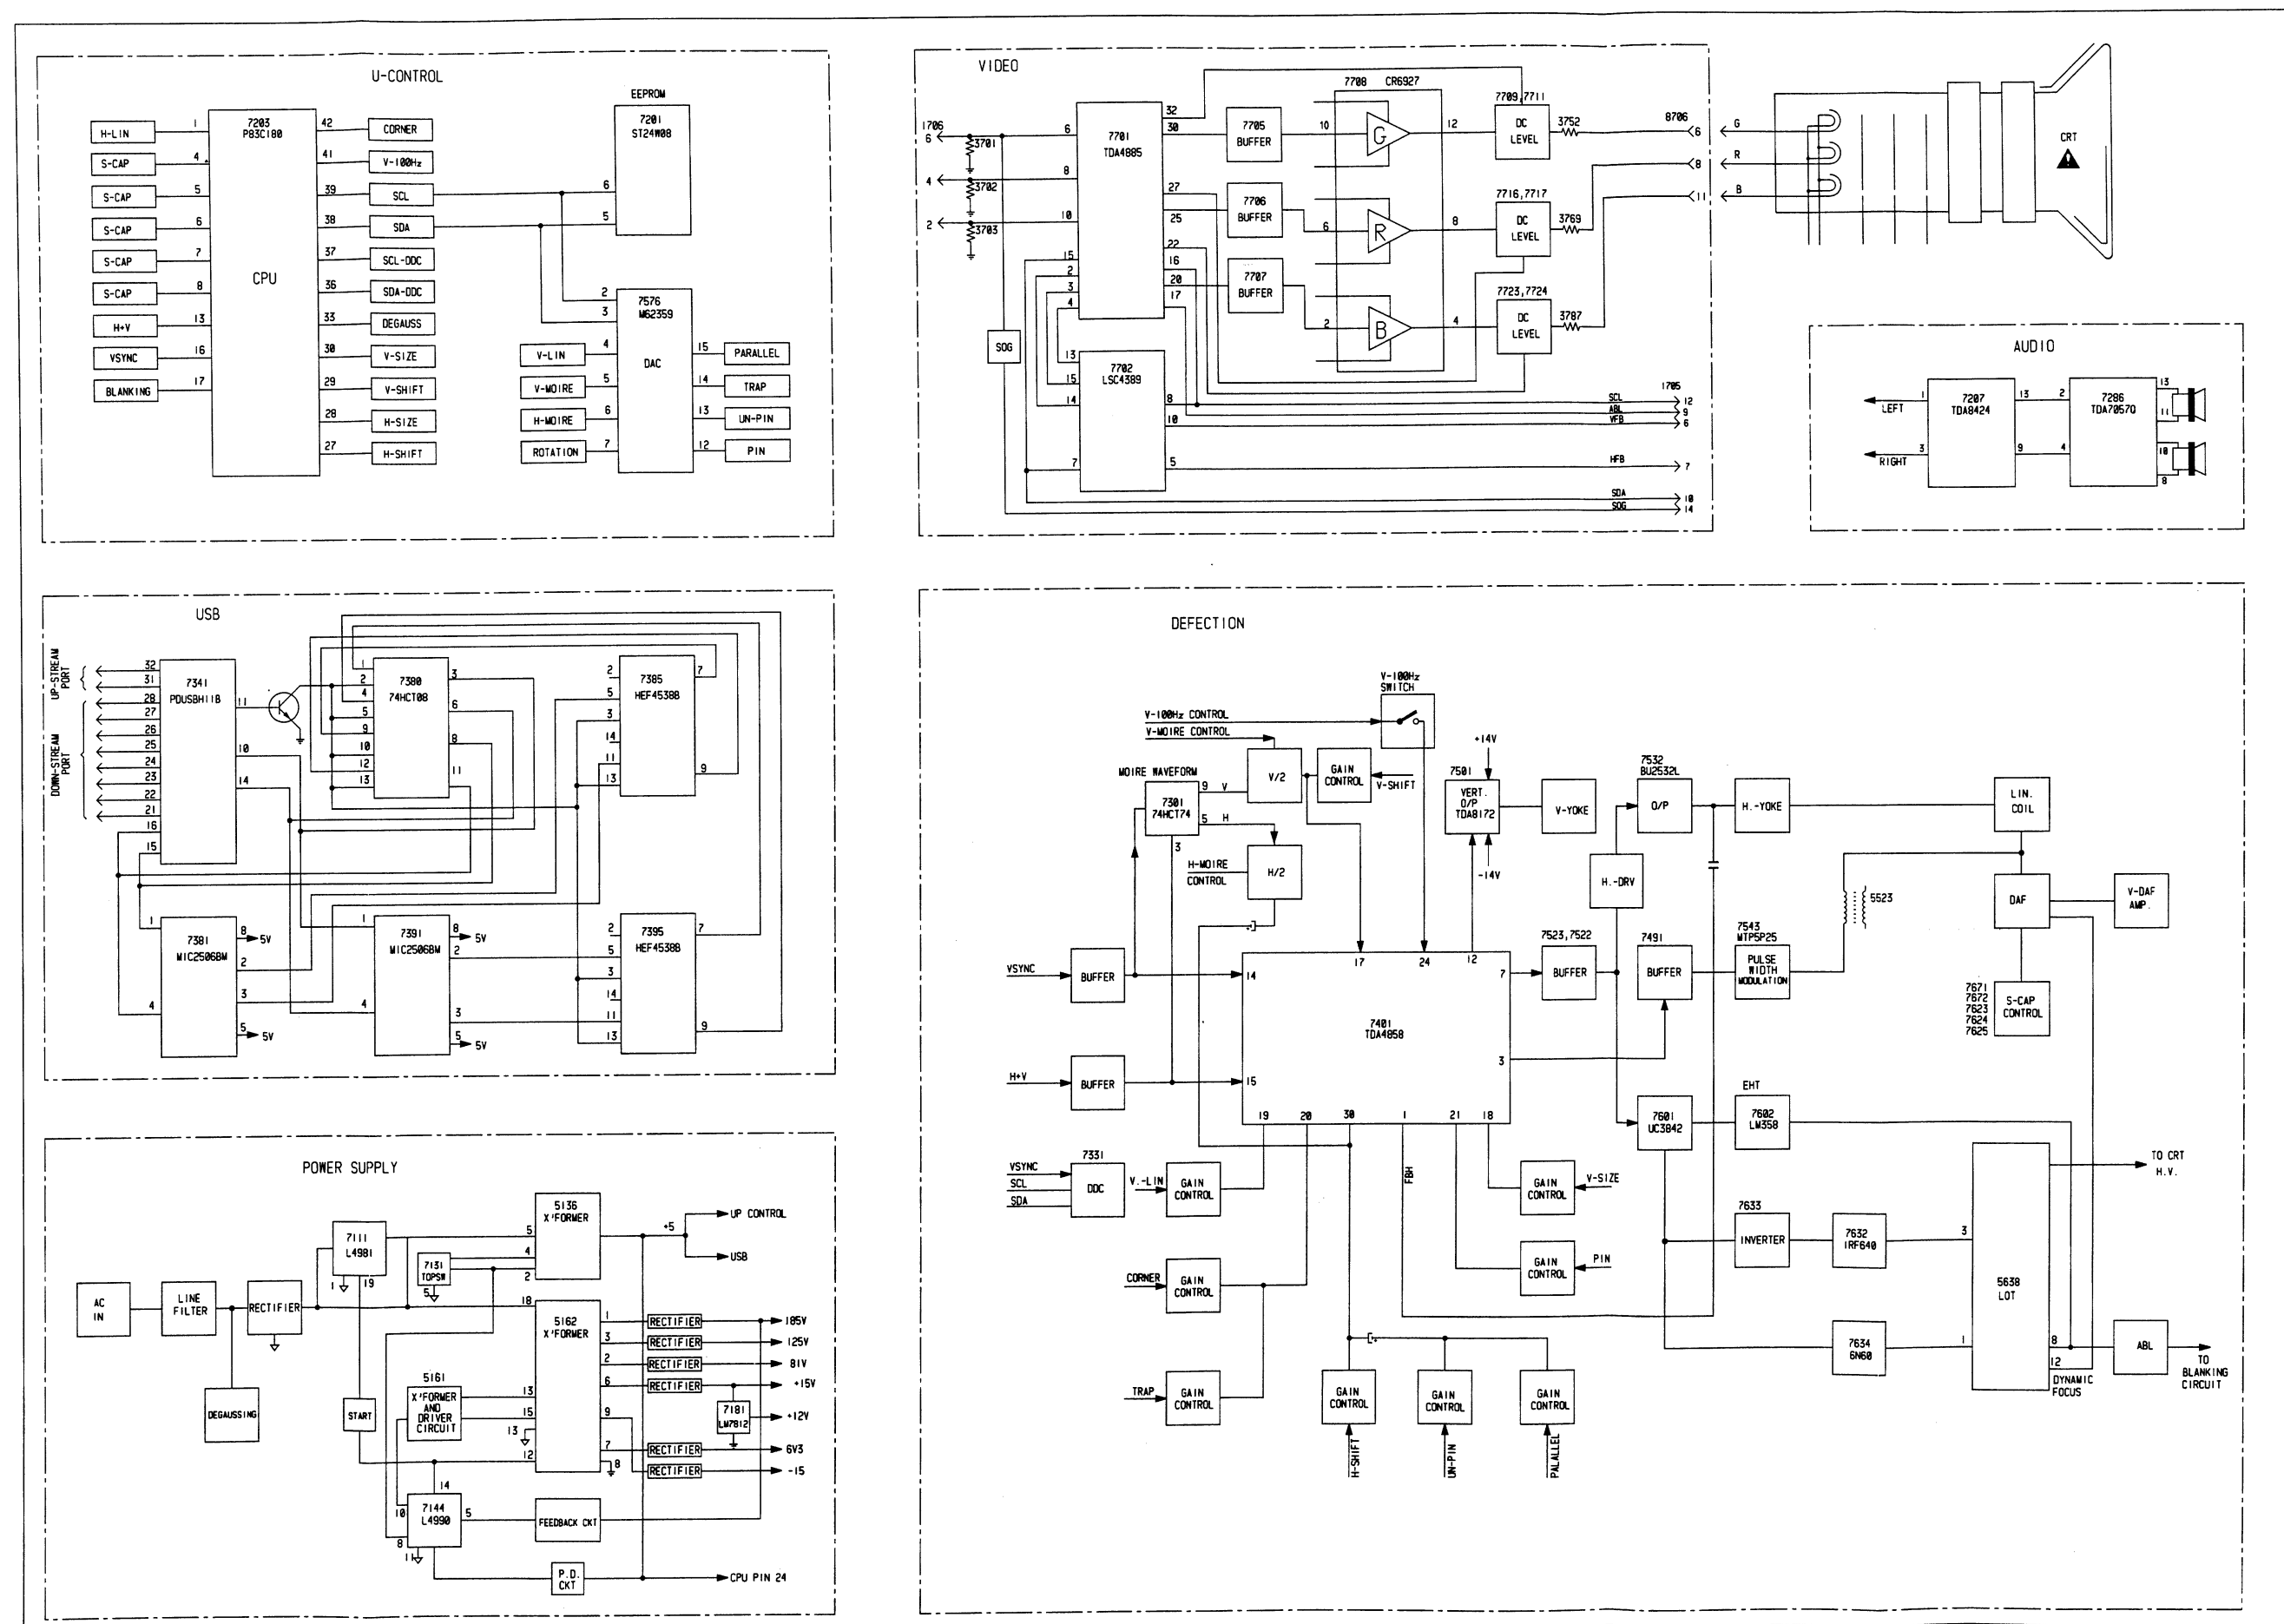


Video Panel C.B.A. (A)

8793 B 3	3797 D 6	3749 C 2	2793 C 1	2743 B 2	1781 C 3
8784 D 2	3798 D 6	3750 D 2	3781 B 7	2744 B 3	1782 B 7
8785 B 3	3799 D 6	3751 C 2	3782 B 7	2745 A 2	1783 D 3
8786 D 1	3800 D 1	3752 D 5	3783 B 7	2746 A 1	1784 D 5
8788 D 5	3801 D 8	3753 C 2	3785 D 7	2747 E 2	1785 E 3
8789 D 2	3802 D 8	3754 B 5	3786 D 7	2748 A 7	1786 C 4
8711 B 5	3803 D 7	3755 A 5	3788 D 7	2749 C 6	2781 B 7
8712 C 5	3804 E 6	3756 A 3	3789 D 7	2751 C 6	2782 B 7
8713 C 6	3805 C 2	3757 A 3	3710 B 6	2752 C 6	2783 B 7
8714 B 5	3807 B 2	3758 A 3	3711 D 7	2753 C 6	2784 B 6
8715 C 6	3808 B 1	3759 A 5	3712 B 6	2754 D 6	2785 C 7
8721 B 5	3810 D 6	3760 B 5	3713 B 6	2755 C 7	2786 D 7
8724 B 5	3811 D 5	3761 A 3	3714 B 6	2756 E 6	2787 B 6
8731 A 5	3812 C 5	3762 B 3	3715 C 7	2757 D 1	2788 B 6
8734 A 5	3813 D 7	3763 B 3	3716 B 7	2758 C 6	2789 A 6
7701 C 7	3814 B 4	3764 D 1	3717 C 7	2759 D 6	2711 A 6
7702 C 6	3815 B 3	3765 B 3	3718 C 7	2760 E 4	2712 B 5
7703 D 7	3816 C 2	3766 B 3	3719 D 7	2761 E 4	2713 B 5
7704 E 7	3817 B 7	3767 C 2	3720 B 6	2762 E 4	2714 A 5
7705 B 5	3818 A 1	3768 D 2	3721 B 7	2763 E 3	2715 B 6
7706 B 5	3819 B 5	3769 C 4	3722 B 7	2764 E 3	2716 B 5
7707 A 5	3820 B 5	3770 C 2	3723 B 7	2765 E 3	2717 A 4
7708 A 2	3821 A 5	3771 B 2	3724 A 7	2766 E 3	2718 A 4
7709 C 2	3822 A 5	3772 A 5	3725 A 7	2767 E 4	2719 A 4
7711 C 2	3823 A 5	3773 A 5	3726 A 7	2768 E 2	2720 B 2
7716 B 2	3824 A 5	3774 A 3	3727 B 6	2769 E 3	2721 B 4
7717 C 2	3825 B 5	3775 A 2	3728 A 6	2770 E 3	2722 B 3
7723 B 1	3826 A 5	3776 A 2	3729 B 6	2771 E 3	2723 B 4
7724 C 1	3827 A 5	3777 A 5	3730 B 6	2772 C 3	2724 A 5
7725 E 6	3828 E 6	3778 A 2	3731 A 6	2773 D 5	2725 B 5
7726 E 1	3829 C 5	3779 B 2	3732 A 6	2774 C 5	2726 B 5
7727 A 1	3831 C 6	3780 B 2	3733 A 6	2776 E 4	2727 A 3
	3832 C 6	3781 B 3	3734 A 6	2777 D 5	2728 A 3
	5702 C 7	3782 B 1	3735 A 6	2778 D 2	2729 A 3
	5703 D 6	3784 B 2	3736 B 5	2779 C 4	2730 B 3
	5704 E 2	3785 C 1	3737 B 5	2780 C 3	2731 B 3
	5705 E 2	3786 D 1	3738 A 4	2781 D 1	2732 B 3
	5706 B 4	3787 C 3	3739 A 4	2782 E 1	2733 D 2
	5707 B 4	3788 C 1	3740 B 5	2783 E 2	2734 A 5
	5708 C 3	3789 C 1	3741 A 3	2784 C 2	2735 A 5
	5709 E 2	3790 A 5	3742 B 5	2785 C 1	2736 A 5
	5710 B 1	3791 E 6	3743 A 3	2786 C 1	2737 B 7
	5711 A 5	3792 E 6	3744 B 4	2787 A 4	2738 A 3
	5712 B 1	3793 D 6	3745 B 4	2788 A 3	2739 A 2
	5713 E 6	3794 C 6	3746 D 2	2789 A 2	2740 A 2
	8701 B 4	3795 C 6	3747 B 4	2791 D 2	2741 A 6
	8702 D 2	3796 D 6	3748 B 4	2792 C 2	2742 B 2

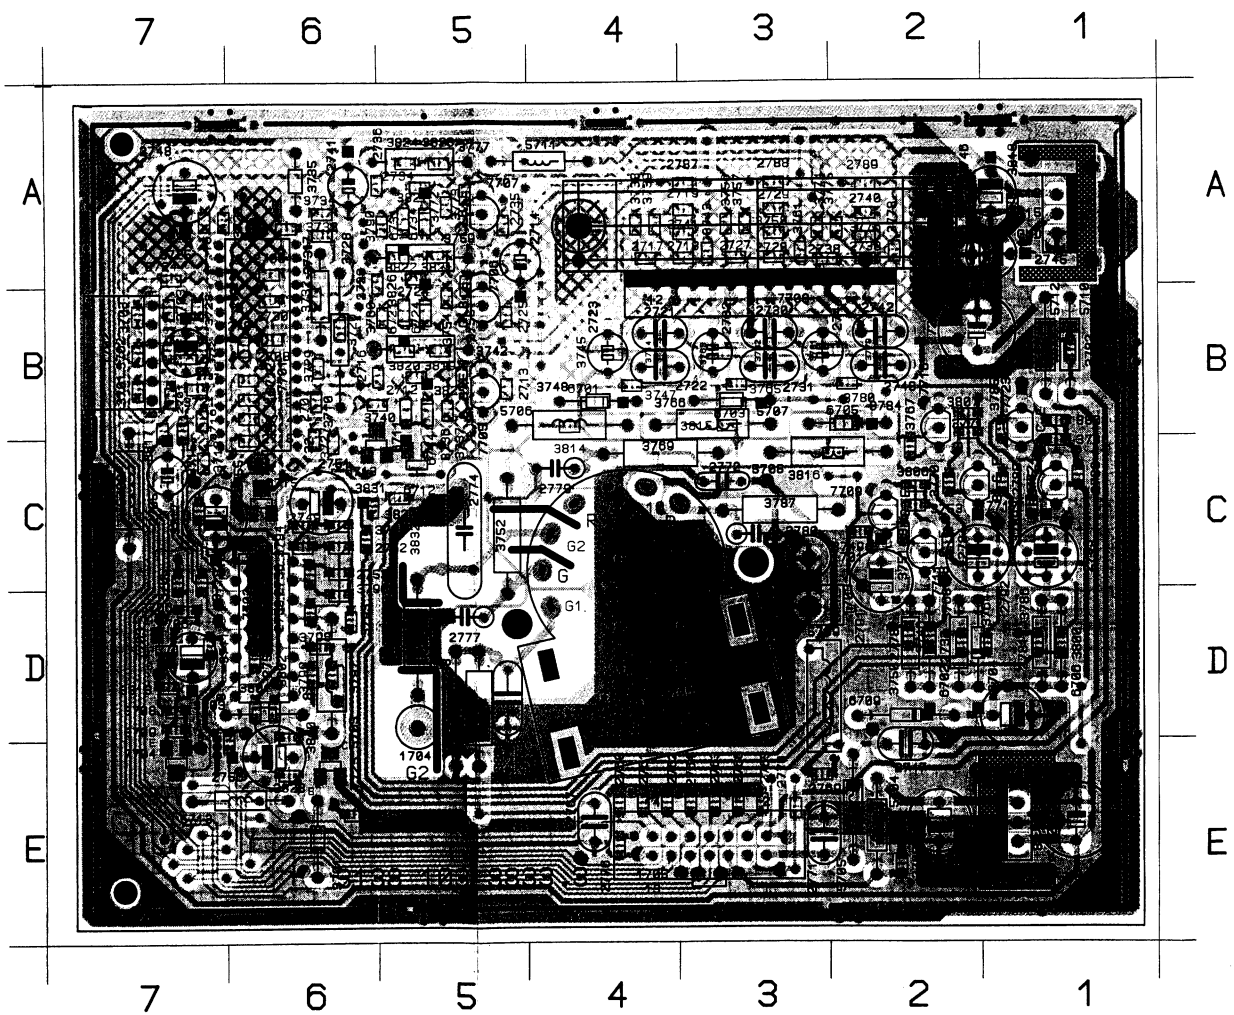


Power Switch Panel C.B.A

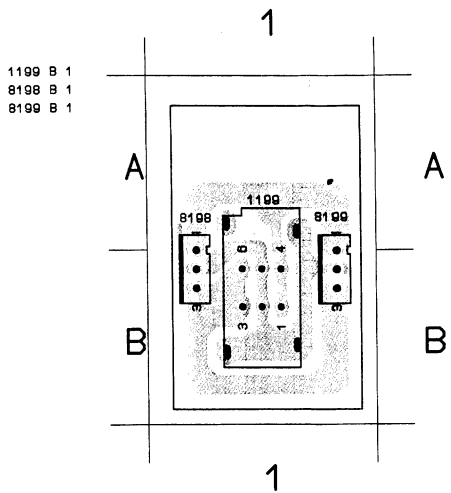



Earphone Panel C.B.A. (F)

8833 A 3	5884 A 1	3885 A 4	3881 A 3	2884 A 4
8884 A 4	3883 A 1	3882 A 3	2885 A 4	
8831 A 2	3884 A 1	3883 A 4	2886 A 3	
8832 A 3	5883 A 1	3884 A 4	2887 A 3	

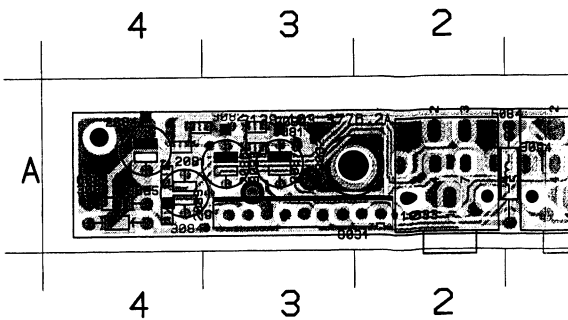



Power Switch Panel C.B.A. (G)

Terminal Panel C.B.A. (A1)

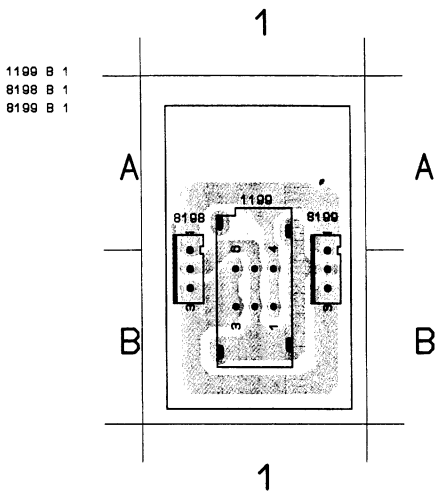
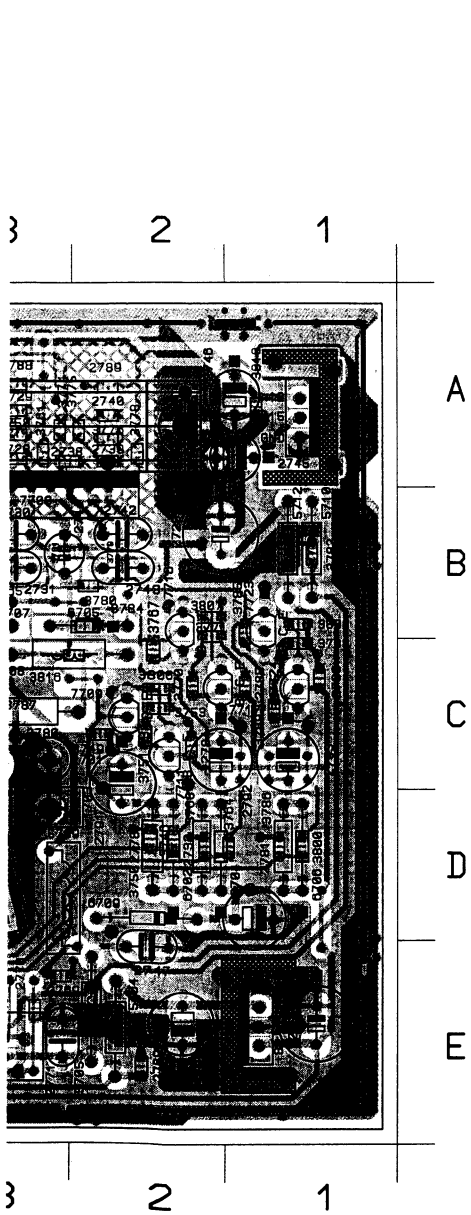


Earphone Panel C.B.A. (F)

8033 A 3 5084 A 1 3085 A 4 3081 A 3 2084 A 4 1032 A 1  
8084 A 4 3093 A 1 3082 A 3 2085 A 4 1033 A 2  
8031 A 2 3094 A 1 3083 A 4 2086 A 3 2081 A 4  
8032 A 3 5083 A 1 3084 A 4 2087 A 3 2082 A 3

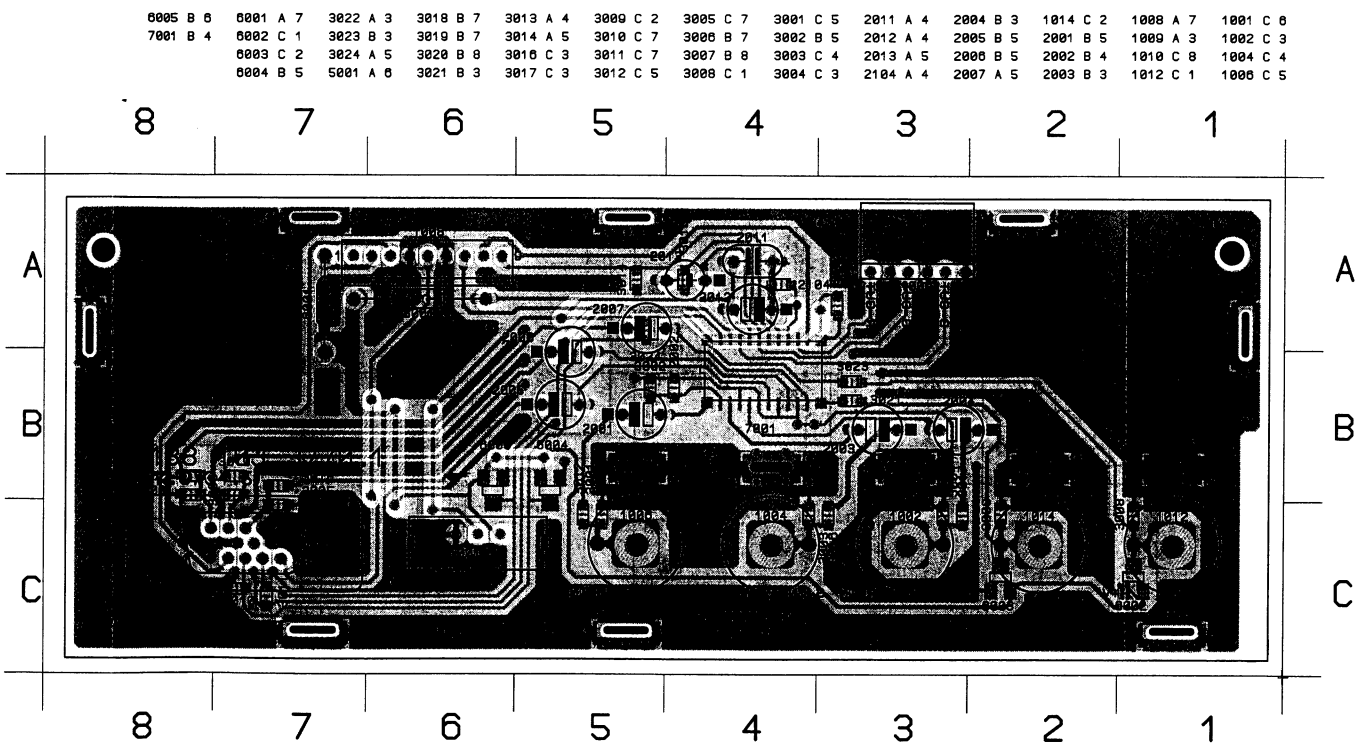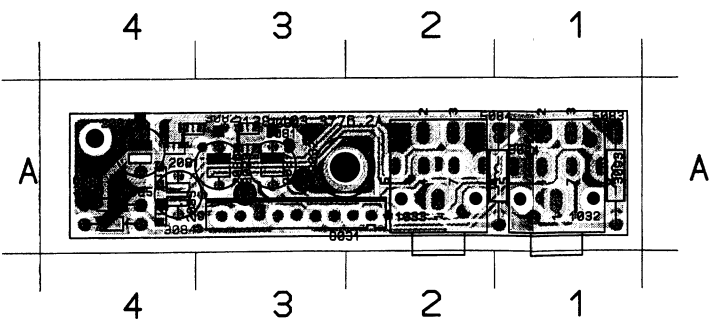

## A1

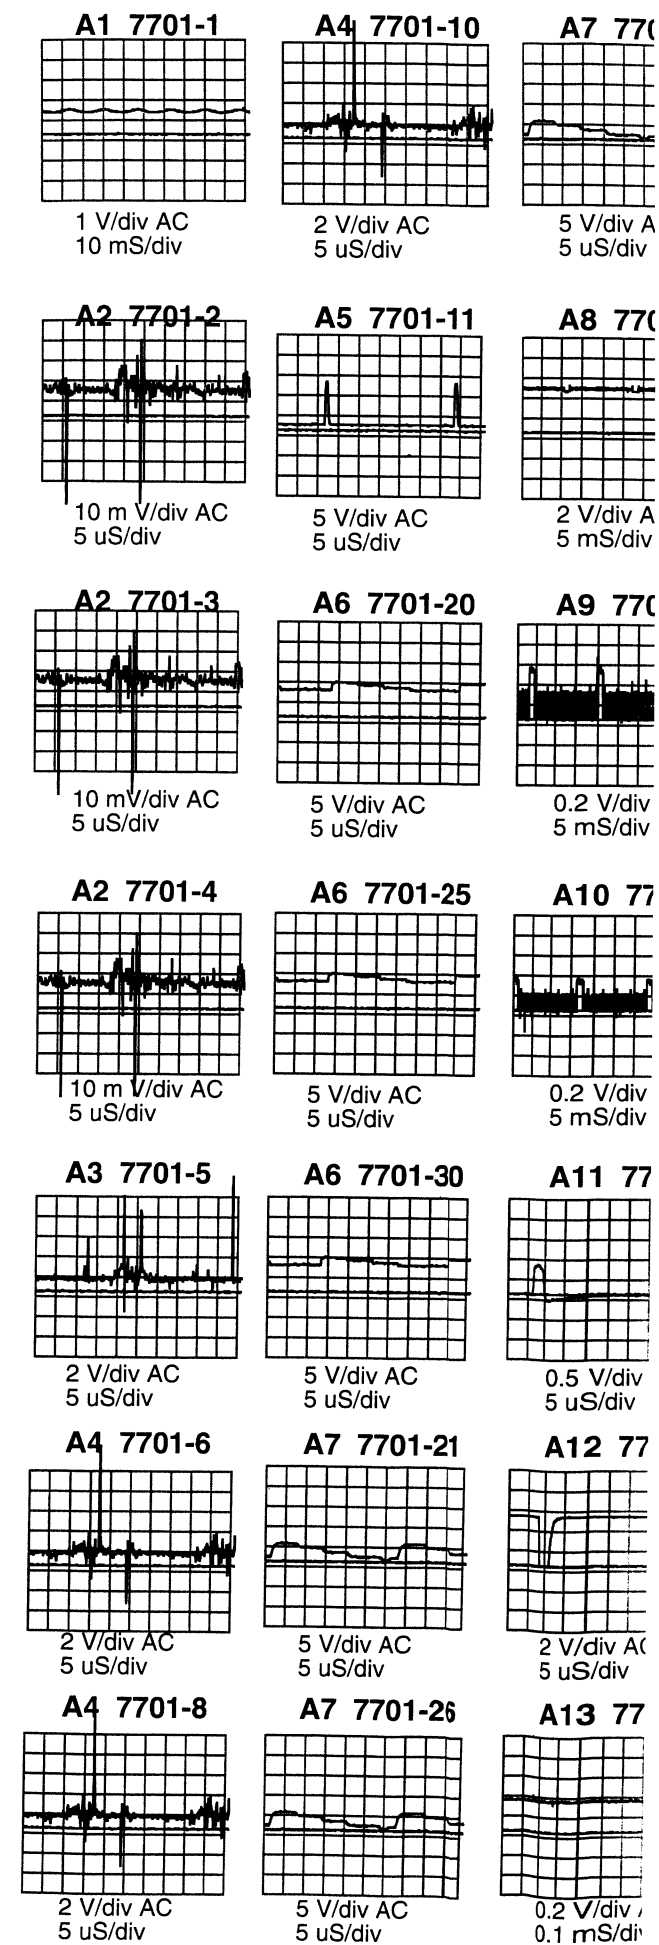
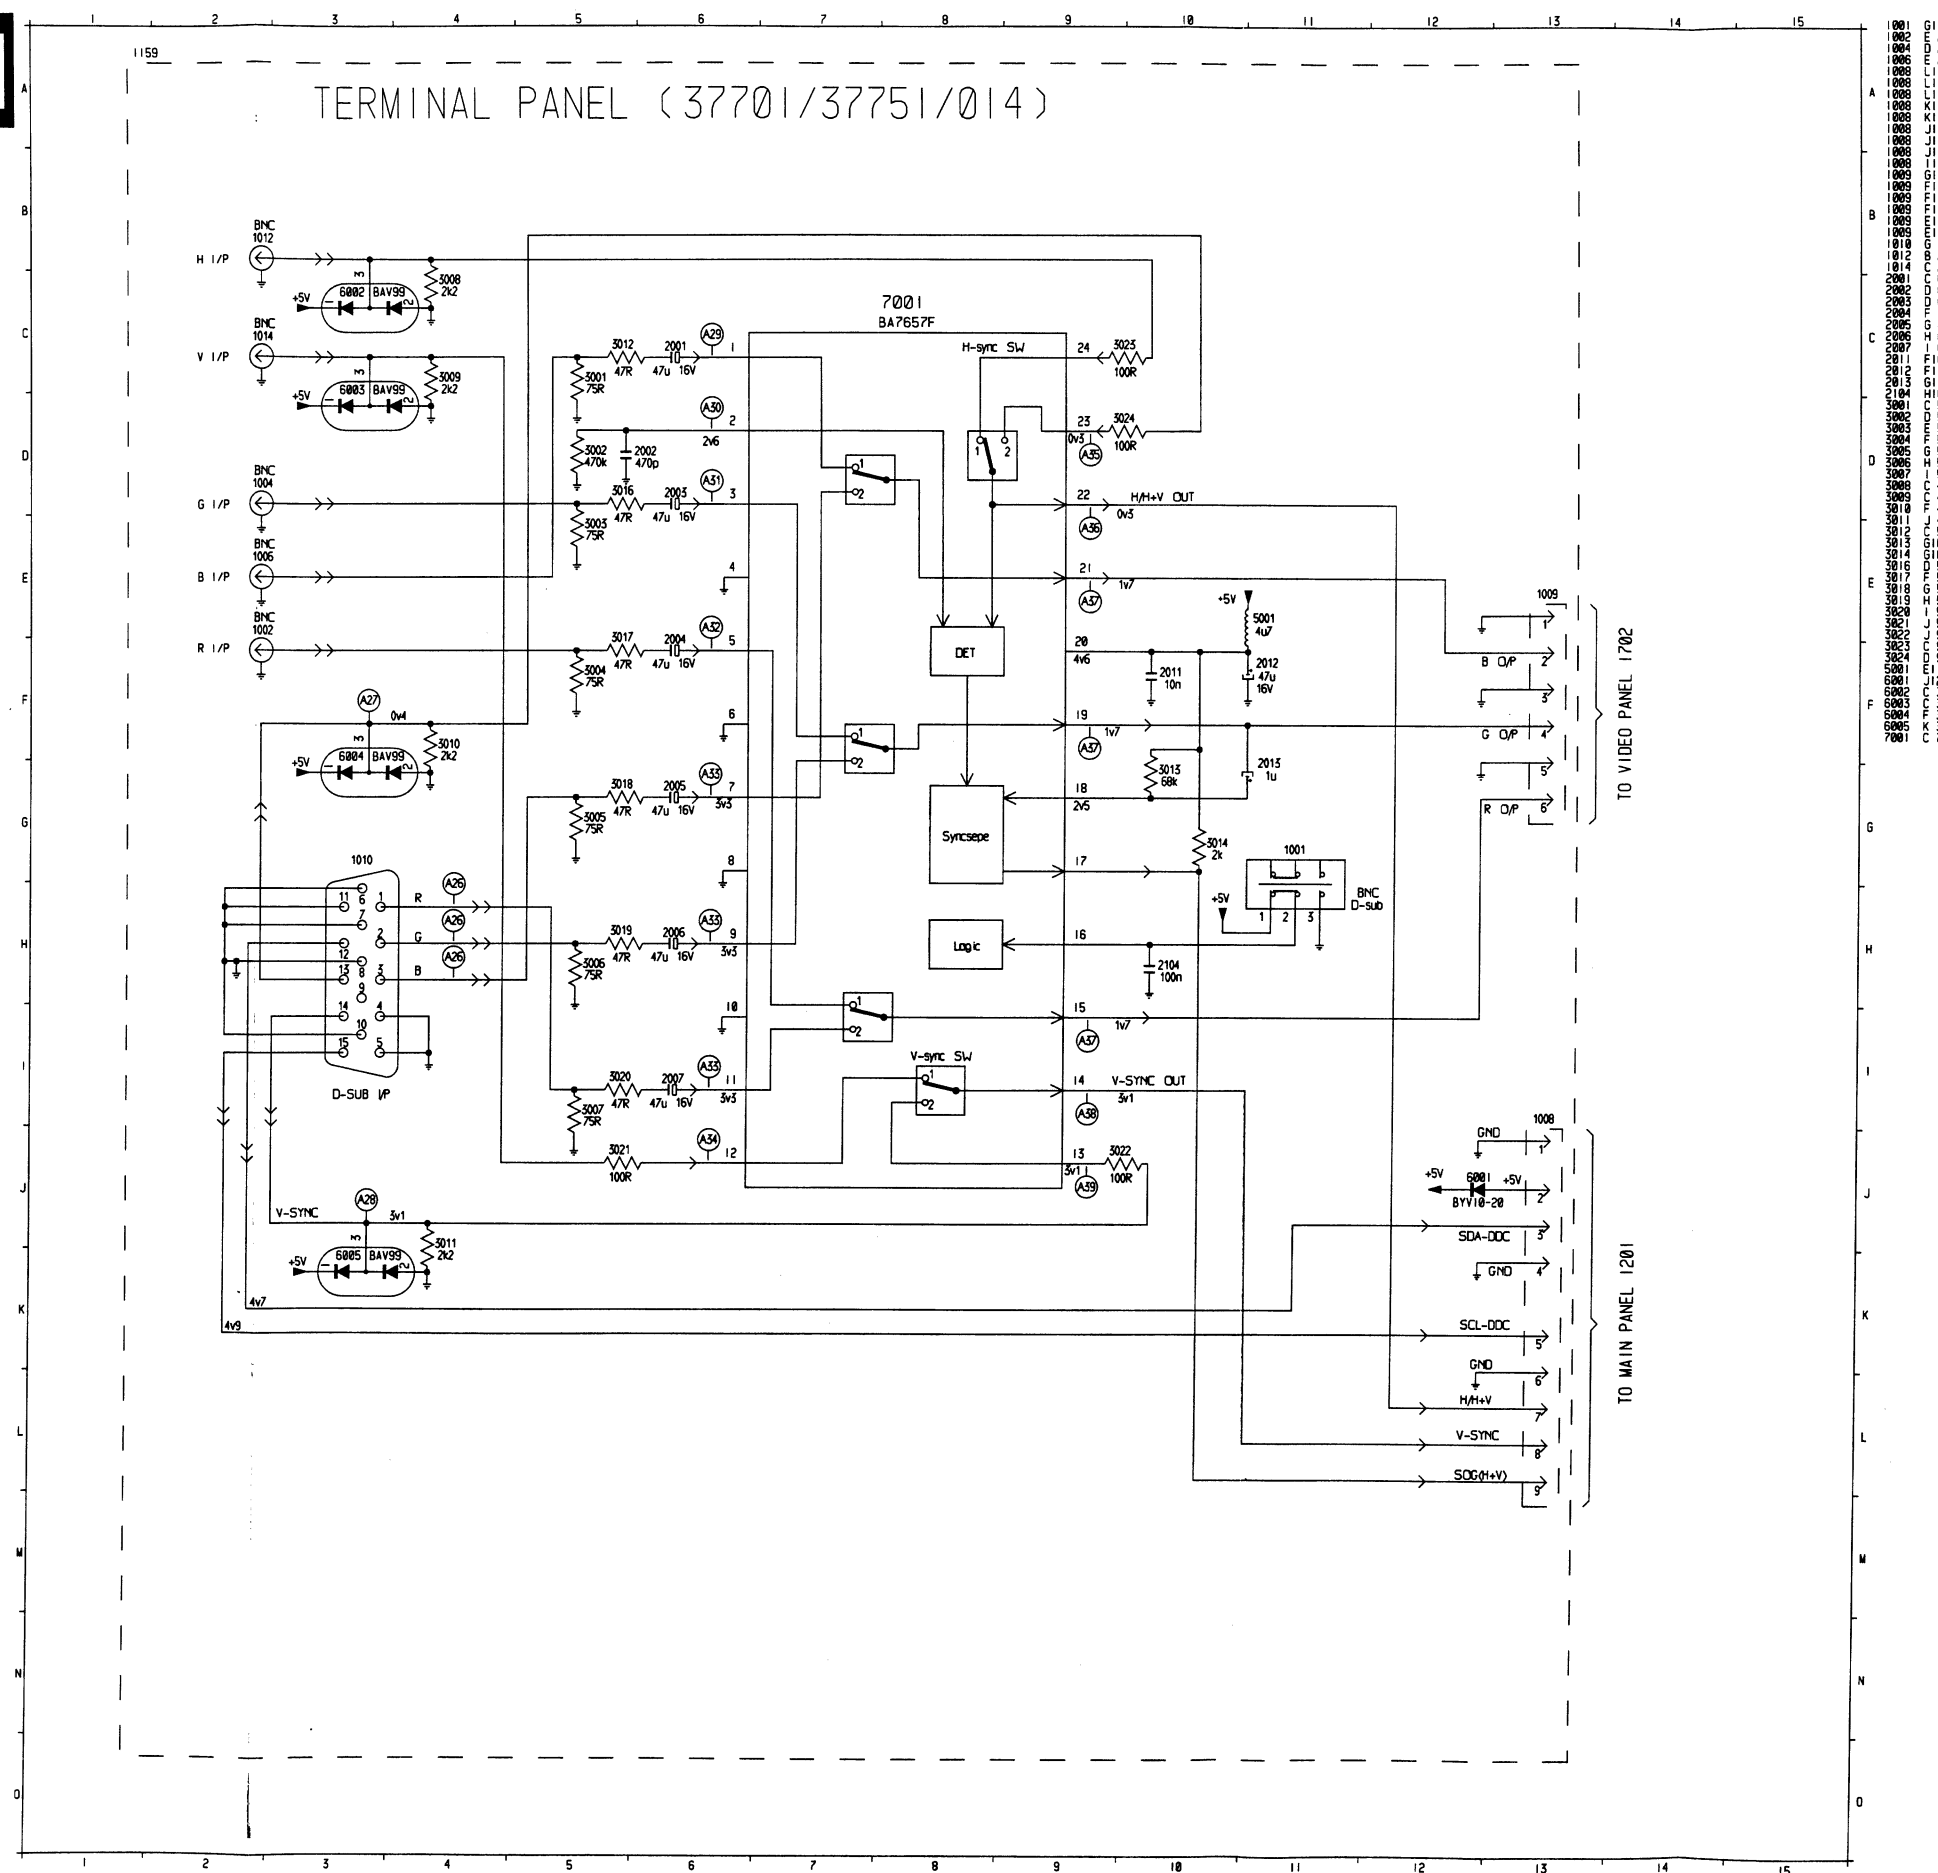


## Waveforms for Diagram A1 and A2

1001  
1002  
1003  
1004  
1005  
1006  
1007  
1008  
1009  
1010  
1011  
1012  
1013  
1014  
1015  
1016  
1017  
1018  
1019  
1020  
1021  
1022  
1023  
1024  
1025  
1026  
1027  
1028  
1029  
1030  
1031  
1032  
1033  
1034  
1035  
1036  
1037  
1038  
1039  
1040  
1041  
1042  
1043  
1044  
1045  
1046  
1047  
1048  
1049  
1050  
1051  
1052  
1053  
1054  
1055  
1056  
1057  
1058  
1059  
1060  
1061  
1062  
1063  
1064  
1065  
1066  
1067  
1068  
1069  
1070  
1071  
1072  
1073  
1074  
1075  
1076  
1077  
1078  
1079  
1080  
1081  
1082  
1083  
1084  
1085  
1086  
1087  
1088  
1089  
1090  
1091  
1092  
1093  
1094  
1095  
1096  
1097  
1098  
1099  
1100  
1101  
1102  
1103  
1104  
1105  
1106  
1107  
1108  
1109  
1110  
1111  
1112  
1113  
1114  
1115  
1116  
1117  
1118  
1119  
1120  
1121  
1122  
1123  
1124  
1125  
1126  
1127  
1128  
1129  
1130  
1131  
1132  
1133  
1134  
1135  
1136  
1137  
1138  
1139  
1140  
1141  
1142  
1143  
1144  
1145  
1146  
1147  
1148  
1149  
1150  
1151  
1152  
1153  
1154  
1155  
1156  
1157  
1158  
1159  
1160  
1161  
1162  
1163  
1164  
1165  
1166  
1167  
1168  
1169  
1170  
1171  
1172  
1173  
1174  
1175  
1176  
1177  
1178  
1179  
1180  
1181  
1182  
1183  
1184  
1185  
1186  
1187  
1188  
1189  
1190  
1191  
1192  
1193  
1194  
1195  
1196  
1197  
1198  
1199  
1200


TO VIDEO PANEL 1702

TO MAIN PANEL 1201

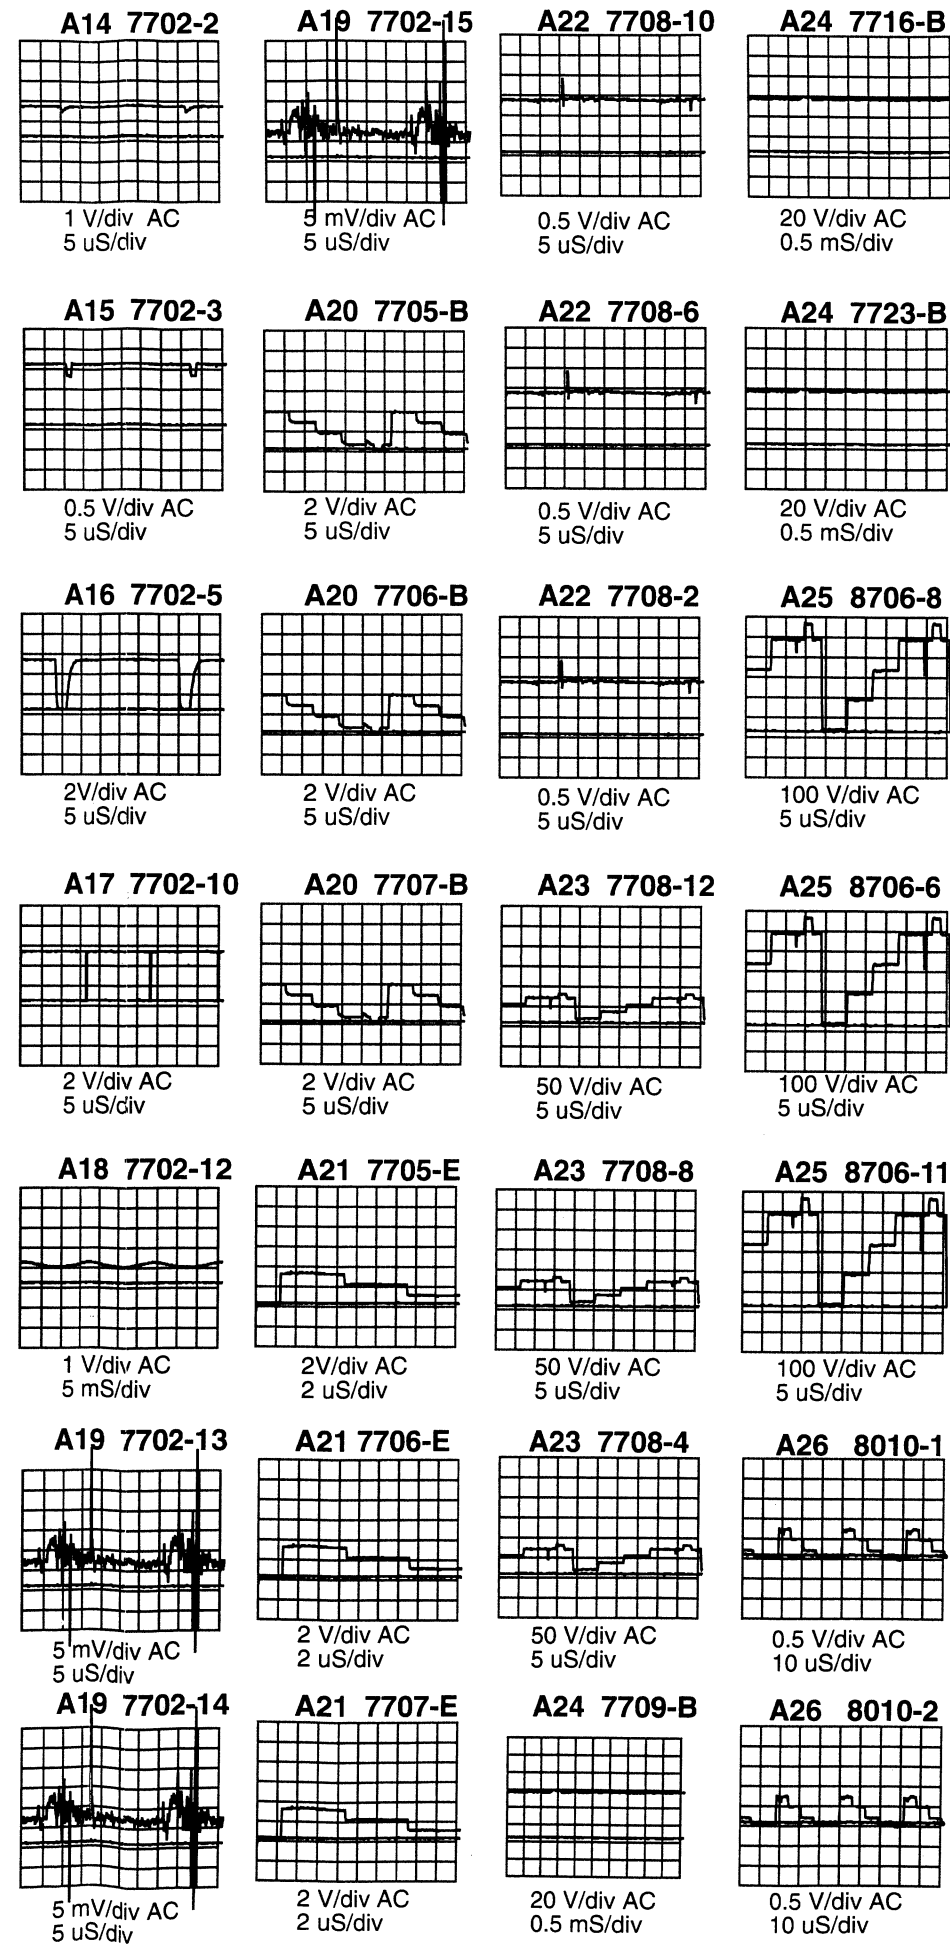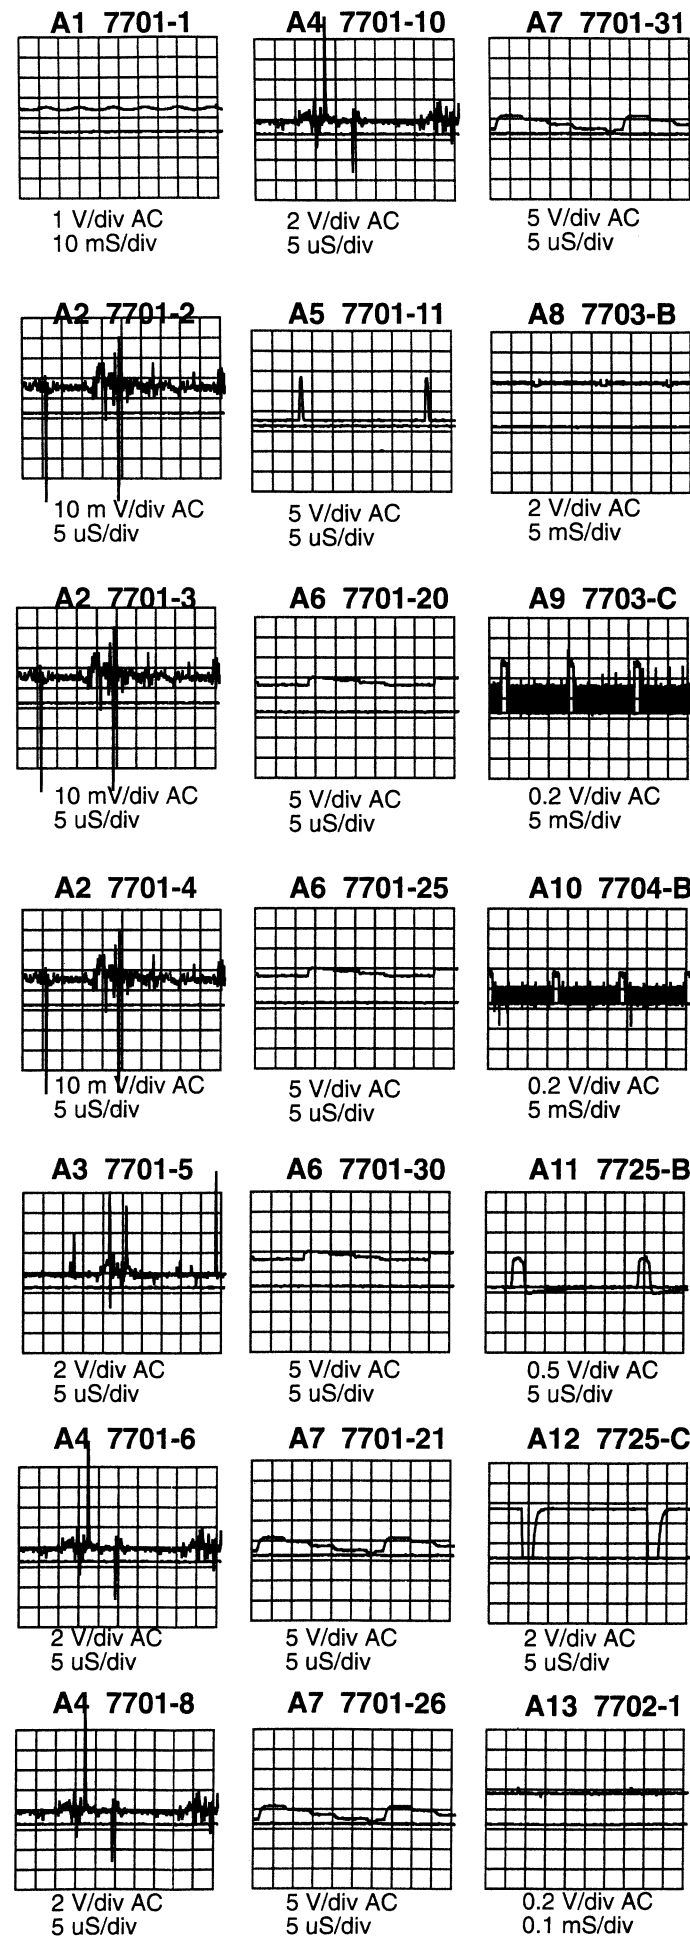


# Video Schematic Diagram

A2

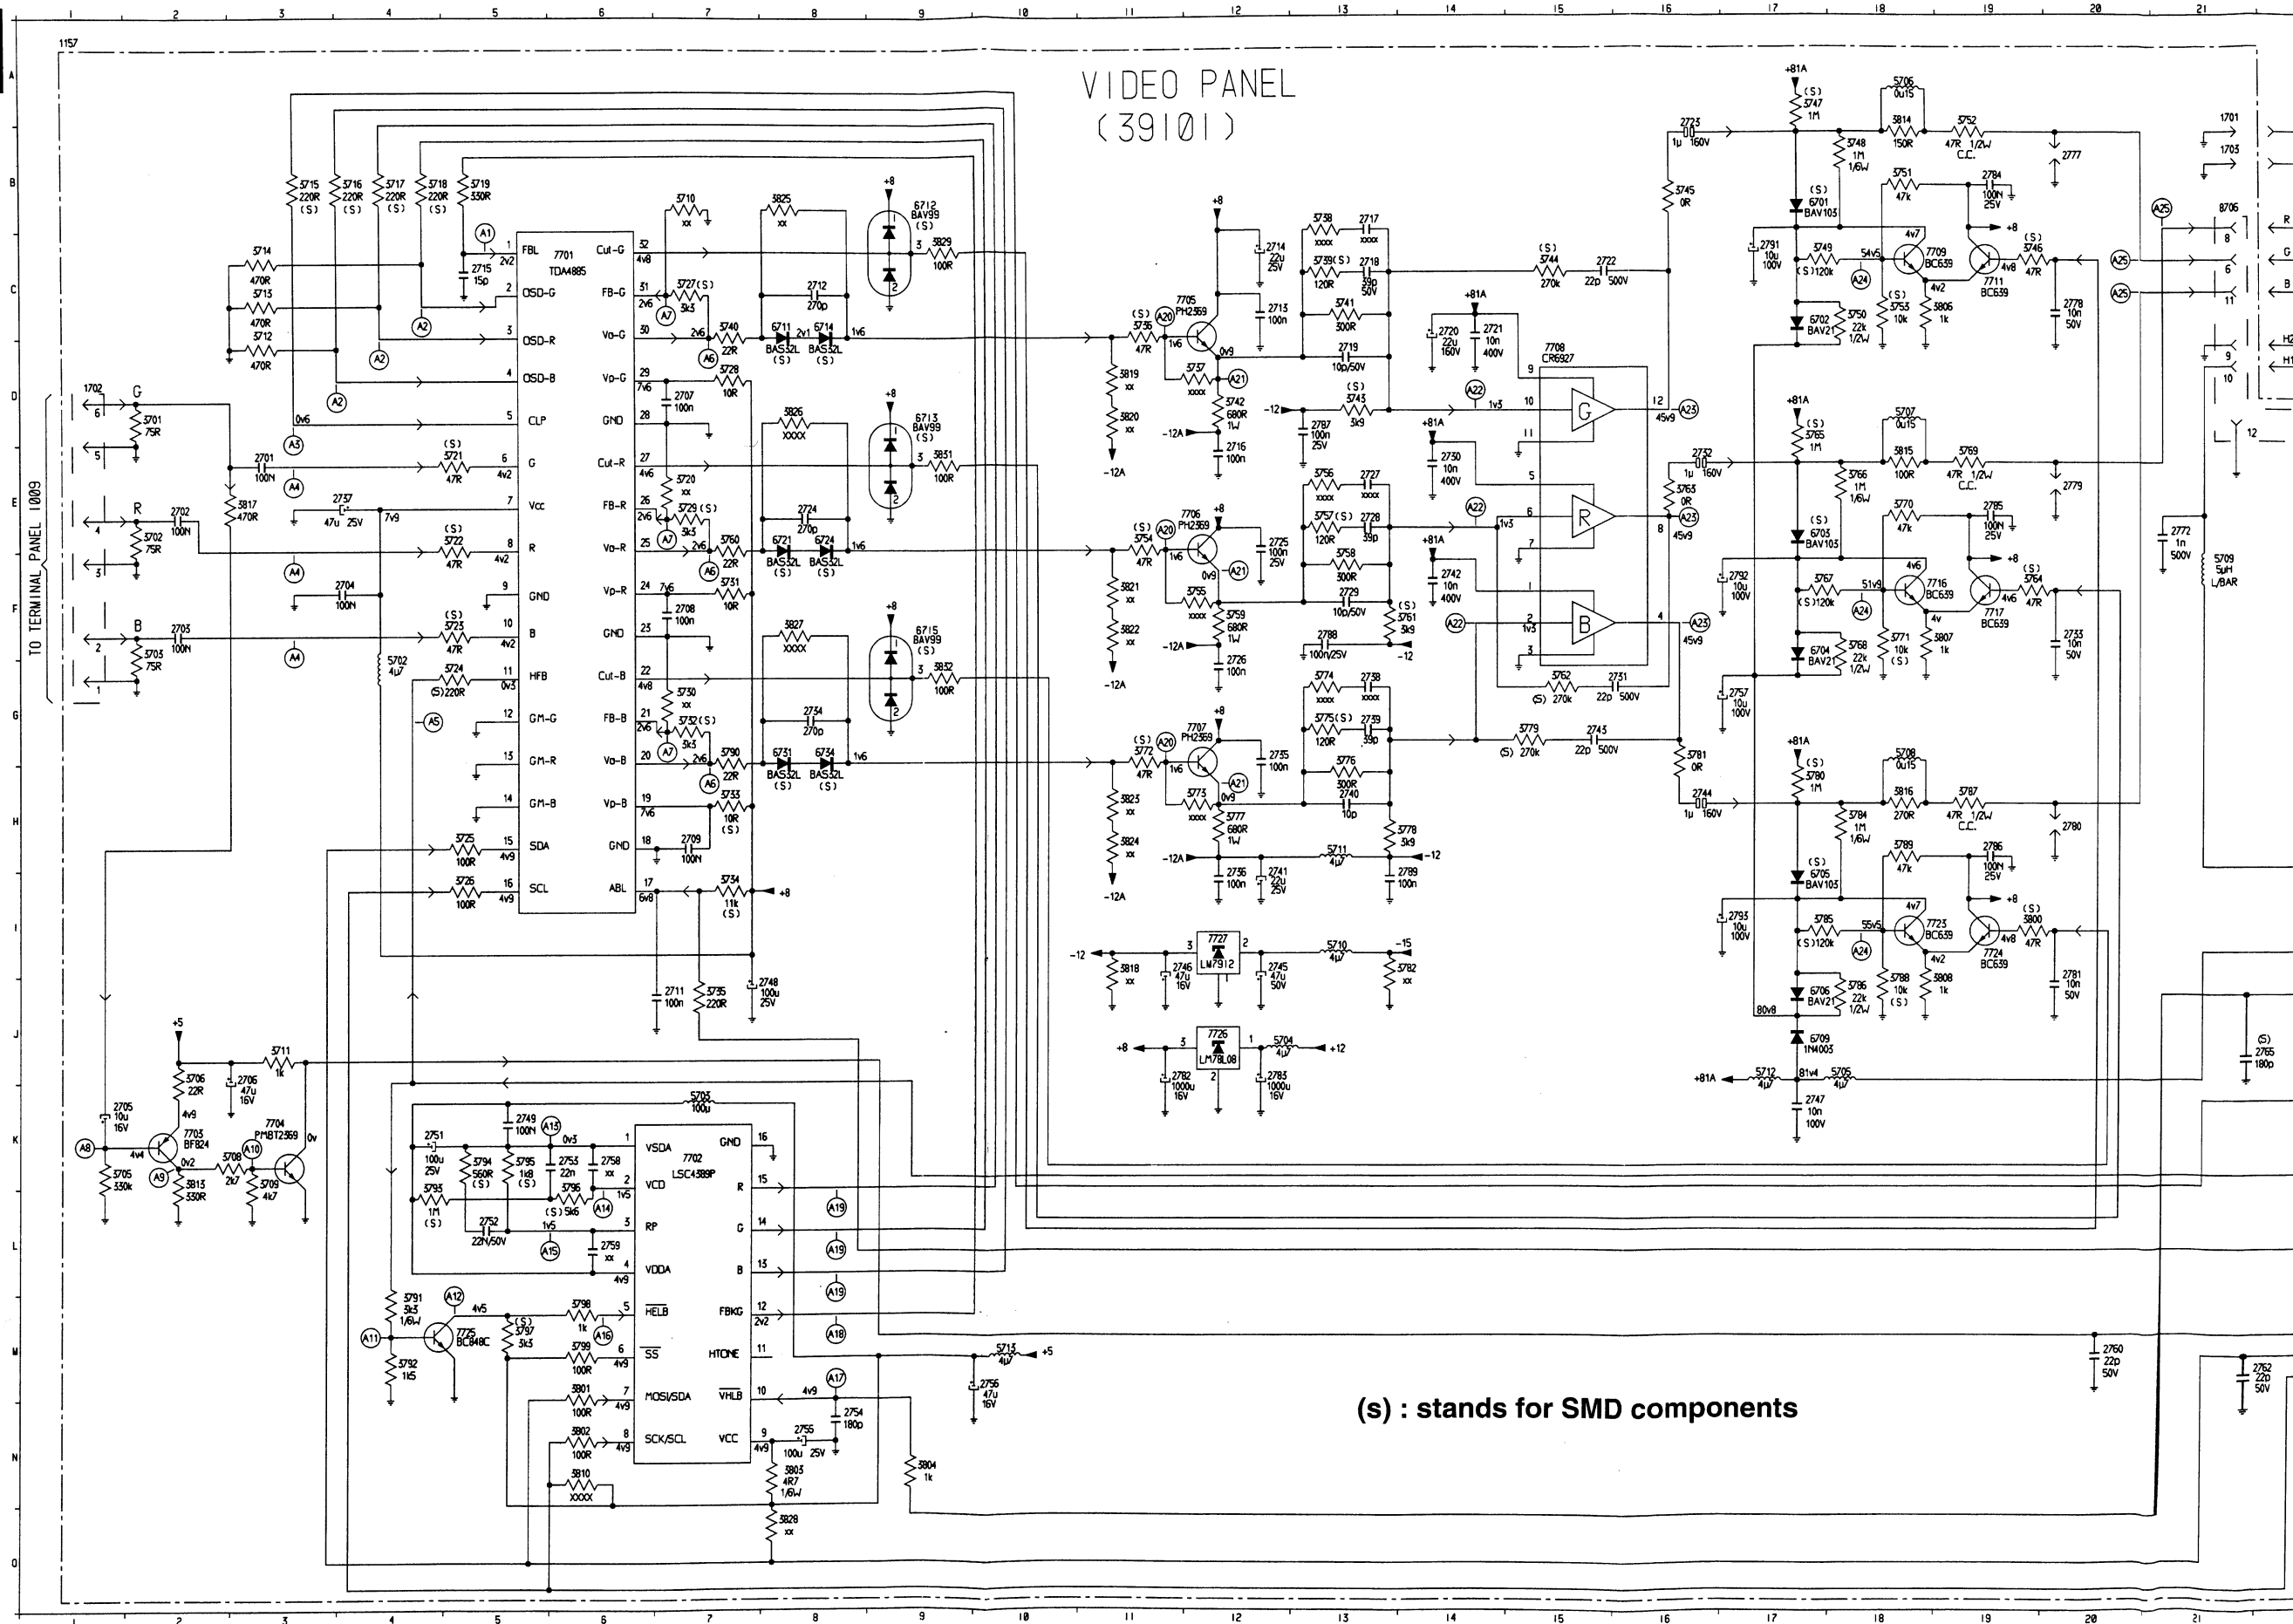




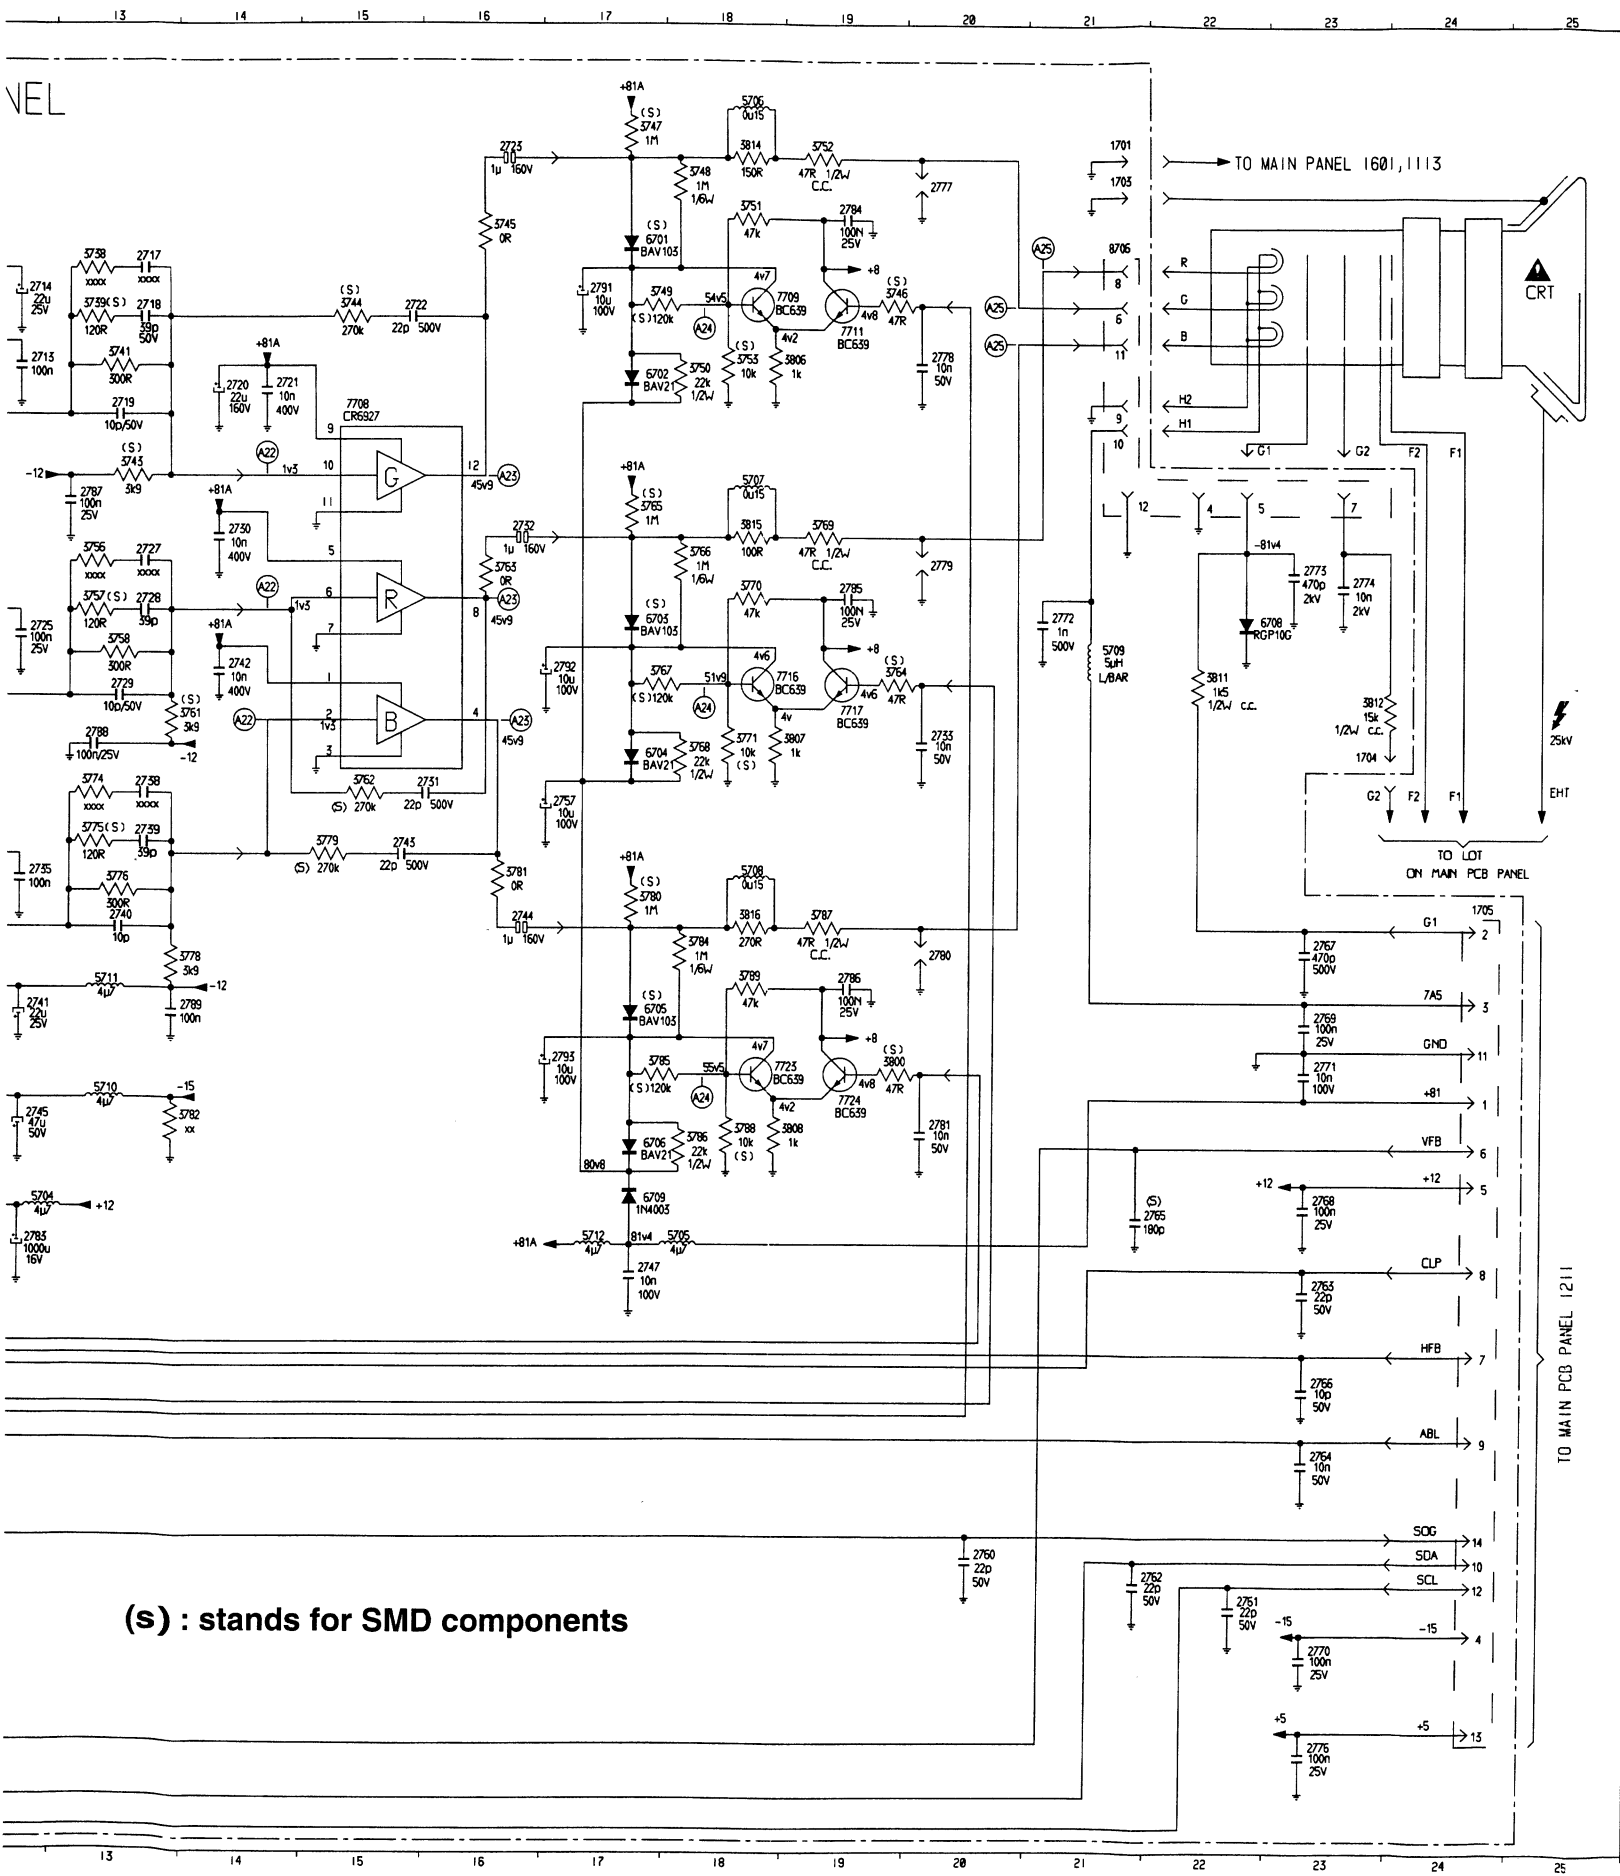



1781 A21 3751 818  
1782 1782 3752 819  
1783 1783 3753 820  
1784 1784 3754 821  
1785 1785 3755 822  
1786 1786 3756 823  
1787 1787 3757 824  
1788 1788 3758 825  
1789 1789 3759 826  
1790 1790 3760 827  
1791 1791 3761 828  
1792 1792 3762 829  
1793 1793 3763 830  
1794 1794 3764 831  
1795 1795 3765 832  
1796 1796 3766 833  
1797 1797 3767 834  
1798 1798 3768 835  
1799 1799 3769 836  
1800 1800 3770 837  
1801 1801 3771 838  
1802 1802 3772 839  
1803 1803 3773 840  
1804 1804 3774 841  
1805 1805 3775 842  
1806 1806 3776 843  
1807 1807 3777 844  
1808 1808 3778 845  
1809 1809 3779 846  
1810 1810 3780 847  
1811 1811 3781 848  
1812 1812 3782 849  
1813 1813 3783 850  
1814 1814 3784 851  
1815 1815 3785 852  
1816 1816 3786 853  
1817 1817 3787 854  
1818 1818 3788 855  
1819 1819 3789 856  
1820 1820 3790 857  
1821 1821 3791 858  
1822 1822 3792 859  
1823 1823 3793 860  
1824 1824 3794 861  
1825 1825 3795 862  
1826 1826 3796 863  
1827 1827 3797 864  
1828 1828 3798 865  
1829 1829 3799 866  
1830 1830 3800 867  
1831 1831 3801 868  
1832 1832 3802 869  
1833 1833 3803 870  
1834 1834 3804 871  
1835 1835 3805 872  
1836 1836 3806 873  
1837 1837 3807 874  
1838 1838 3808 875  
1839 1839 3809 876  
1840 1840 3810 877  
1841 1841 3811 878  
1842 1842 3812 879  
1843 1843 3813 880  
1844 1844 3814 881  
1845 1845 3815 882  
1846 1846 3816 883  
1847 1847 3817 884  
1848 1848 3818 885  
1849 1849 3819 886  
1850 1850 3820 887  
1851 1851 3821 888  
1852 1852 3822 889  
1853 1853 3823 890  
1854 1854 3824 891  
1855 1855 3825 892  
1856 1856 3826 893  
1857 1857 3827 894  
1858 1858 3828 895  
1859 1859 3829 896  
1860 1860 3830 897  
1861 1861 3831 898  
1862 1862 3832 899  
1863 1863 3833 900  
1864 1864 3834 901  
1865 1865 3835 902  
1866 1866 3836 903  
1867 1867 3837 904  
1868 1868 3838 905  
1869 1869 3839 906  
1870 1870 3840 907  
1871 1871 3841 908  
1872 1872 3842 909  
1873 1873 3843 910  
1874 1874 3844 911  
1875 1875 3845 912  
1876 1876 3846 913  
1877 1877 3847 914  
1878 1878 3848 915  
1879 1879 3849 916  
1880 1880 3850 917  
1881 1881 3851 918  
1882 1882 3852 919  
1883 1883 3853 920  
1884 1884 3854 921  
1885 1885 3855 922  
1886 1886 3856 923  
1887 1887 3857 924  
1888 1888 3858 925  
1889 1889 3859 926  
1890 1890 3860 927  
1891 1891 3861 928  
1892 1892 3862 929  
1893 1893 3863 930  
1894 1894 3864 931  
1895 1895 3865 932  
1896 1896 3866 933  
1897 1897 3867 934  
1898 1898 3868 935  
1899 1899 3869 936  
1900 1900 3870 937  
1901 1901 3871 938  
1902 1902 3872 939  
1903 1903 3873 940  
1904 1904 3874 941  
1905 1905 3875 942  
1906 1906 3876 943  
1907 1907 3877 944  
1908 1908 3878 945  
1909 1909 3879 946  
1910 1910 3880 947  
1911 1911 3881 948  
1912 1912 3882 949  
1913 1913 3883 950  
1914 1914 3884 951  
1915 1915 3885 952  
1916 1916 3886 953  
1917 1917 3887 954  
1918 1918 3888 955  
1919 1919 3889 956  
1920 1920 3890 957  
1921 1921 3891 958  
1922 1922 3892 959  
1923 1923 3893 960  
1924 1924 3894 961  
1925 1925 3895 962  
1926 1926 3896 963  
1927 1927 3897 964  
1928 1928 3898 965  
1929 1929 3899 966  
1930 1930 3900 967  
1931 1931 3901 968  
1932 1932 3902 969  
1933 1933 3903 970  
1934 1934 3904 971  
1935 1935 3905 972  
1936 1936 3906 973  
1937 1937 3907 974  
1938 1938 3908 975  
1939 1939 3909 976  
1940 1940 3910 977  
1941 1941 3911 978  
1942 1942 3912 979  
1943 1943 3913 980  
1944 1944 3914 981  
1945 1945 3915 982  
1946 1946 3916 983  
1947 1947 3917 984  
1948 1948 3918 985  
1949 1949 3919 986  
1950 1950 3920 987  
1951 1951 3921 988  
1952 1952 3922 989  
1953 1953 3923 990  
1954 1954 3924 991  
1955 1955 3925 992  
1956 1956 3926 993  
1957 1957 3927 994  
1958 1958 3928 995  
1959 1959 3929 996  
1960 1960 3930 997  
1961 1961 3931 998  
1962 1962 3932 999  
1963 1963 3933 1000  
1964 1964 3934 1001  
1965 1965 3935 1002  
1966 1966 3936 1003  
1967 1967 3937 1004  
1968 1968 3938 1005  
1969 1969 3939 1006  
1970 1970 3940 1007  
1971 1971 3941 1008  
1972 1972 3942 1009  
1973 1973 3943 1010  
1974 1974 3944 1011  
1975 1975 3945 1012  
1976 1976 3946 1013  
1977 1977 3947 1014  
1978 1978 3948 1015  
1979 1979 3949 1016  
1980 1980 3950 1017  
1981 1981 3951 1018  
1982 1982 3952 1019  
1983 1983 3953 1020  
1984 1984 3954 1021  
1985 1985 3955 1022  
1986 1986 3956 1023  
1987 1987 3957 1024  
1988 1988 3958 1025  
1989 1989 3959 1026  
1990 1990 3960 1027  
1991 1991 3961 1028  
1992 1992 3962 1029  
1993 1993 3963 1030  
1994 1994 3964 1031  
1995 1995 3965 1032  
1996 1996 3966 1033  
1997 1997 3967 1034  
1998 1998 3968 1035  
1999 1999 3969 1036  
2000 2000 3970 1037  
2001 2001 3971 1038  
2002 2002 3972 1039  
2003 2003 3973 1040  
2004 2004 3974 1041  
2005 2005 3975 1042  
2006 2006 3976 1043  
2007 2007 3977 1044  
2008 2008 3978 1045  
2009 2009 3979 1046  
2010 2010 3980 1047  
2011 2011 3981 1048  
2012 2012 3982 1049  
2013 2013 3983 1050  
2014 2014 3984 1051  
2015 2015 3985 1052  
2016 2016 3986 1053  
2017 2017 3987 1054  
2018 2018 3988 1055  
2019 2019 3989 1056  
2020 2020 3990 1057  
2021 2021 3991 1058  
2022 2022 3992 1059  
2023 2023 3993 1060  
2024 2024 3994 1061  
2025 2025 3995 1062  
2026 2026 3996 1063  
2027 2027 3997 1064  
2028 2028 3998 1065  
2029 2029 3999 1066  
2030 2030 4000 1067  
2031 2031 4001 1068  
2032 2032 4002 1069  
2033 2033 4003 1070  
2034 2034 4004 1071  
2035 2035 4005 1072  
2036 2036 4006 1073  
2037 2037 4007 1074  
2038 2038 4008 1075  
2039 2039 4009 1076  
2040 2040 4010 1077  
2041 2041 4011 1078  
2042 2042 4012 1079  
2043 2043 4013 1080  
2044 2044 4014 1081  
2045 2045 4015 1082  
2046 2046 4016 1083  
2047 2047 4017 1084  
2048 2048 4018 1085  
2049 2049 4019 1086  
2050 2050 4020 1087  
2051 2051 4021 1088  
2052 2052 4022 1089  
2053 2053 4023 1090  
2054 2054 4024 1091  
2055 2055 4025 1092  
2056 2056 4026 1093  
2057 2057 4027 1094  
2058 2058 4028 1095  
2059 2059 4029 1096  
2060 2060 4030 1097  
2061 2061 4031 1098  
2062 2062 4032 1099  
2063 2063 4033 1100  
2064 2064 4034 1101  
2065 2065 4035 1102  
2066 2066 4036 1103  
2067 2067 4037 1104  
2068 2068 4038 1105  
2069 2069 4039 1106  
2070 2070 4040 1107  
2071 2071 4041 1108  
2072 2072 4042 1109  
2073 2073 4043 1110  
2074 2074 4044 1111  
2075 2075 4045 1112  
2076 2076 4046 1113  
2077 2077 4047 1114  
2078 2078 4048 1115  
2079 2079 4049 1116  
2080 2080 4050 1117  
2081 2081 4051 1118  
2082 2082 4052 1119  
2083 2083 4053 1120  
2084 2084 4054 1121  
2085 2085 4055 1122  
2086 2086 4056 1123  
2087 2087 4057 1124  
2088 2088 4058 1125  
2089 2089 4059 1126  
2090 2090 4060 1127  
2091 2091 4061 1128  
2092 2092 4062 1129  
2093 2093 4063 1130  
2094 2094 4064 1131  
2095 2095 4065 1132  
2096 2096 4066 1133  
2097 2097 4067 1134  
2098 2098 4068 1135  
2099 2099 4069 1136  
2100 2100 4070 1137  
2101 2101 4071 1138  
2102 2102 4072 1139  
2103 2103 4073 1140  
2104 2104 4074 1141  
2105 2105 4075 1142  
2106 2106 4076 1143  
2107 2107 4077 1144  
2108 2108 4078 1145  
2109 2109 4079 1146  
2110 2110 4080 1147  
2111 2111 4081 1148  
2112 2112 4082 1149  
2113 2113 4083 1150  
2114 2114 4084 1151  
2115 2115 4085 1152  
2116 2116 4086 1153  
2117 2117 4087 1154  
2118 2118 4088 1155  
2119 2119 4089 1156  
2120 2120 4090 1157  
2121 2121 4091 1158  
2122 2122 4092 1159  
2123 2123 4093 1160  
2124 2124 4094 1161  
2125 2125 4095 1162  
2126 2126 4096 1163  
2127 2127 4097 1164  
2128 2128 4098 1165  
2129 2129 4099 1166  
2130 2130 4100 1167  
2131 2131 4101 1168  
2132 2132 4102 1169  
2133 2133 4103 1170  
2134 2134 4104 1171  
2135 2135 4105 1172  
2136 2136 4106 1173  
2137 2137 4107 1174  
2138 2138 4108 1175  
2139 2139 4109 1176  
2140 2140 4110 1177  
2141 2141 4111 1178  
2142 2142 4112 1179  
2143 2143 4113 1180  
2144 2144 4114 1181  
2145 2145 4115 1182  
2146 2146 4116 1183  
2147 2147 4117 1184  
2148 2148 4118 1185  
2149 2149 4119 1186  
2150 2150 4120 1187  
2151 2151 4121 1188  
2152 2152 4122 1189  
2153 2153 4123 1190  
2154 2154 4124 1191  
2155 2155 4125 1192  
2156 2156 4126 1193  
2157 2157 4127 1194  
2158 2158 4128 1195  
2159 2159 4129 1196  
2160 2160 4130 1197  
2161 2161 4131 1198  
2162 2162 4132 1199  
2163 2163 4133 1200  
2164 2164 4134 1201  
2165 2165 4135 1202  
2166 2166 4136 1203  
2167 2167 4137 1204  
2168 2168 4138 1205  
2169 2169 4139 1206  
2170 2170 4140 1207  
2171 2171 4141 1208  
2172 2172 4142 1209  
2173 2173 4143 1210  
2174 2174 4144 1211  
2175 2175 4145 1212  
2176 2176 4146 1213  
2177 2177 4147 1214  
2178 2178 4148 1215  
2179 2179 4149 1216  
2180 2180 4150 1217  
2181 2181 4151 1218  
2182 2182 4152 1219  
2183 2183 4153 1220  
2184 2184 4154 1221  
2185 2185 4155 1222  
2186 2186 4156 1223  
2187 2187 4157 1224  
2188 2188 4158 1225  
2189 2189 4159 1226  
2190 2190 4160 1227  
2191 2191 4161 1228  
2192 2192 4162 1229  
2193 2193 4163 1230  
2194 2194 4164 1231  
2195 2195 4165 1232  
2196 2196 4166 1233  
2197 2197 4167 1234  
2198 2198 4168 1235  
2199 2199 4169 1236  
2200 2200 4170 1237  
2201 2201 4171 1238  
2202 2202 4172 1239  
2203 2203 4173 1240  
2204 2204 4174 1241  
2205 2205 4175 1242  
2206 2206 4176 1243  
2207 2207 4177 1244  
2208 2208 4178 1245  
2209 2209 4179 1246  
2210 2210 4180 1247  
2211 2211 4181 1248  
2212 2212 4182 1249  
2213 2213 4183 1250  
2214 2214 4184 1251  
2215 2215 4185 1252  
2216 2216 4186 1253  
2217 2217 4187 1254  
2218 2218 4188 1255  
2219 2219 4189 1256  
2220 2220 4190 1257  
2221 2221 4191 1258  
2222 2222 4192 1259  
2223 2223 4193 1260  
2224 2224 4194 1261  
2225 2225 4195 1262  
2226 2226 4196 1263  
2227 2227 4197 1264  
2228 2228 4198 1265  
2229 2229 4199 1266  
2230 2230 4200 1267  
2231 2231 4201 1268  
2232 2232 4202 1269  
2233 2233 4203 1270  
2234 2234 4204 1271  
2235 2235 4205 1272  
2236 2236 4206 1273  
2237 2237 4207 1274  
2238 2238 4208 1275  
2239 2239 4209 1276  
2240 2240 4210 1277  
2241 2241 4211 1278  
2242 2242 4212 1279  
2243 2243 4213 1280  
2244 2244 4214 1281  
2245 2245 4215 1282  
2246 2246 4216 1283  
2247 2247 4217 1284  
2248 2248 4218 1285  
2249 2249 4219 1286  
2250 2250 4220 1287  
2251 2251 4221 1288  
2252 2252 4222 1289  
2253 2253 4223 1290  
2254 2254 4224 1291  
2255 2255 4225 1292  
2256 2256 4226 1293  
2257 2257 4227 1294  
2258 2258 4228 1295  
2259 2259 4229 1296  
2260 2260 4230 1297  
2261 2261 4231 1298  
2262 2262 4232 1299  
2263 2263 4233 1300  
2264 2264 4234 1301  
2265 2265 4235 1302  
2266 2266 4236 1303  
2267 2267 4237 1304  
2268 2268 4238 1305  
2269 2269 4239 1306  
2270 2270 4240 1307  
2271 2271 4241 1308  
2272 2272 4242 1309  
2273 2273 4243 1310  
2274 2274 4244 1311  
2275 2275 4245 1312  
2276 2276 4246 1313  
2277 2277 4247 1314  
2278 2278 4248 1315  
2279 2279 4249 1316  
2280 2280 4250 1317  
2281 2281 4251 1318  
2282 2282 4252 1319  
2283 2283 4253 1320  
2284 2284 4254 1321  
2285 2285 4255 1322  
2286 2286 4256 1323  
2287 2287 4257 1324  
2288 2288 4258 1325  
2289 2289 4259 1326  
2290 2290 4260 1327  
2291 2291 4261 1328  
2292 2292 4262 1329  
2293 2293 4263 1330  
2294 2294 4264 1331  
2295 2295 4265 1332  
2296 2296 4266 1333  
2297 2297 4267 1334  
2298 2298 4268 1335  
2299 2299 4269 1336  
2300 2300 4270 1337  
2301 2301 4271 1338  
2302 2302 4272 1339  
2303 2303 4273 1340  
2304 2304 4274 1341  
2305 2305 4275 1342  
2306 2306 4276 1343  
2307 2307 4277 1344  
2308 2308 4278 1345  
2309 2309 4279 1346  
2310 2310 4280 1347  
2311 2311 4281 1348  
2312 2312 4282 1349  
2313 2313 4283 1350  
2314 2314 4284 1351  
2315 2315 4285 1352  
2316 2316 4286 1353  
2317 2317 4287 1354  
2318 2318 4288 1355  
2319 2319 4289 1356  
2320 2320 4290 1357  
2321 2321 4291 1358  
2322 2322 4292 1359  
2323 2323 4293 1360  
2324 2324 4294 1361  
2325 2325 4295 1362  
2326 2326 4296 1363  
2327 2327 4297 1364  
2328 2328 4298 1365  
2329 2329 4299 1366  
2330 2330 4300 1367  
2331 2331 4301 1368  
2332 2332 4302 1369  
2333 2333 4303 1370  
2334 2334 4304 1371  
2335 2335 4305 1372  
2336 2336 4306 1373  
2337 2337 4307 1374  
2338 2338 4308 1375  
2339 2339 4309 1376  
2340 2340 4310 1377  
2341 2341 4311 1378  
2342 2342 4312 1379  
2343 2343 4313 1380  
2344 2344 4314 1381  
2345 2345 4315 1382  
2346 2346 4316 1383  
2347 2347 4317 1384  
2348 2348 4318 1385  
2349 2349 4319 1386  
2350 2350 4320 1387  
2351 2351 4321 1388  
2352 2352 4322 1389  
2353 2353 4323 1390  
2354 2354 4324 1391  
2355 2355 4325 1392  
2356 2356 4326 1393  
2357 2357 4327 1394  
2358 2358 4328 1395  
2359 2359 4329 1396  
2360 2360 4330 1397  
2361 2361 4331 1398  
2362 2362 4332 1399  
2363 2363 4333 1400  
2364 2364 4334 1401  
2365 2365 4335 1402  
2366 2366 4336 1403  
2367 2367 4

### Deflection Schematic Diagram

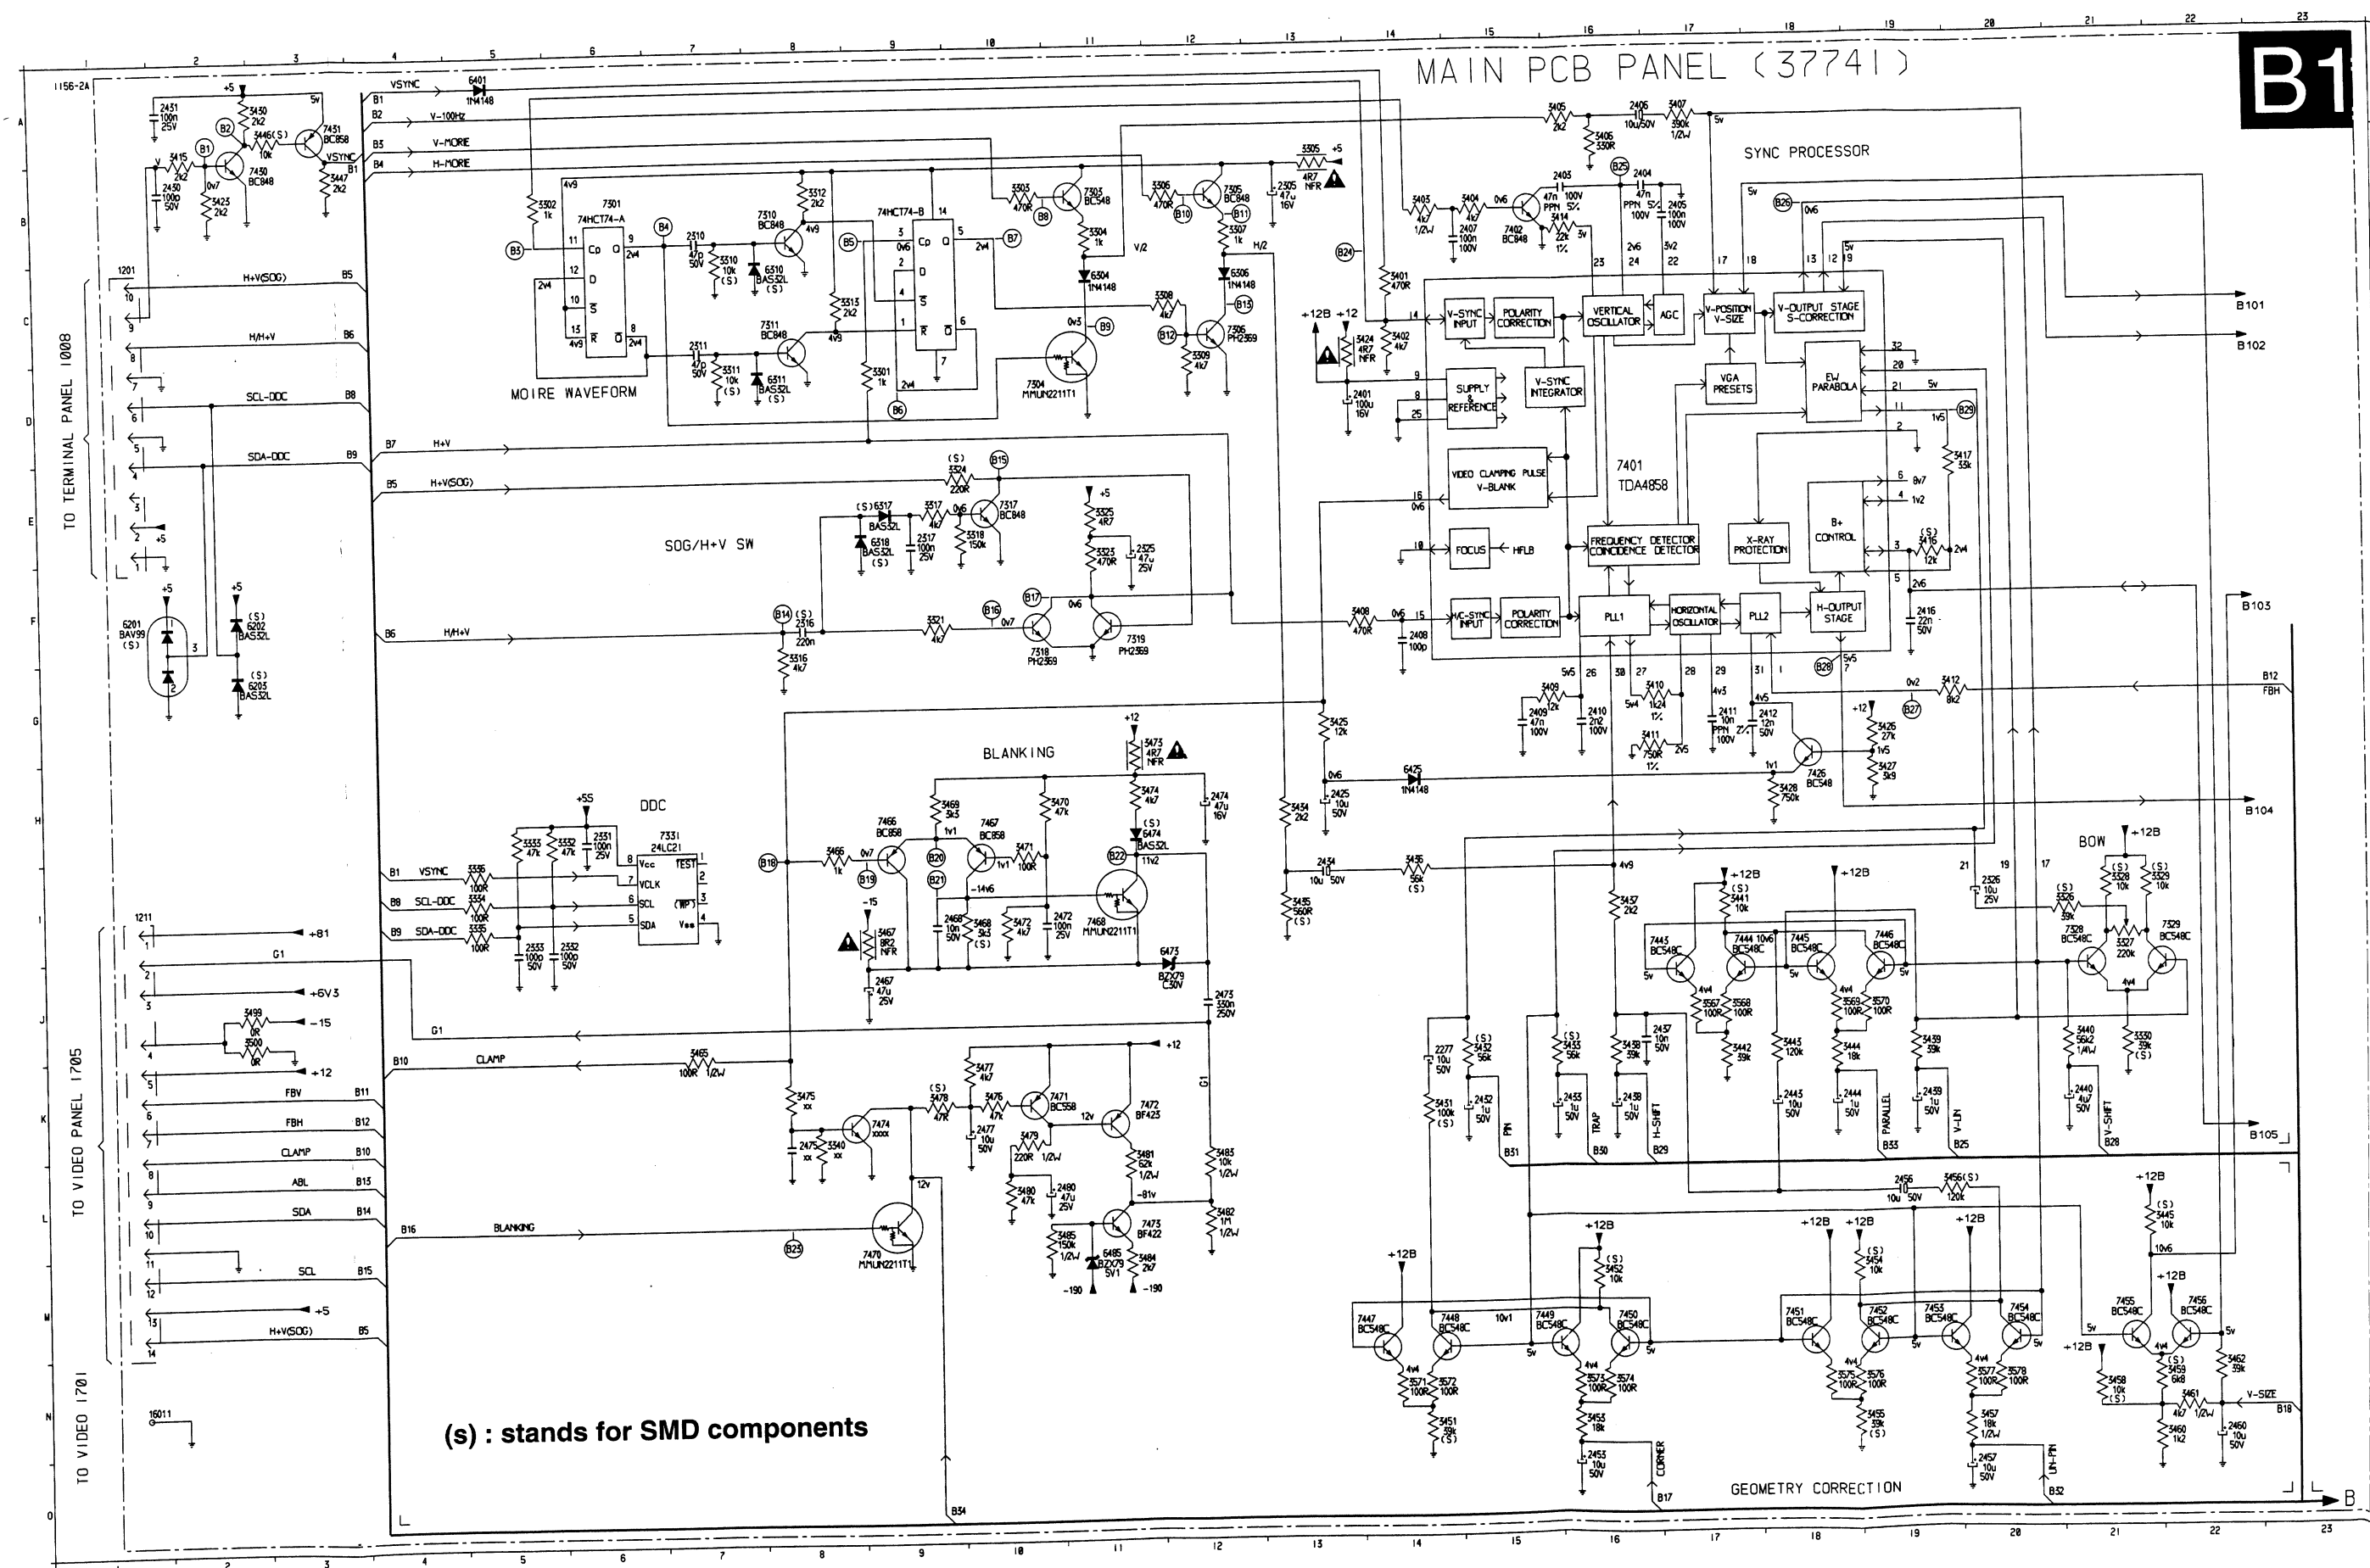

























# Waveforms for Diagram B1 and B2

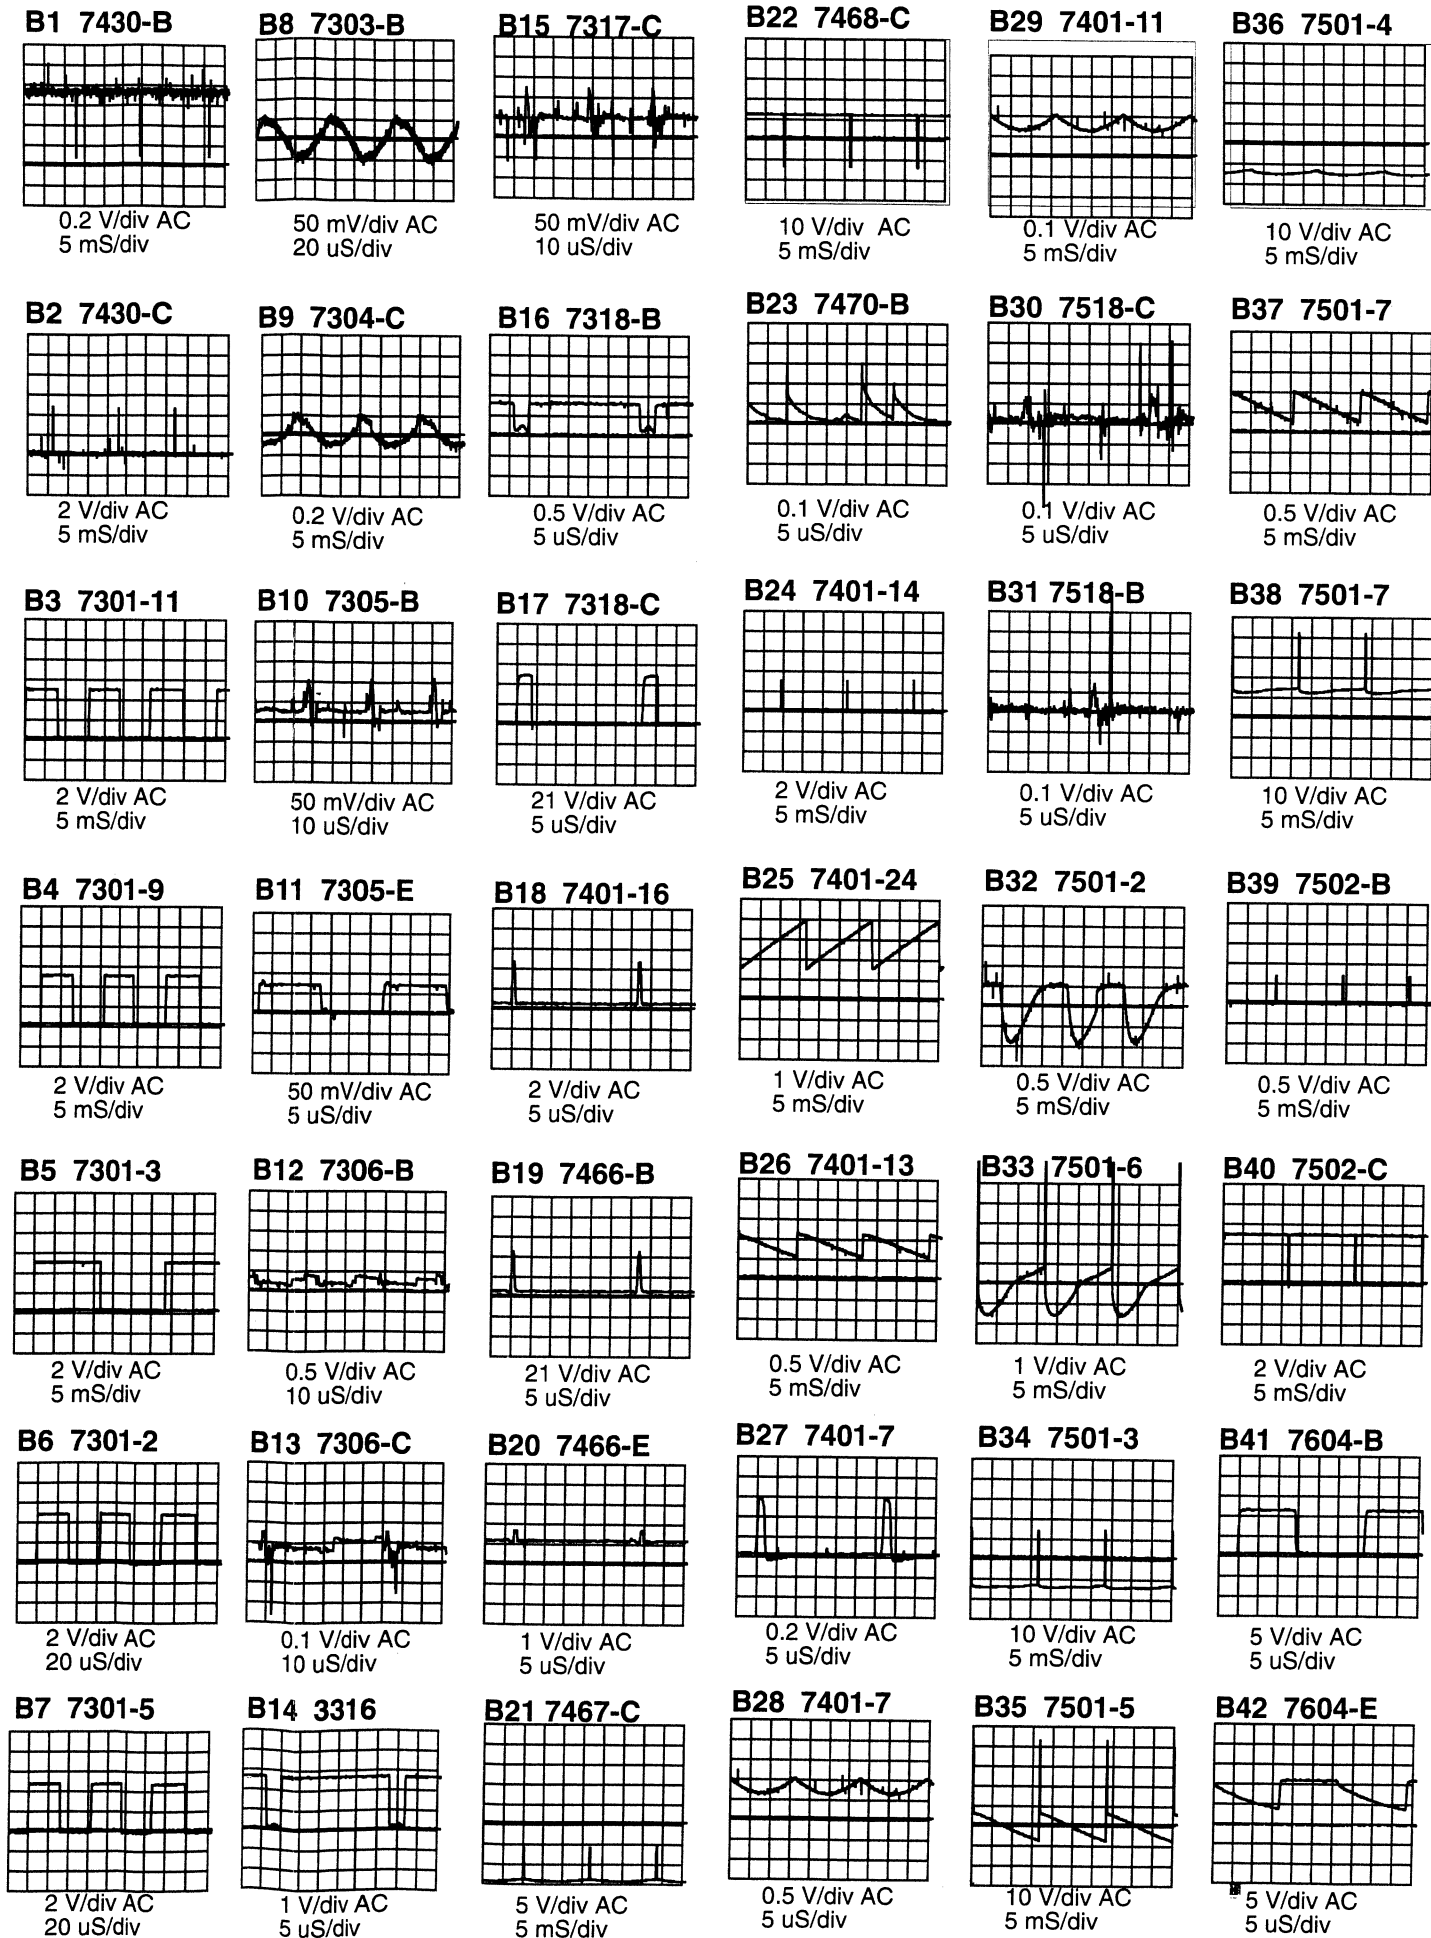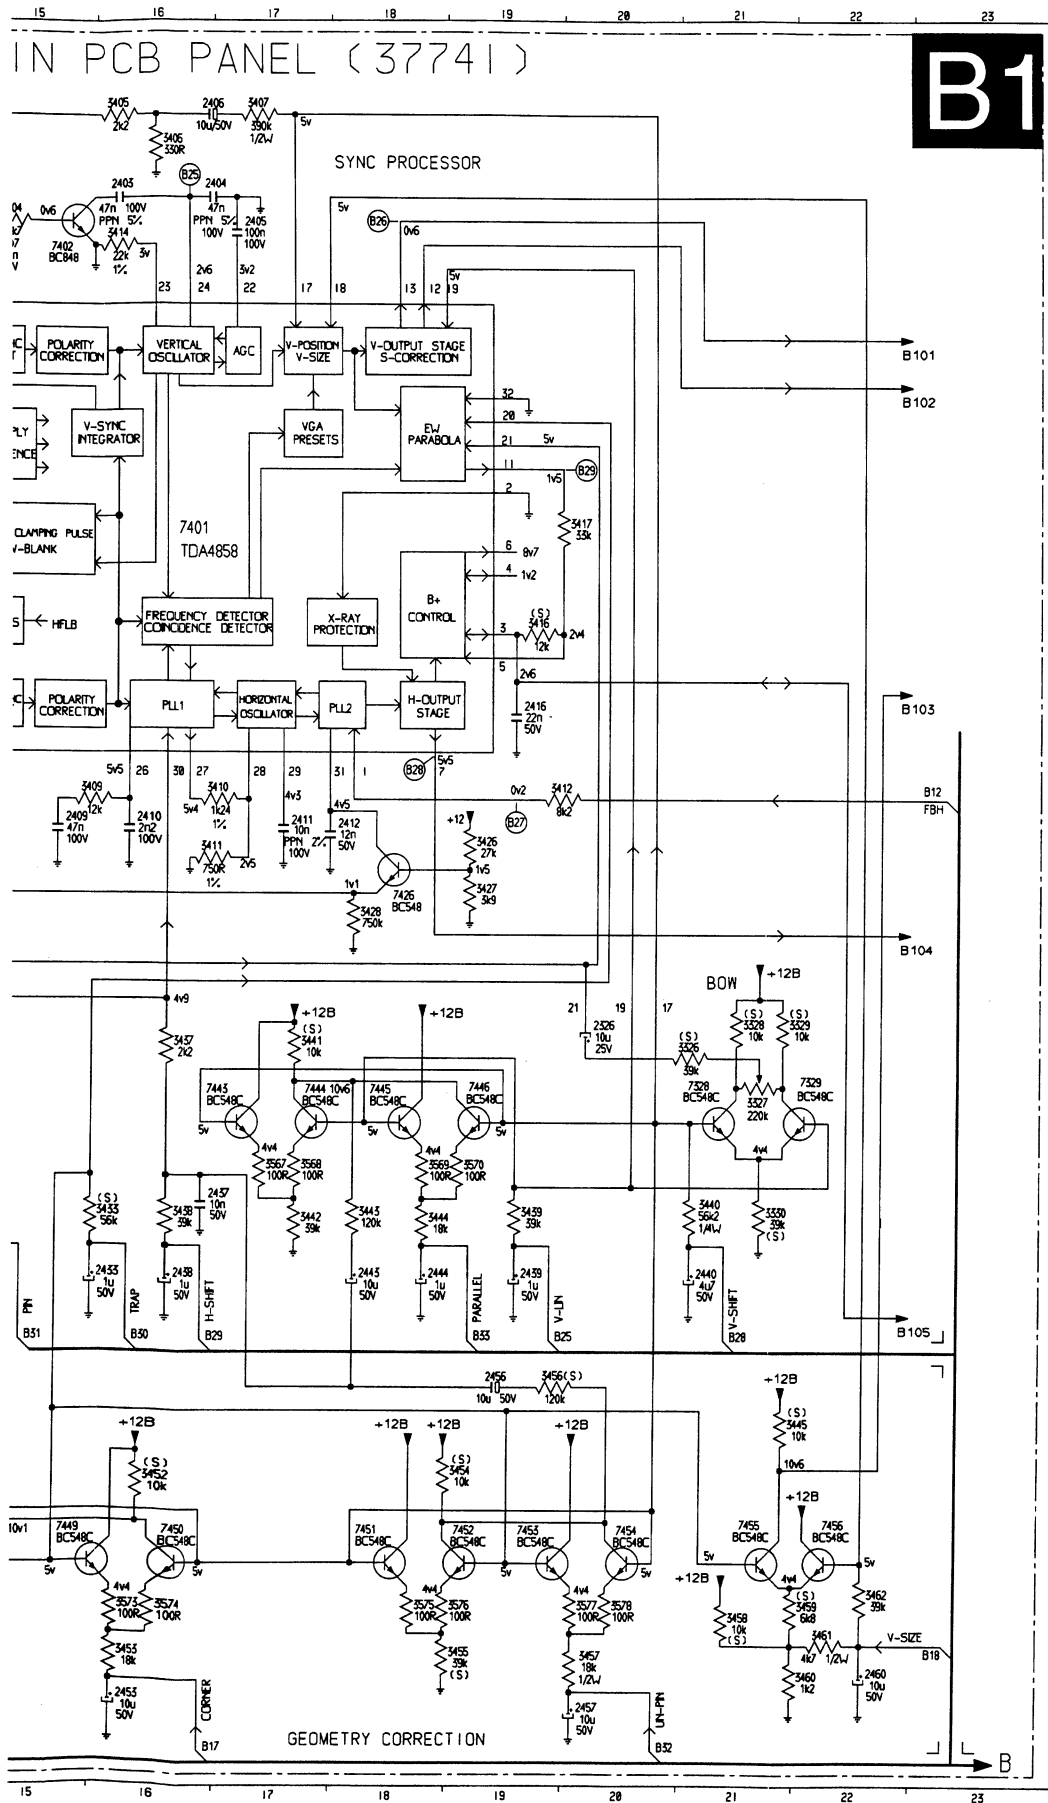

[illegible]
















**(s) : stands**

(s) : stands for SMD components

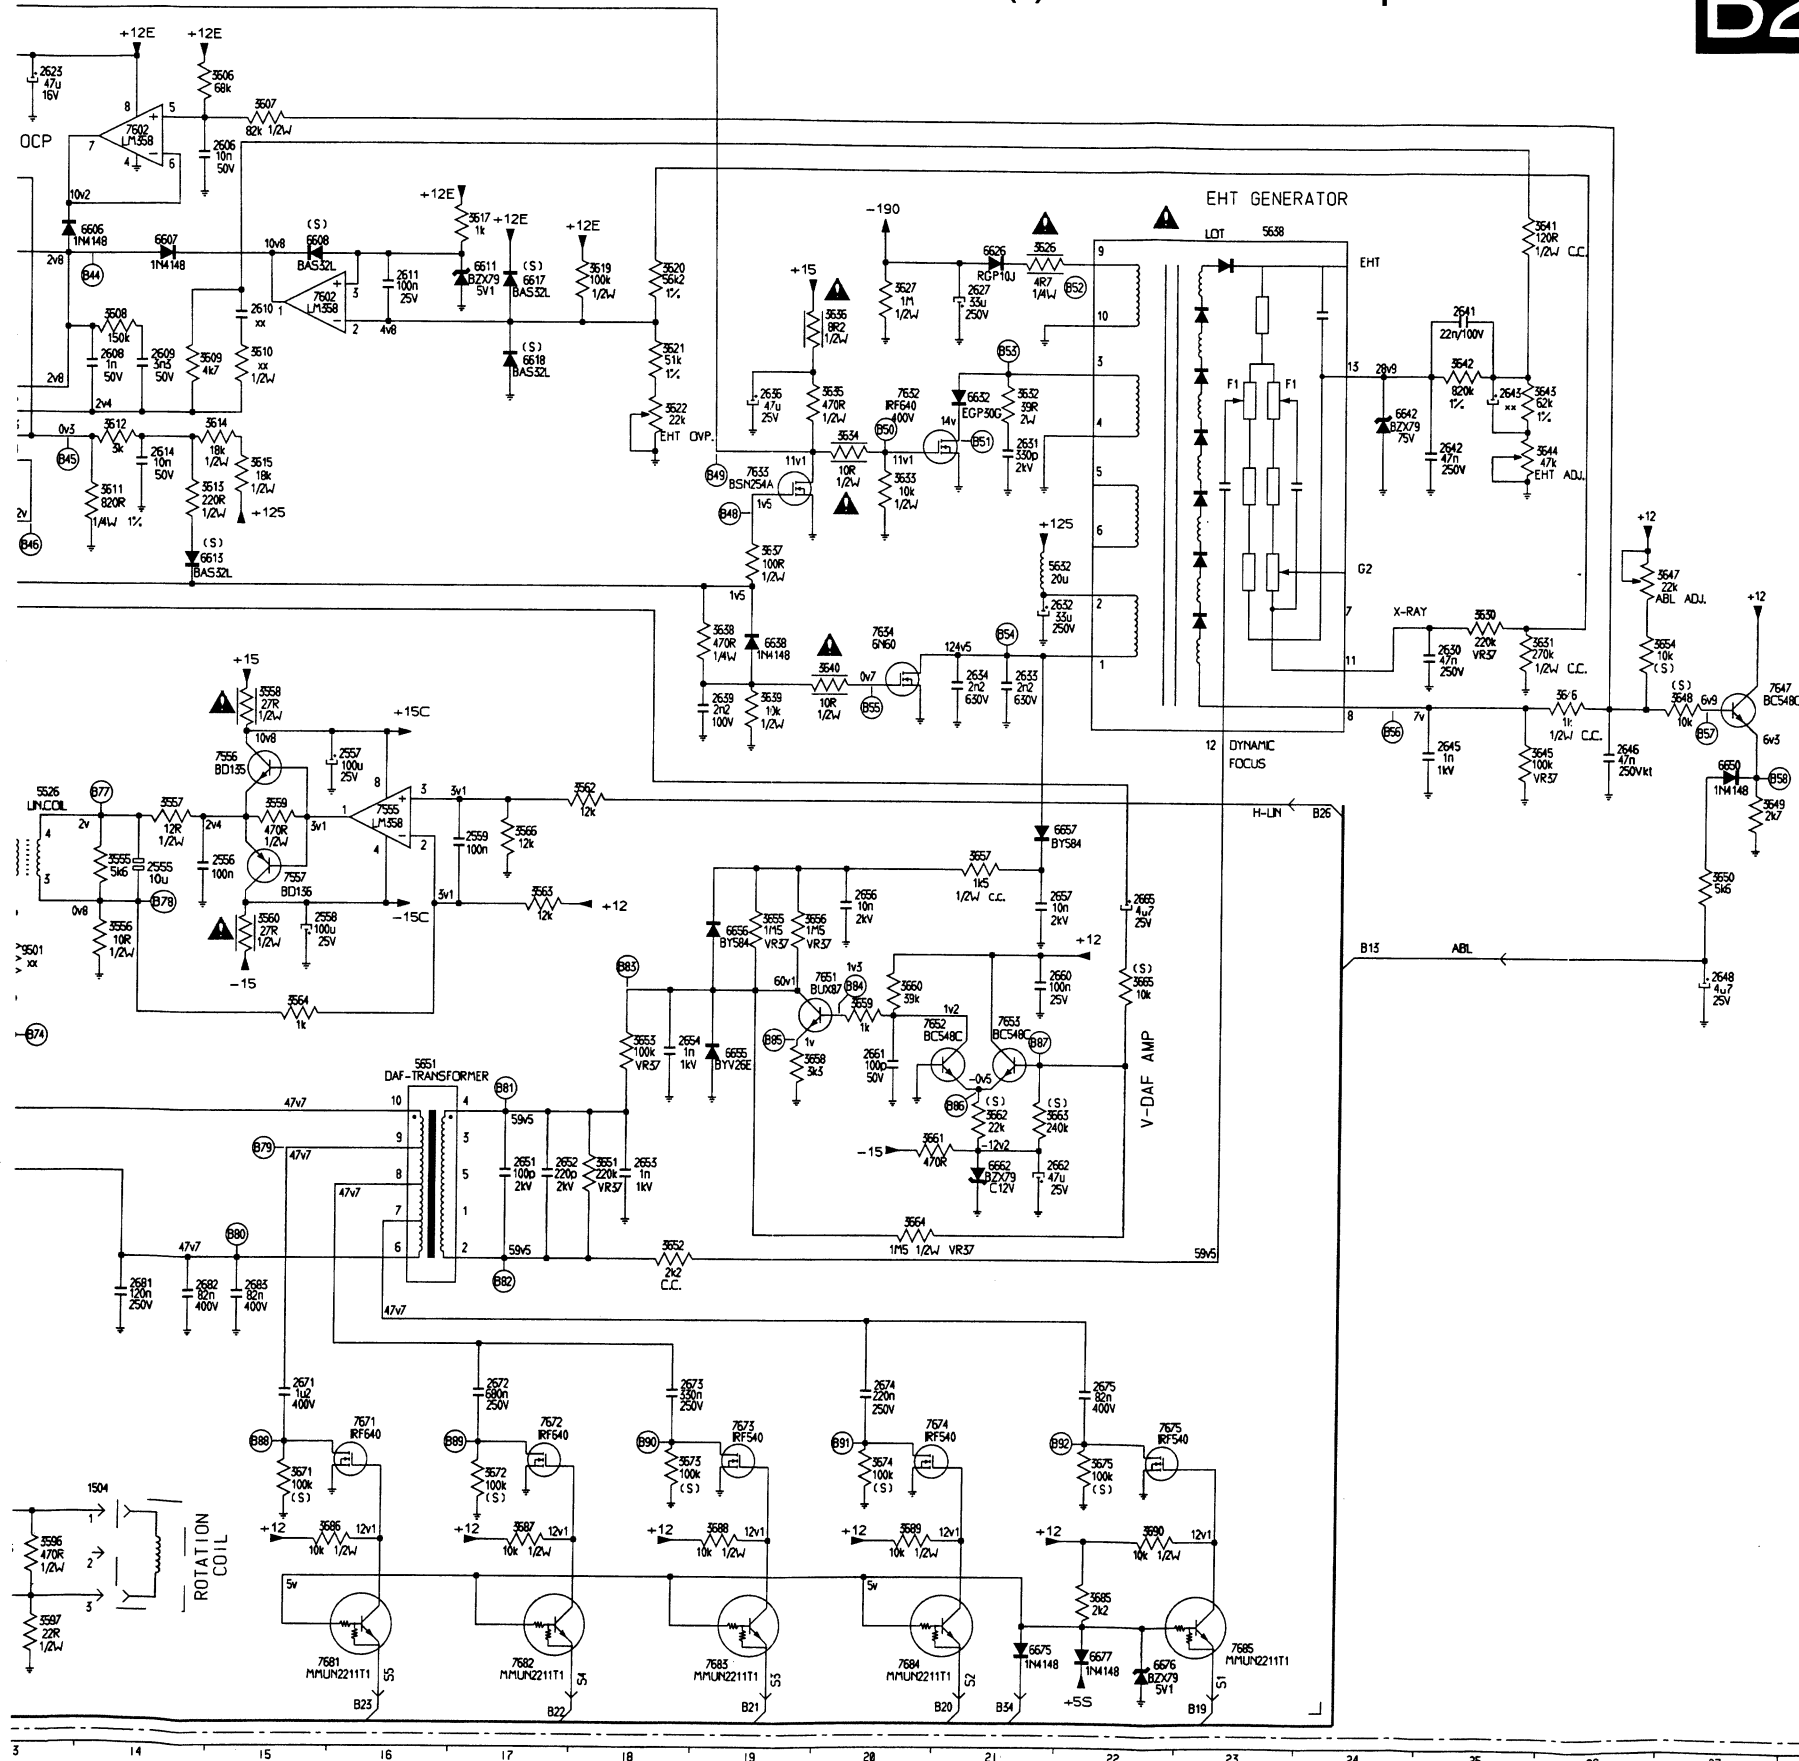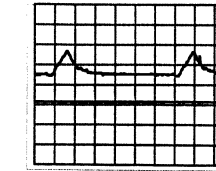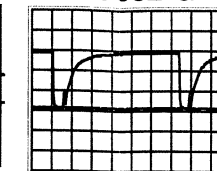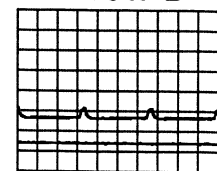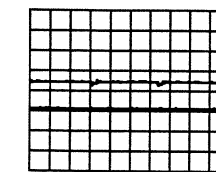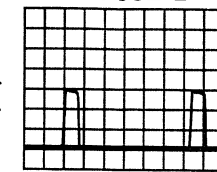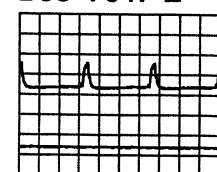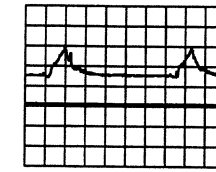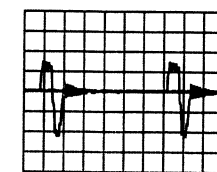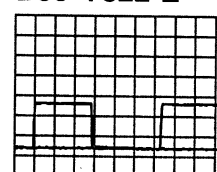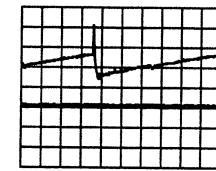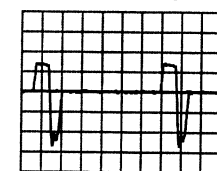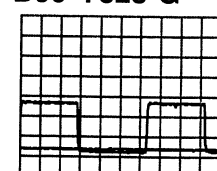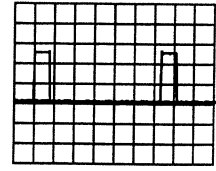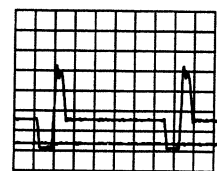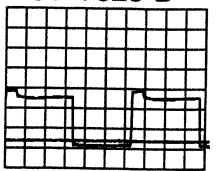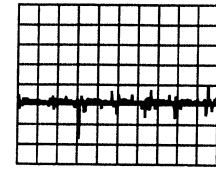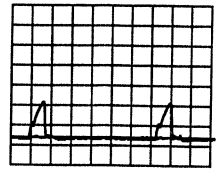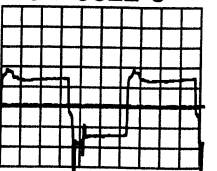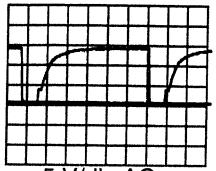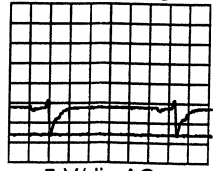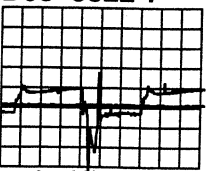**B2****B43 7605-C**0.2 V/div AC  
5 uS/div**B50 7632-G**5 V/div AC  
5 uS/div**B57 7647-B**5 V/div AC  
5 mS/div**B44 7603-E**2 V/div AC  
5 uS/div**B51 7632-D**50 V/div AC  
5 uS/div**B58 7647-E**2 V/div AC  
5 mS/div**B45 7601-3**0.2 V/div AC  
5 uS/div**B52 5638-9**100 V/div AC  
5 uS/div**B59 7522-E**5 V/div AC  
5 uS/div**B46 7601-4**10 V/div AC  
5 uS/div**B53 5638-3**100 V/div AC  
5 uS/div**B60 7523-G**5 V/div AC  
5 uS/div**B47 7601-6**5 V/div AC  
5 uS/div**B54 5638-1**100 V/div AC  
5 uS/div**B61 7523-D**50 V/div AC  
5 uS/div**B48 7633-G**5 V/div AC  
5 uS/div**B55 7634-G**5 V/div AC  
5 uS/div**B62 5522-6**2 V/div AC  
5 uS/div**B49 7633-D**5 V/div AC  
5 uS/div**B56 5638-8**5 V/div AC  
5 uS/div**B63 5522-7**0.5 V/div AC  
5 uS/div




# U-CTRL Schematic Diagram

       B3

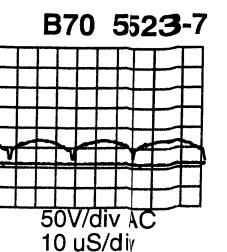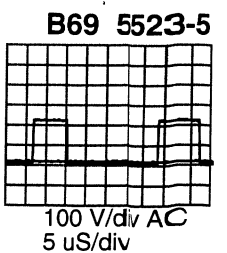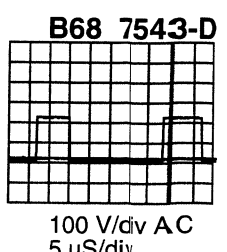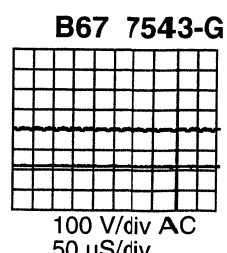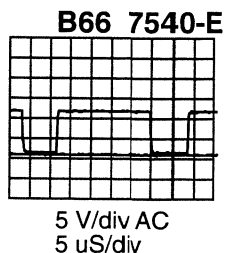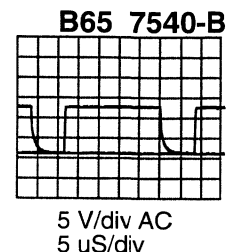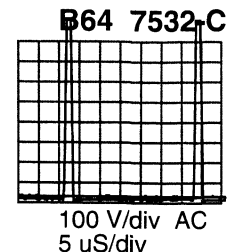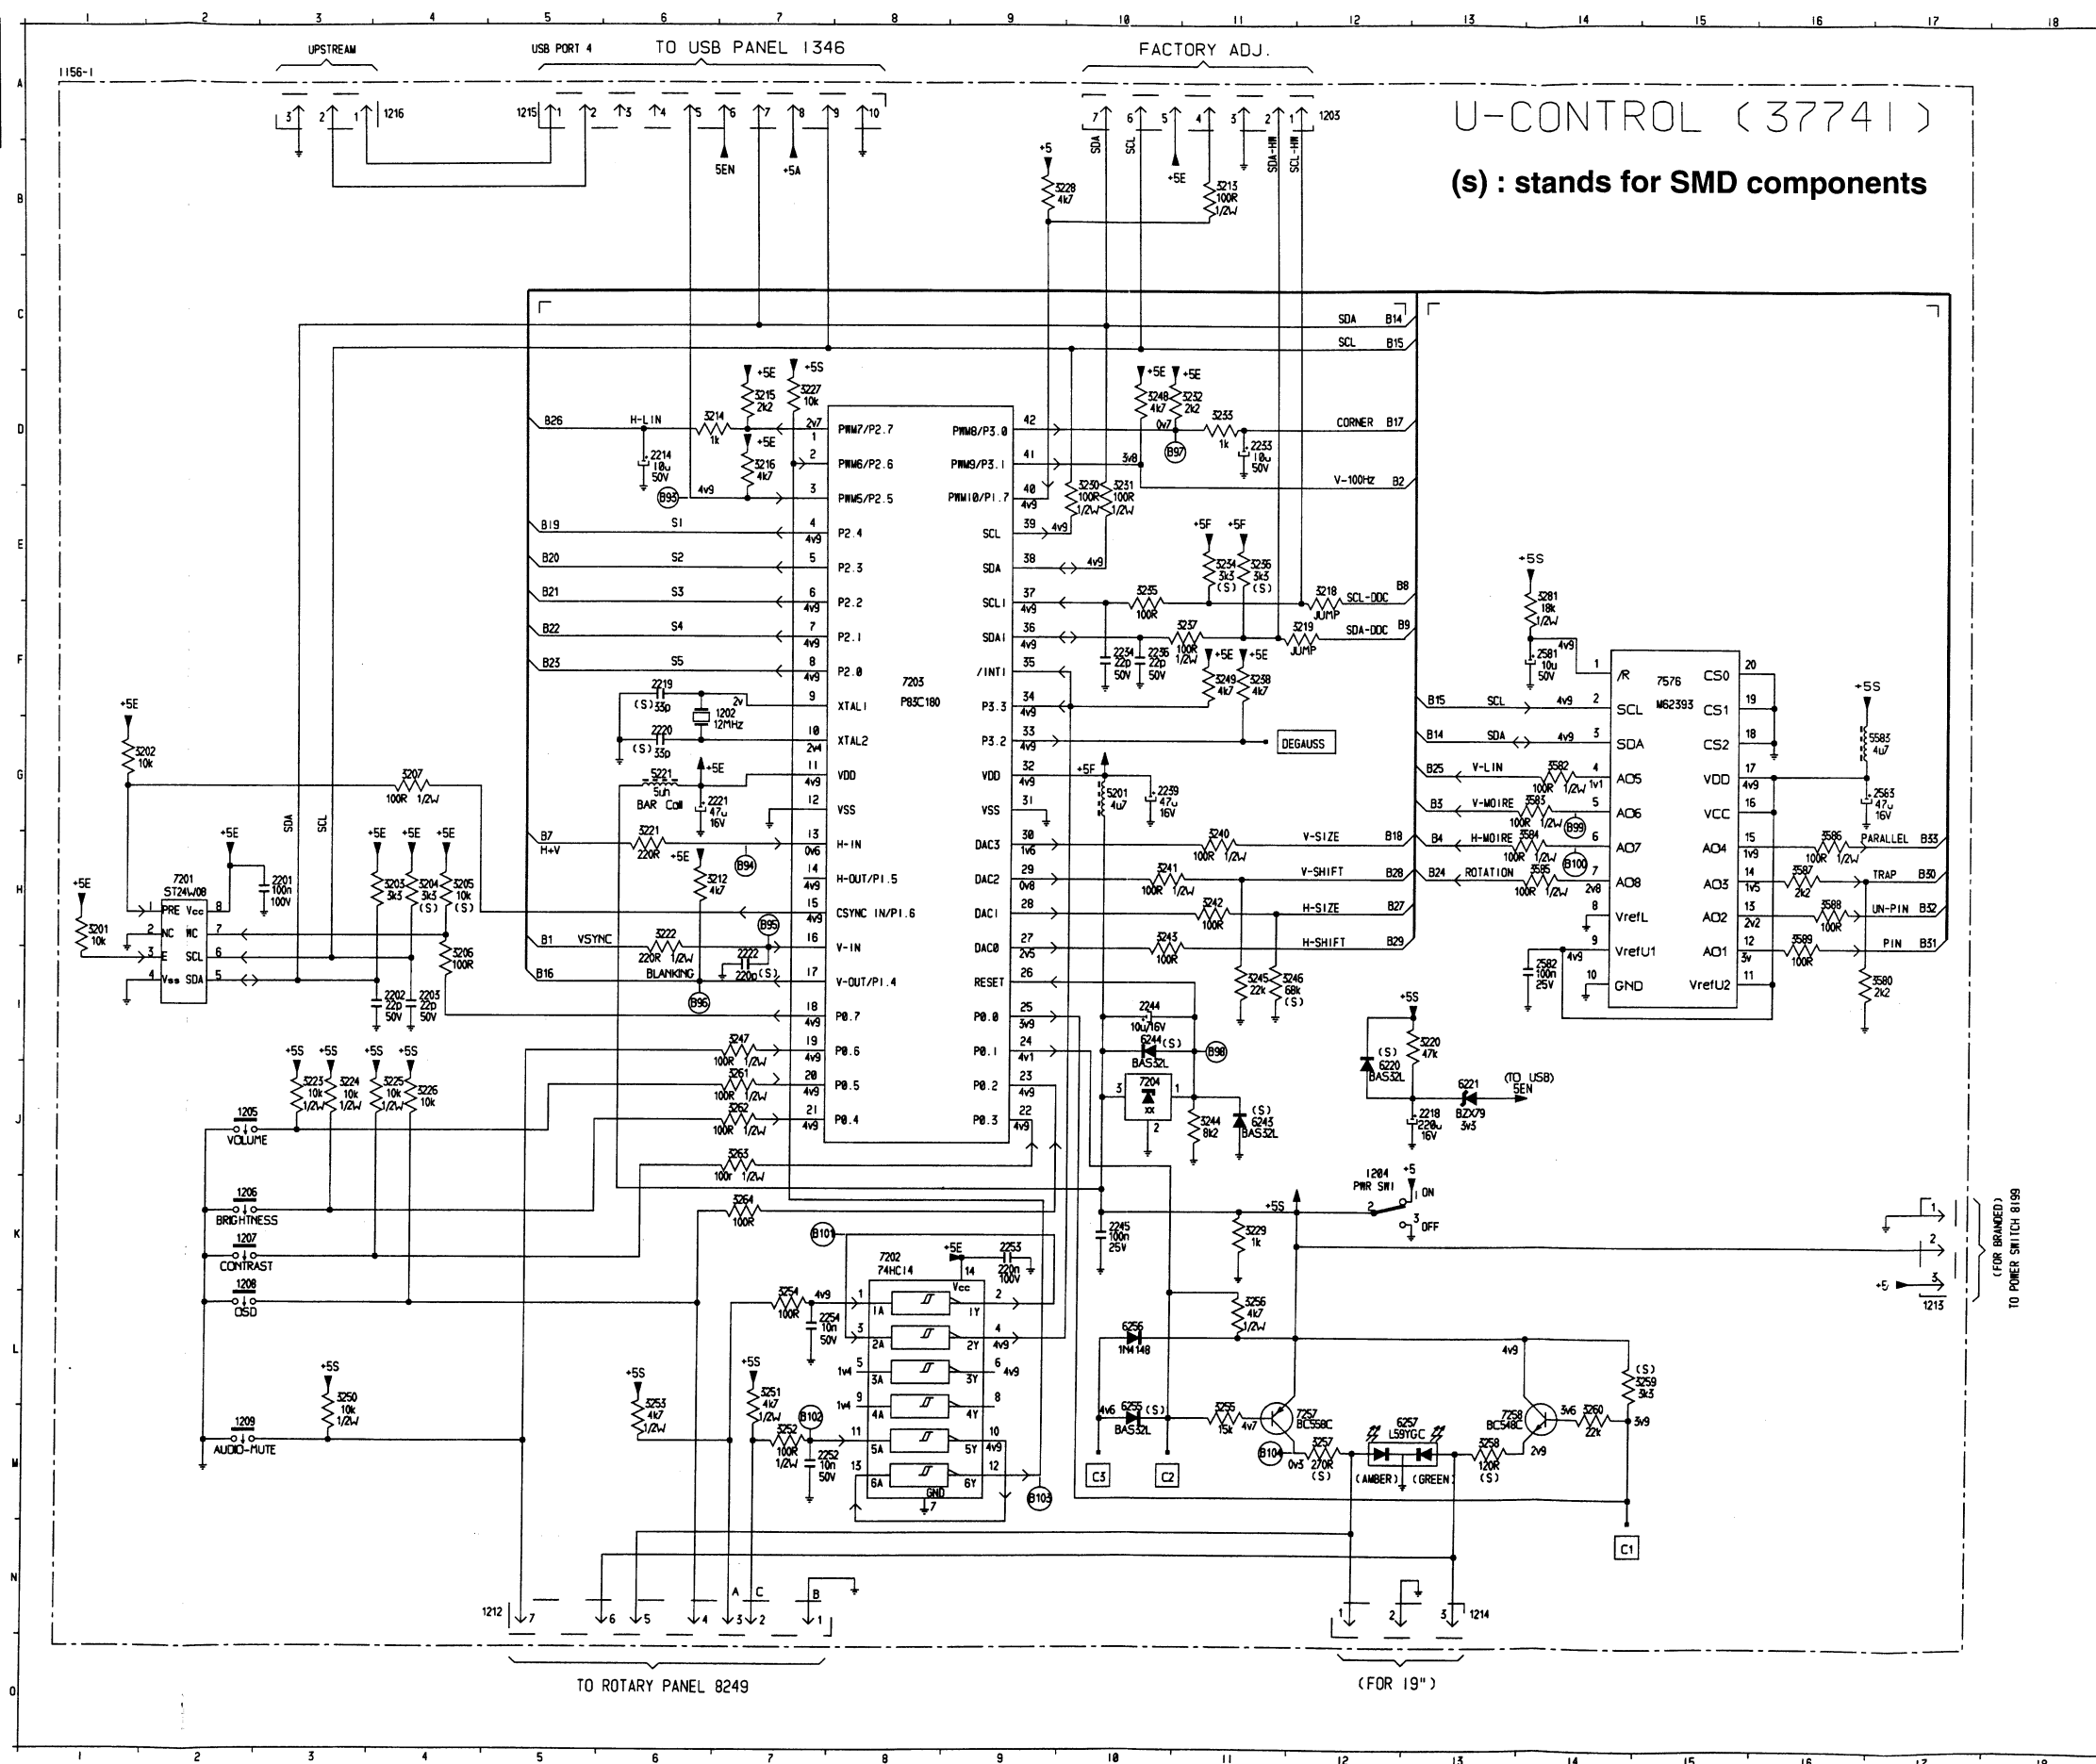


A horizontal scale bar with markings at 14, 15, 16, 17, and 18.


**SMD** : stands for SMD components

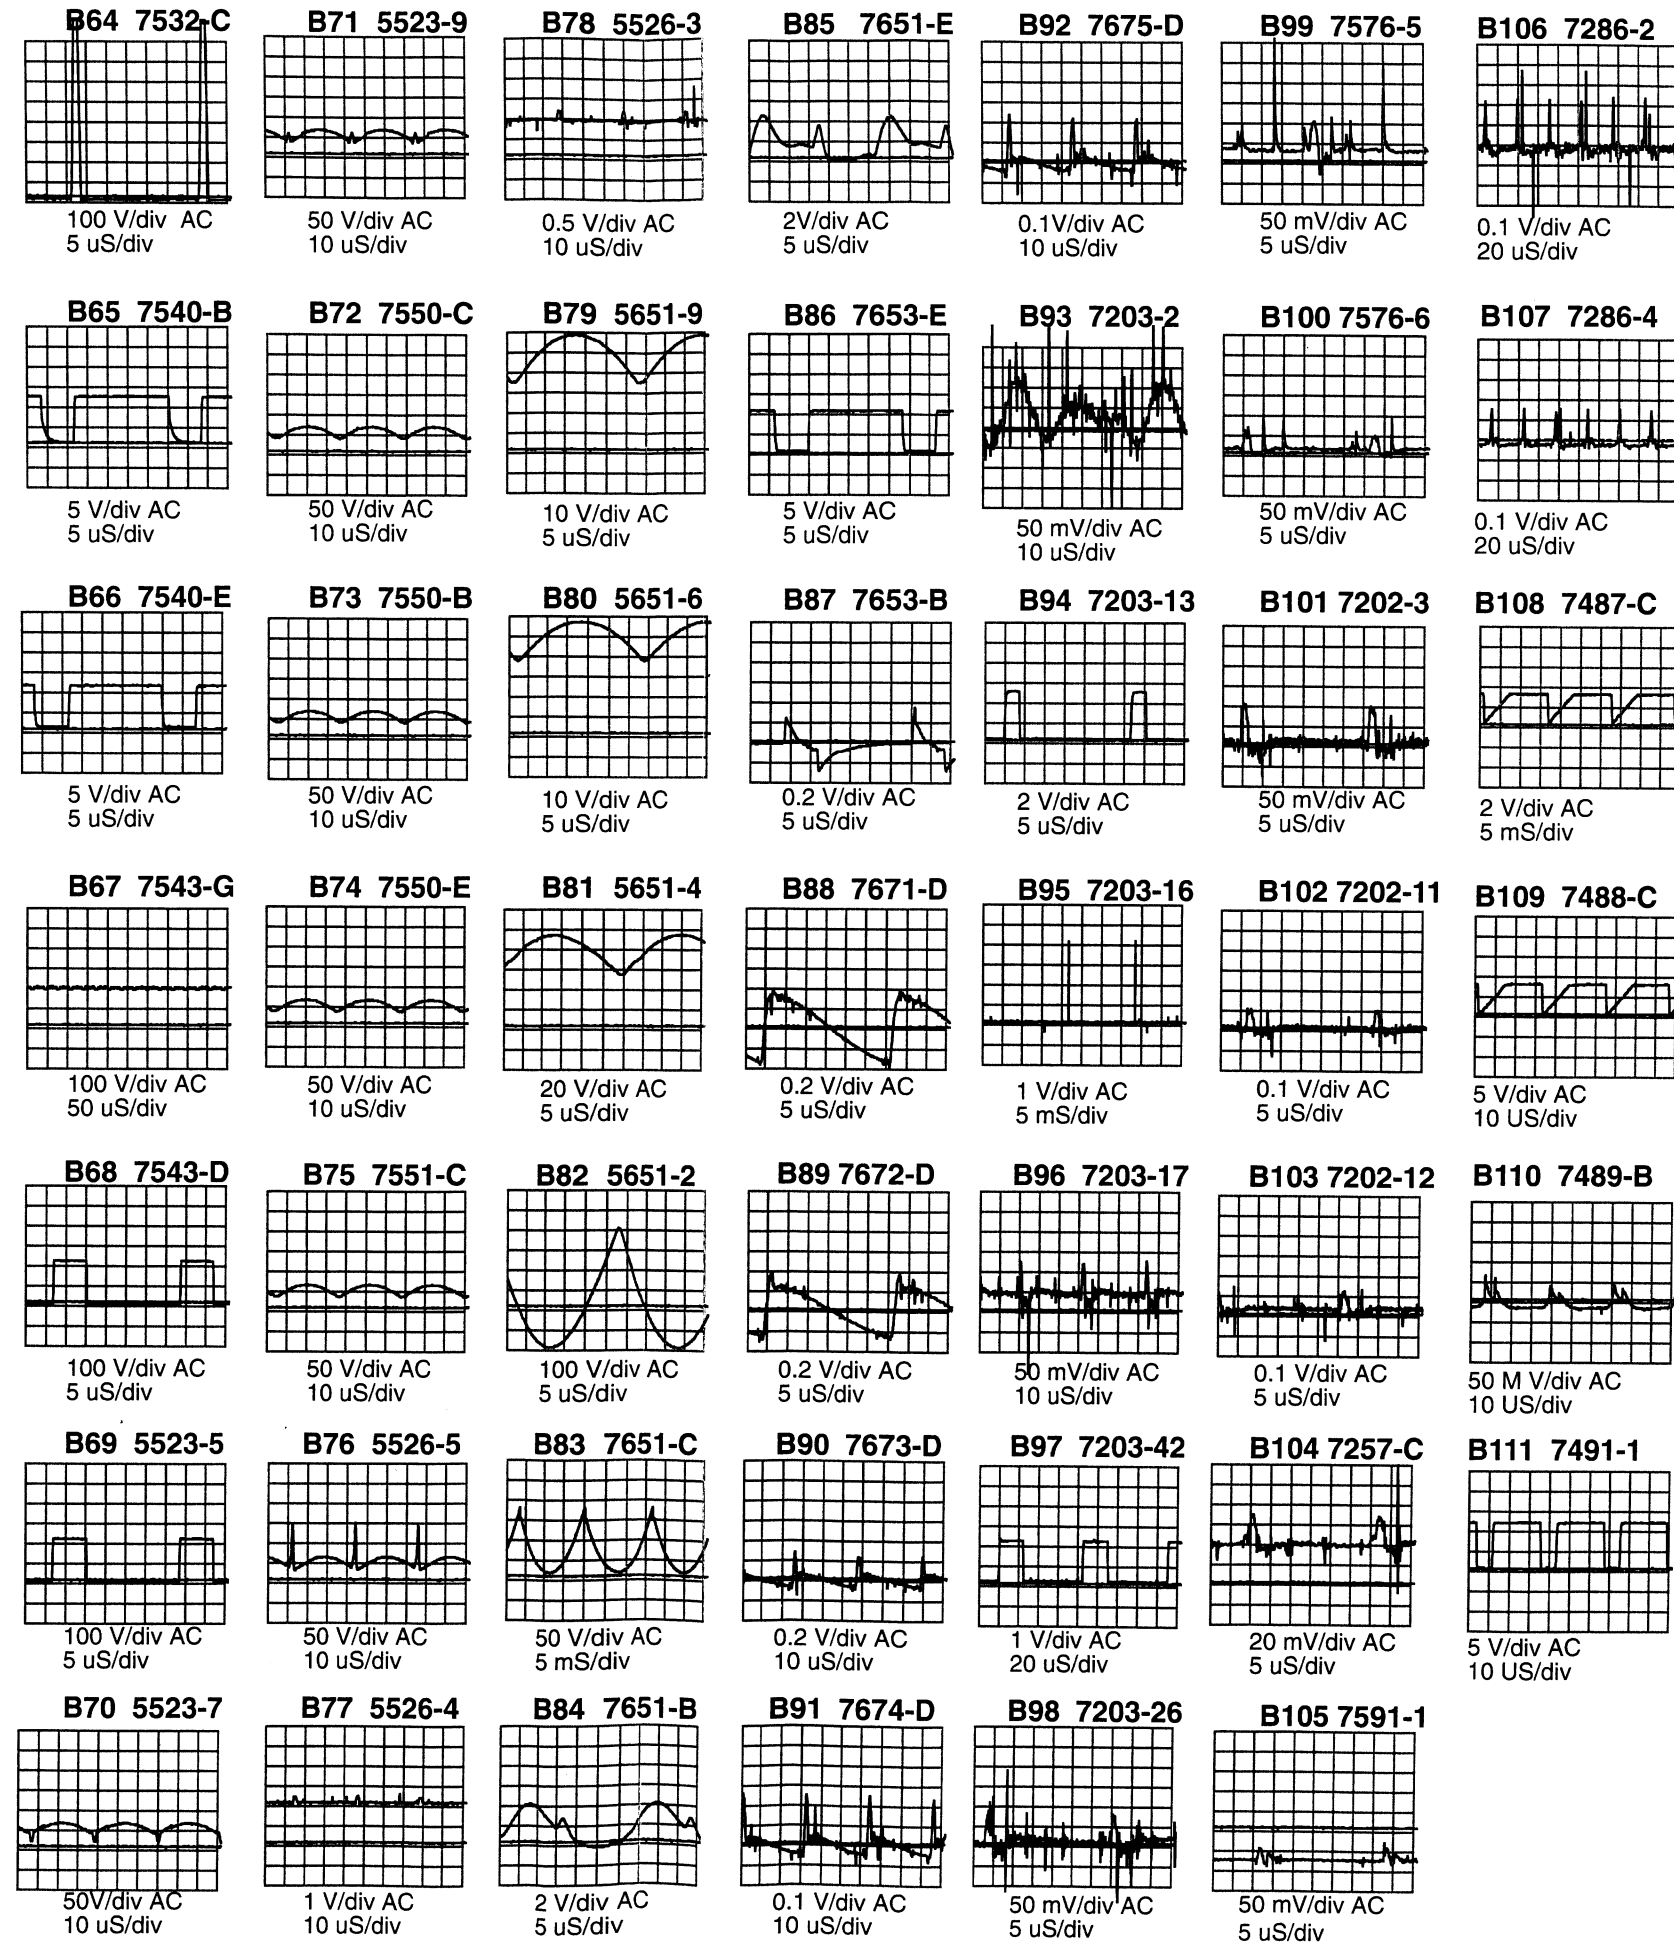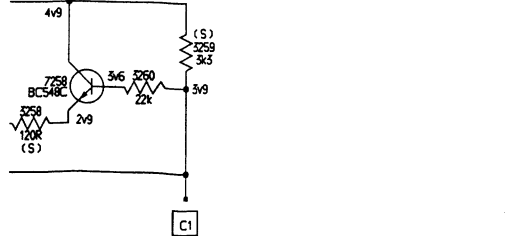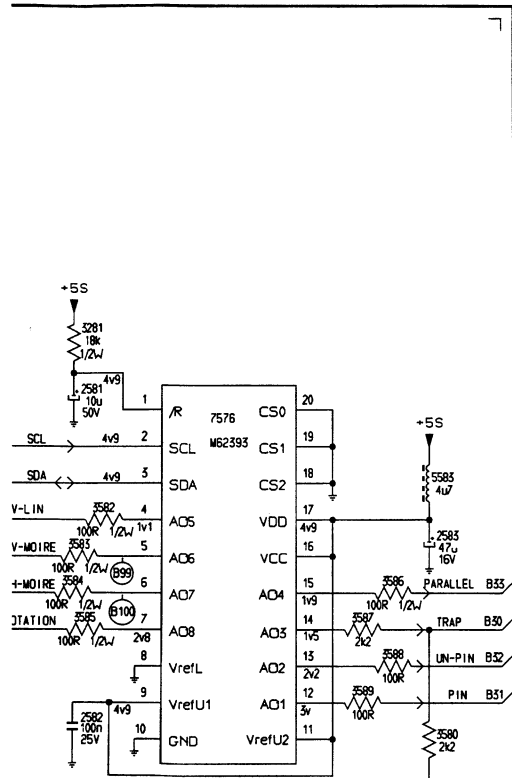




## Power Supply Schematic Diagram

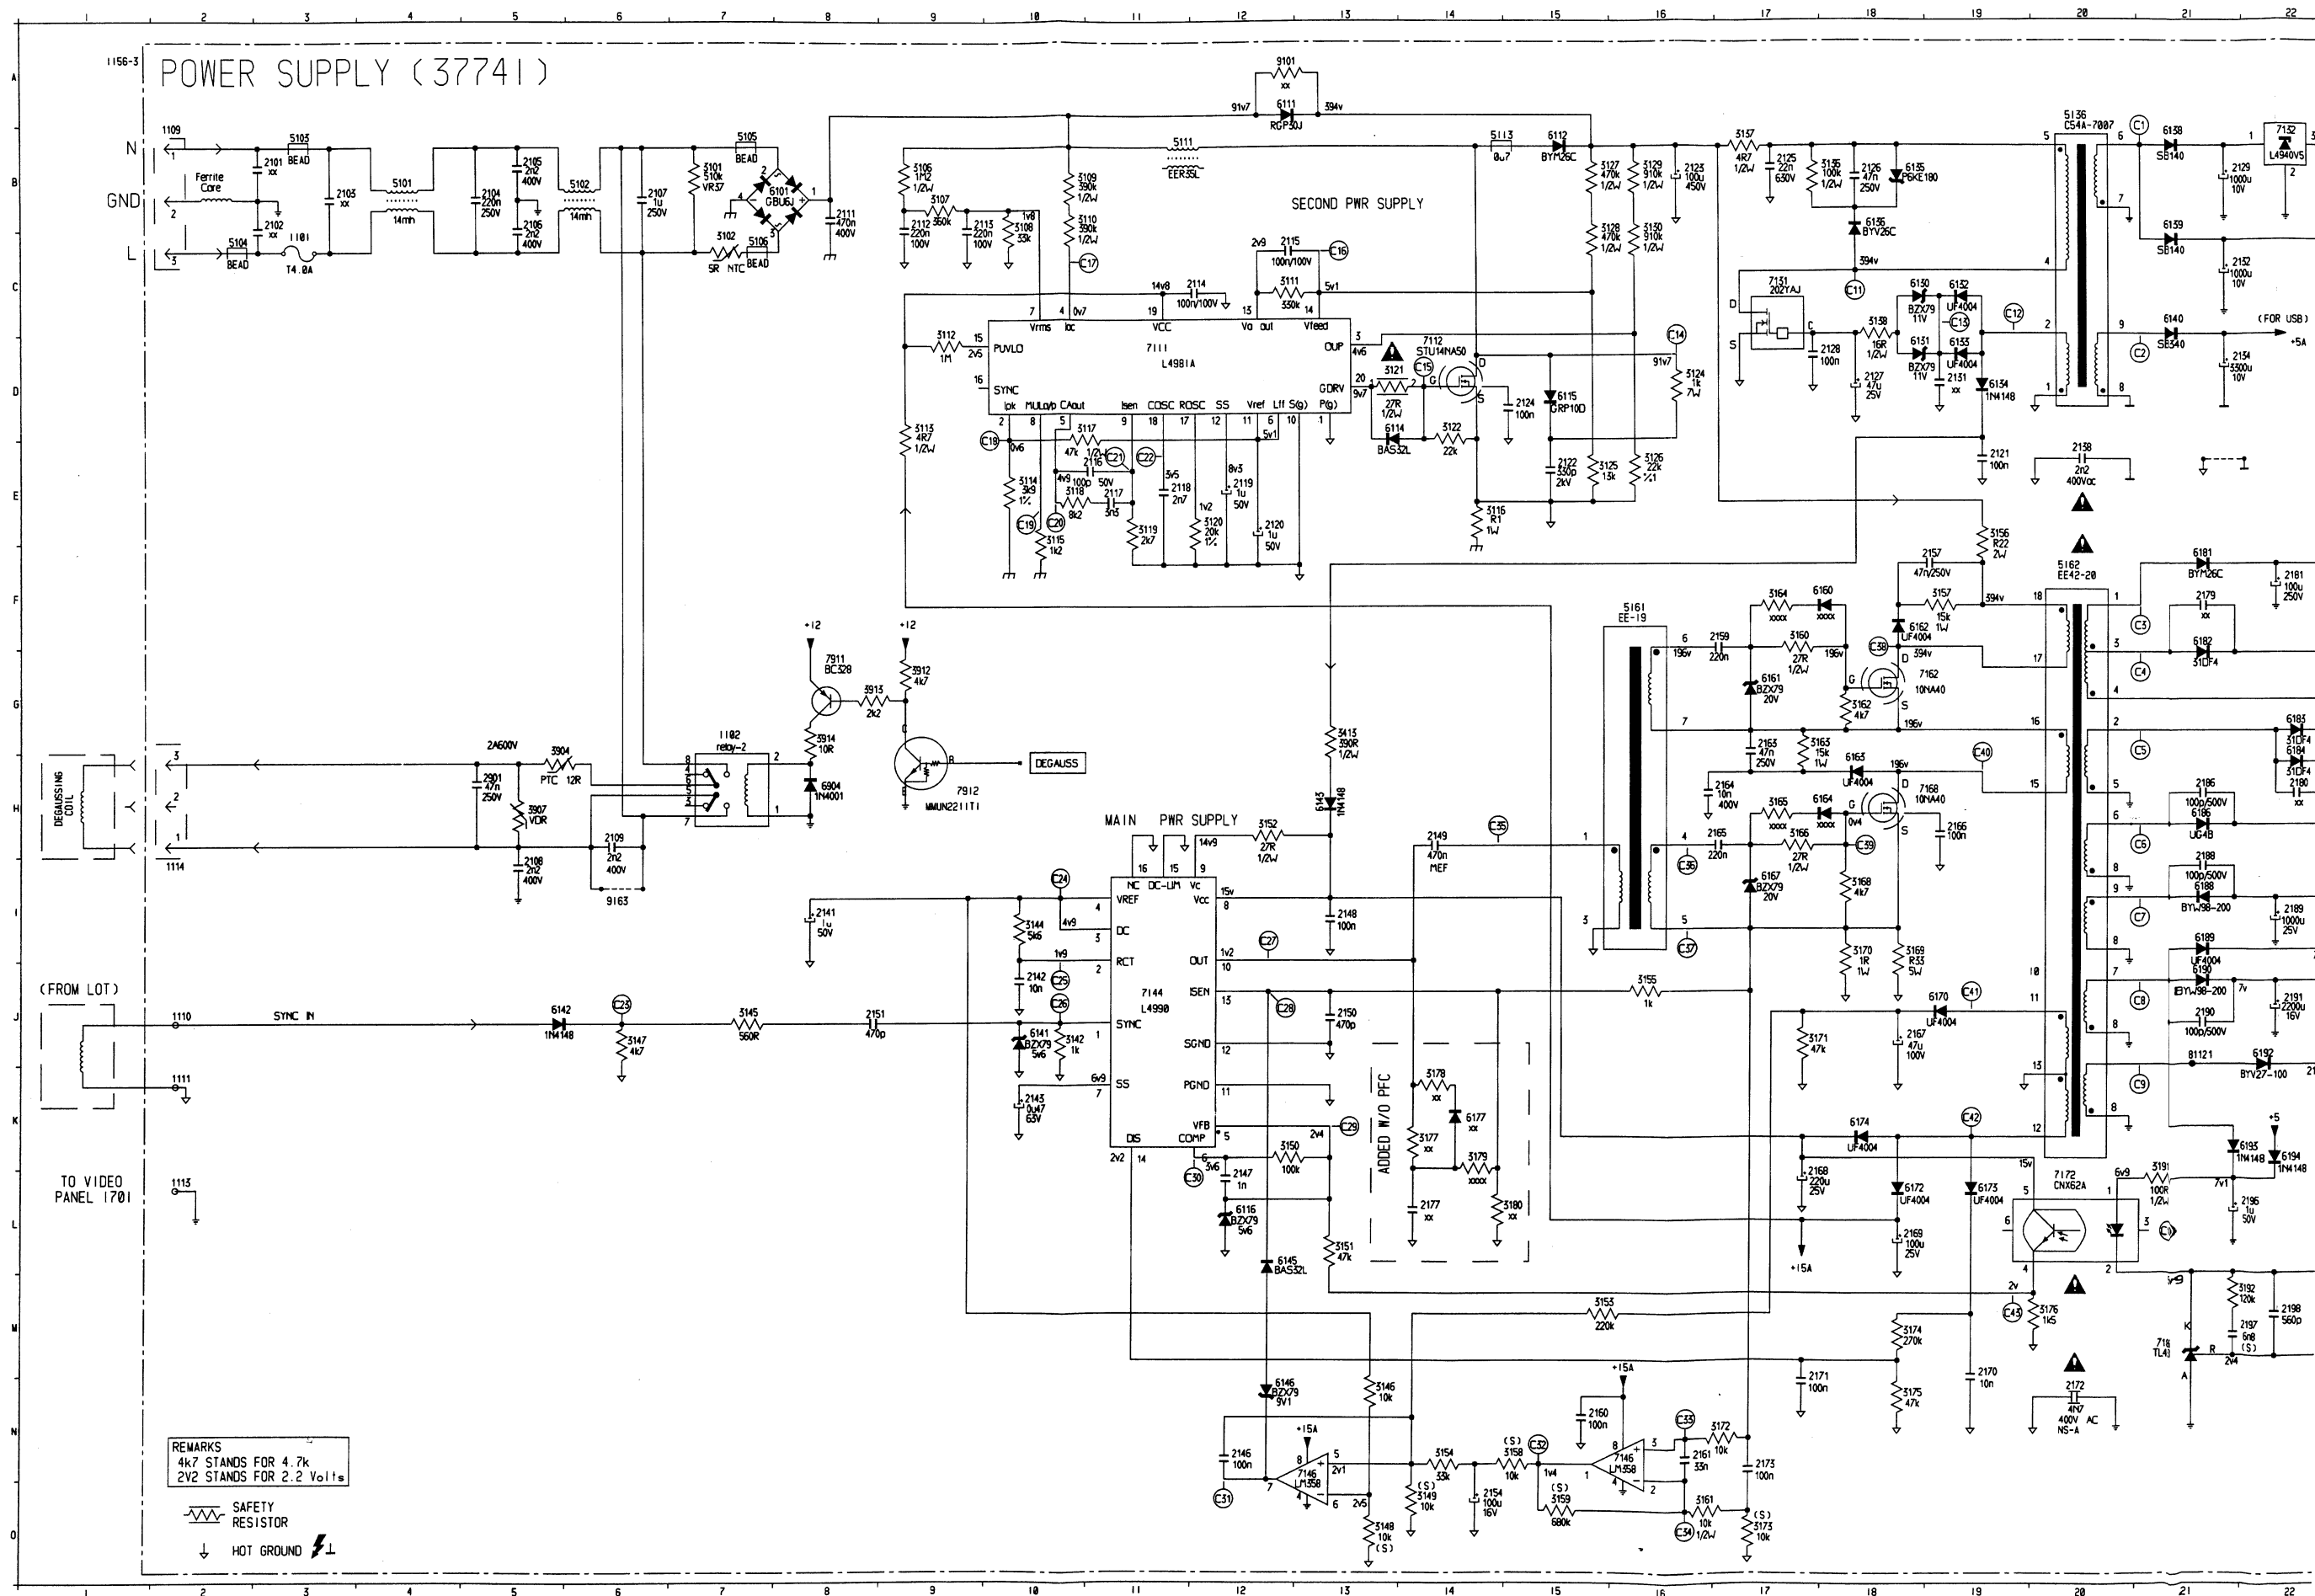


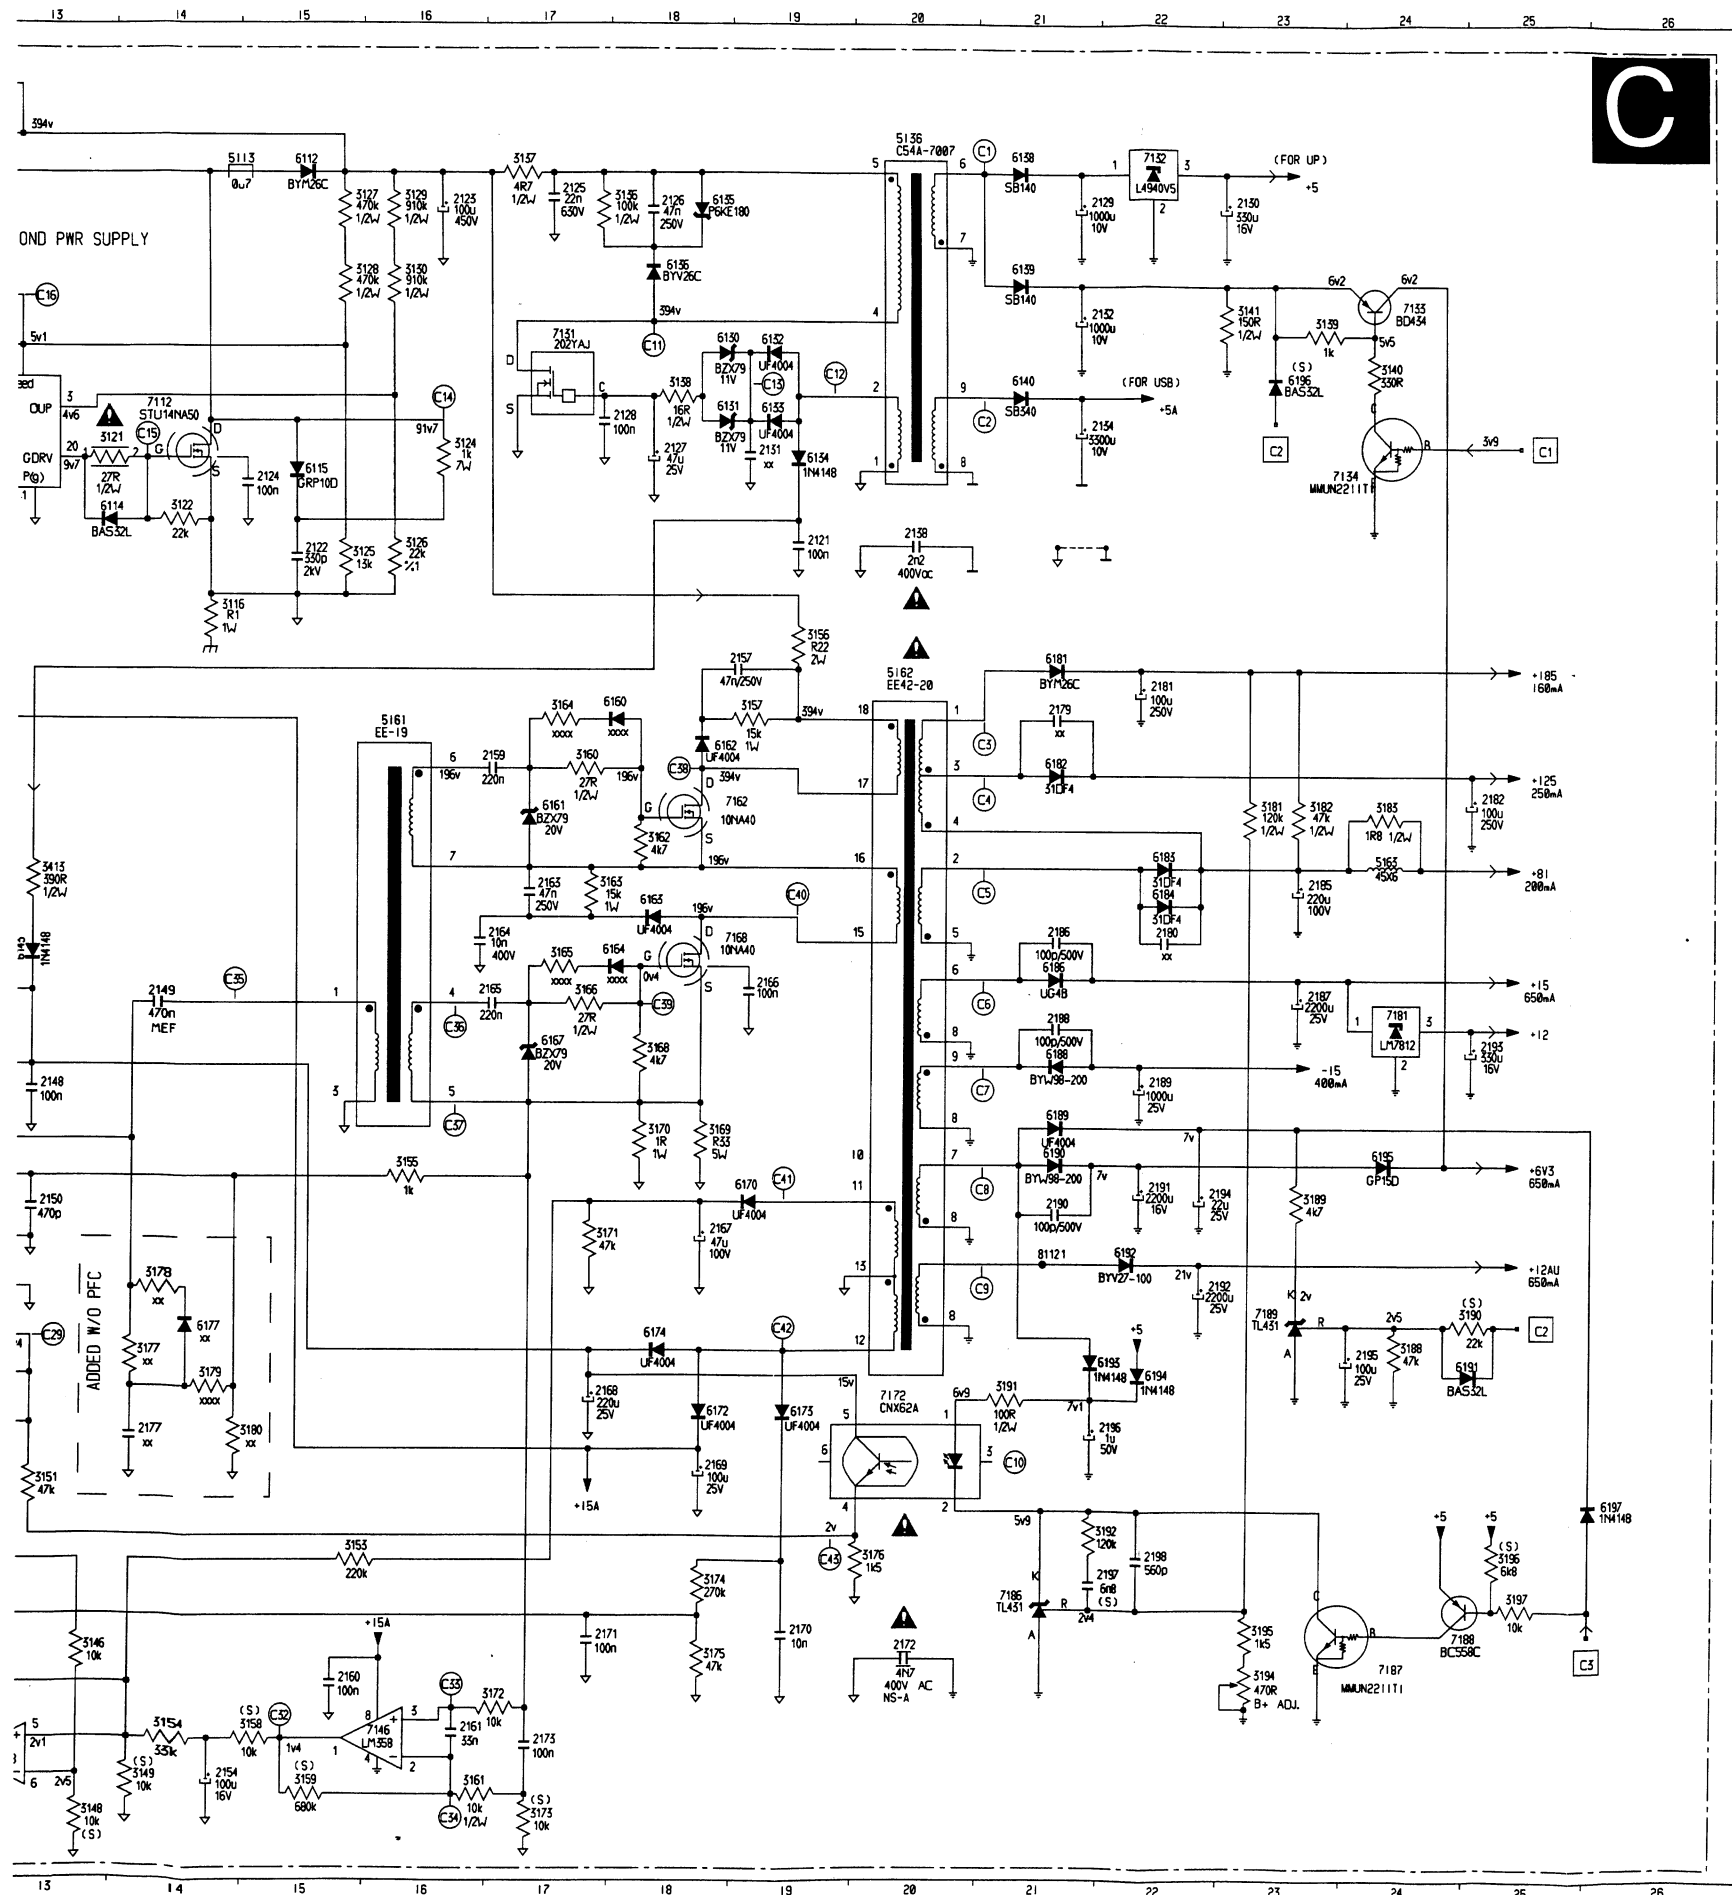


C1 5136-6

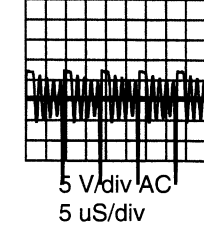


C8 5162-7

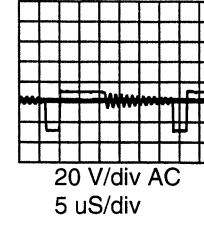


C15 7112-G

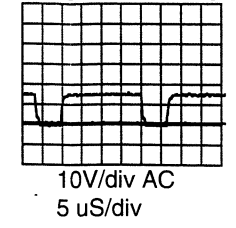


C2 5136-9

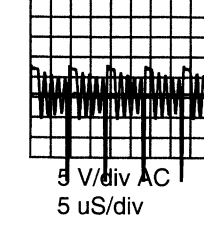


C9 6192(+)

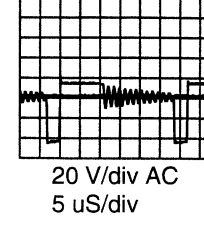


C16 7111-14

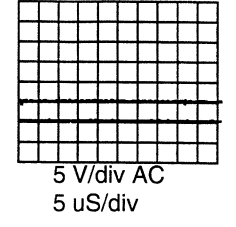


C3 5162-1

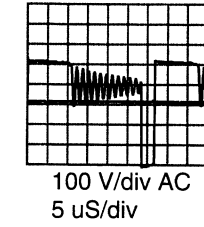


C10 7172-3

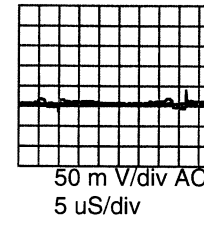


C17 7111-4

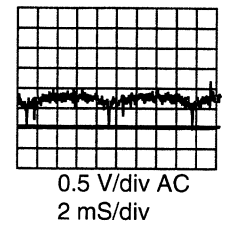


C4 5162-3

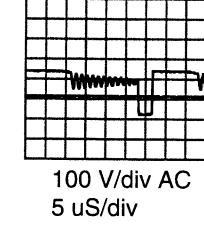


C11 5136-4

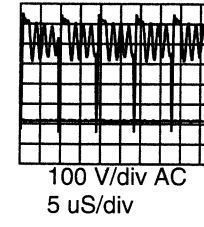


C18 7111-2

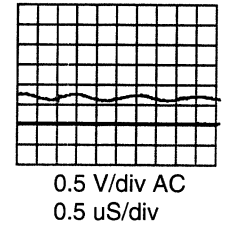


C5 5162-2

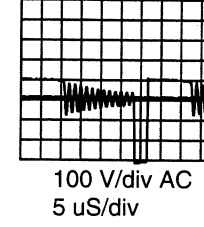


C12 5136-2

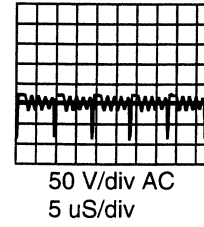


C19 7111-8

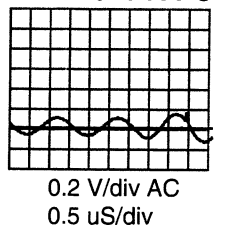


C6 5162-6

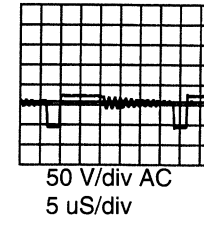


C13 6132(-)

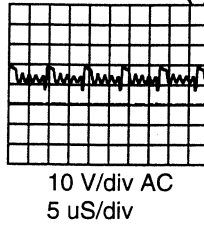


C20 7111-5

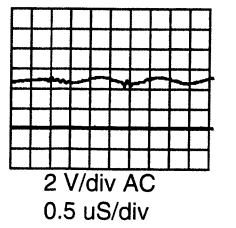


C7 5162-9

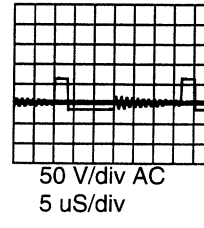

C14 7112-D

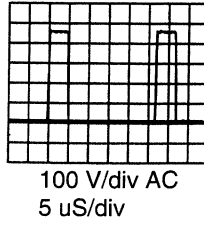


C21 7111-9

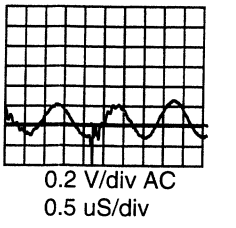


## Waveforms for Diagram C

C22 7111-18

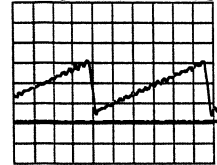


2 V/div AC  
5 uS/div

C29 7144-5

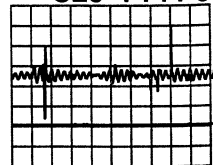


1 V/div AC  
5 uS/div

C36 5161-1

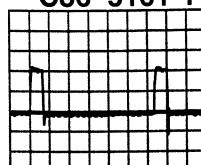


5 V/div AC  
5 uS/div

C43 7172-4

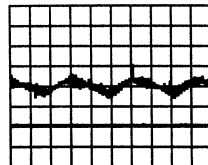


1 V/div AC  
10 uS/div

C23 3147

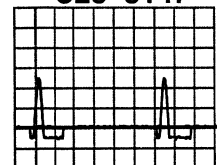


5 V/div AC  
5 uS/div

C30 7144-6

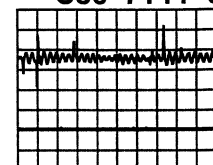


1 V/div AC  
5 uS/div

C37 5161-5

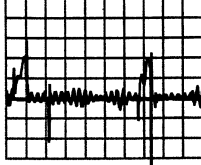


0.5 V/div AC  
5 uS/div

C24 7144-4

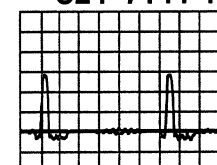


2 V/div AC  
5 uS/div

C31 7146-7

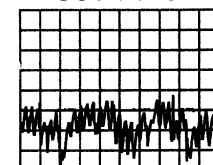


0.1 V/div AC  
5 uS/div

C38 7162-D

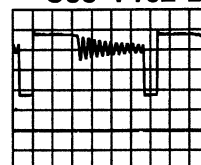


100 V/div AC  
5 uS/div

C25 7144-2

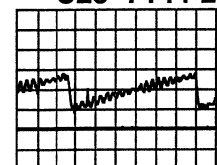


1 V/div AC  
5 uS/div

C32 7146-1

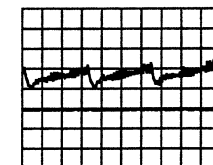


1 V/div AC  
10 uS/div

C39 7168-G

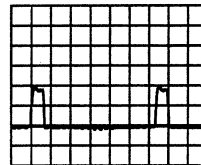


5 V/div AC  
5 uS/div

C26 7144-1

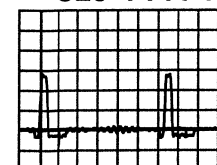


2 V/div AC  
5 uS/div

C33 7146-3

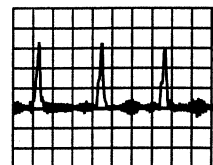


0.2 V/div AC  
10 uS/div

C40 7168-D

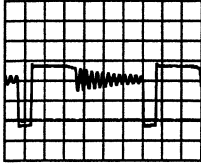


100 V/div AC  
5 uS/div

C27 7144-10

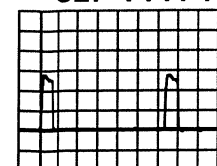


5 V/div AC  
5 uS/div

C34 7146-2

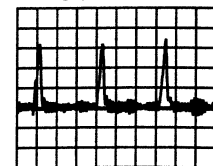


0.2 V/div AC  
10 uS/div

C41 5162-11

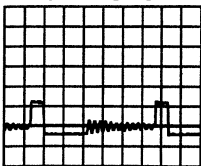


50 V/div AC  
5 uS/div

C28 7144-13

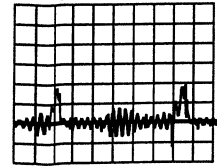


0.5 V/div AC  
5 uS/div

C35 5161-1

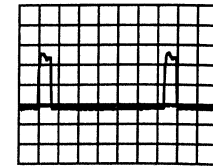

5 V/div AC  
5 uS/div

C42 5162-12

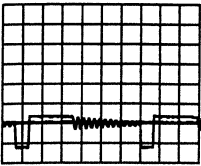


50 V/div AC  
5 uS/div



0130 0 7 7383 I 2 0130 J 13 3587 D 2 3448 E 3 3221 C 2 2051 D 18 2280 K 3 1101 L 15  
0131 H 0 7384 I 2 0130 H 13 3588 D 2 3441 F 2 3222 B 5 2052 D 18 2280 K 3 1102 I 14  
0132 H 0 7385 J 1 0130 H 13 3589 D 2 3442 E 2 3223 C 2 2053 D 11 2281 K 3 1103 K 10  
0133 H 0 7386 J 2 0140 K 15 3591 J 1 3443 F 2 3224 B 2 2054 D 11 2282 L 3 1114 J 15  
0134 K 0 7310 J 2 0141 L 18 3592 J 3 3444 E 2 3225 B 2 2055 D 12 2283 K 4 1201 D 4  
0135 H 0 7311 J 2 0142 I 0 3593 J 3 3445 F 2 3226 C 2 2057 D 12 2284 K 4 1202 B 3  
0136 I 0 7312 F 4 0143 L 0 3594 K 2 3446 E 2 3227 B 2 2058 E 11 2285 L 4 1203 A 5  
0137 H 15 7313 F 4 0145 K 7 3595 J 3 3447 C 5 3228 B 4 2059 E 11 2286 K 4 1204 K 1  
0138 0 0 7310 F 4 0146 K 7 3596 K 2 3448 F 0 3229 K 1 2062 E 11 2287 J 4 1205 C 1  
0139 0 0 7320 B 4 0108 K 0 3597 K 3 3449 F 0 3230 D 4 2055 E 11 2288 J 2 1206 D 1  
0140 0 0 7320 B 4 0109 K 0 3598 K 2 3450 E 5 3231 D 3 2071 E 8 2318 I 2 1207 E 1  
0141 0 0 7331 B 5 0102 J 9 3599 J 3 3451 F 3 3232 C 4 2072 E 7 2311 J 1 1208 E 1  
0142 0 0 7401 0 2 0103 K 0 3599 D 15 3452 E 3 3233 C 4 2073 D 7 2310 E 4 1209 C 1  
0143 0 0 7402 F 2 0104 K 0 3599 C 15 3453 E 4 3234 C 4 2074 D 0 2317 E 5 1211 B 7  
0144 F 0 7420 I 1 0107 K 0 3599 D 15 3454 F 2 3235 C 4 2075 D 0 2325 F 4 1212 A 1  
0145 F 0 7408 C 5 0178 J 7 3599 D 15 3455 F 2 3236 C 4 2081 E 0 2326 F 4 1213 K 1  
0146 0 5 7431 C 6 0172 J 7 3599 C 15 3456 F 2 3237 C 3 2082 D 0 2331 B 5 1214 K 1  
0147 H 5 7443 E 2 0173 J 7 3599 D 15 3457 E 2 3238 C 3 2083 D 0 2332 B 5 1215 F 12  
0148 H 5 7444 E 2 0174 J 7 3599 C 15 3458 F 3 3240 D 3 2081 J 15 2333 B 5 1216 F 11  
0149 0 12 7445 E 2 0177 K 7 3597 C 15 3459 F 4 3241 D 3 2080 D 0 2401 E 4 1217 L 4  
0150 0 12 7446 E 3 0181 H 0 3598 C 15 3460 E 4 3242 B 2 2081 K 3 2403 F 3 1218 L 3  
0151 0 11 7447 E 3 0182 H 0 3598 C 14 3461 F 3 3243 C 2 2082 F 3 2404 F 3 1219 A 1  
0152 0 11 7448 E 3 0183 I 0 3599 C 14 3462 E 3 3244 C 3 2083 F 2 2405 E 3 1220 L 4  
0153 F 11 7449 E 3 0184 I 0 3599 C 14 3463 F 3 3245 C 3 2084 F 2 2406 H 3 1221 B 3  
0154 E 13 7450 E 3 0185 I 0 3599 C 14 3464 F 3 3246 B 2 2085 E 3 2407 D 2 1222 K 2  
0155 C 2 7451 F 2 0186 H 7 3599 D 15 3465 E 4 3247 B 2 2086 F 3 2408 H 3 1223 J 10  
0156 0 0 7452 F 2 0187 I 7 3599 D 15 3466 F 3 3248 C 3 2087 C 3 2409 F 3 1224 K 10  
0157 F 7 7453 F 2 0188 I 0 3599 C 15 3467 F 3 3249 C 3 2088 F 2 2410 F 2 1225 J 18  
0158 H 0 7454 F 3 0191 H 0 3599 D 15 3468 F 3 3250 C 2 2089 D 7 2411 B 3 1226 L 14  
0159 0 11 7455 F 4 0192 I 7 3599 D 15 3469 F 3 3251 A 1 2090 D 0 2412 B 2 1227 L 14  
0160 0 7 7456 F 4 0193 I 0 3599 D 15 3470 F 3 3252 A 2 2091 F 0 2413 B 2 1228 L 14  
0161 H 0 7457 F 4 0194 I 0 3599 D 15 3471 F 3 3253 A 2 2092 F 0 2414 B 2 1229 L 14  
0162 L 10 7458 F 6 0195 F 7 3599 D 15 3472 E 8 3254 A 1 3101 L 13 2436 C 5 1230 I 10  
0163 J 14 7459 F 0 0196 H 18 3599 D 15 3473 F 0 3255 D 2 3102 L 13 2437 C 4 1231 J 14  
0201 0 1 7476 E 0 0197 0 5 3599 D 15 3474 F 0 3256 D 2 3103 K 11 2438 F 2 1232 K 12  
0202 0 1 7477 F 0 0201 K 7 3599 C 10 3475 F 0 3257 C 2 3104 K 11 2439 F 2 1233 J 18  
0203 0 1 7478 E 0 0202 C 5 3599 D 15 3476 F 7 3258 C 2 3105 I 11 2440 F 2 1234 J 11  
0204 0 2 7479 E 0 0203 K 4 3599 C 15 3477 F 7 3259 D 2 3106 K 11 2441 F 2 1235 J 11  
0205 0 2 7479 E 0 0204 K 4 3599 C 15 3478 F 7 3260 C 2 3107 I 11 2442 F 2 1236 J 11  
0206 0 4 7480 E 0 0205 K 4 3599 C 15 3479 F 7 3261 C 2 3108 I 11 2443 F 2 1237 J 11  
0207 I 5 7481 E 7 0206 C 3 3599 B 14 3480 F 8 3262 B 2 3109 J 12 2444 E 4 1238 J 12  
0208 0 3 7482 E 0 0207 C 3 3599 B 14 3481 E 8 3263 B 2 3110 J 12 2445 F 2 1239 J 12  
0209 0 4 7483 E 0 0208 K 2 3599 C 14 3482 F 8 3264 C 2 3111 J 12 2446 E 4 1240 J 11  
0210 0 4 7484 E 0 0209 K 2 3599 C 14 3483 F 8 3265 C 2 3112 J 12 2447 E 4 1241 J 11  
0211 0 4 7485 E 0 0210 K 2 3599 C 14 3484 F 8 3266 C 2 3113 J 12 2448 E 4 1242 J 11  
0212 0 4 7486 E 0 0211 K 2 3599 C 14 3485 F 8 3267 C 2 3114 J 12 2449 E 4 1243 J 11  
0213 0 5 7487 E 0 0212 K 2 3599 C 14 3486 F 8 3268 C 2 3115 J 12 2450 E 4 1244 J 11  
0214 0 5 7488 E 0 0213 K 2 3599 C 14 3487 F 8 3269 C 2 3116 J 12 2451 E 4 1245 J 11  
0215 0 5 7489 E 0 0214 K 2 3599 C 14 3488 F 8 3270 C 2 3117 J 12 2452 E 4 1246 J 11  
0216 0 5 7490 E 0 0215 K 2 3599 C 14 3489 F 8 3271 C 2 3118 J 12 2453 E 4 1247 J 11  
0217 0 5 7491 E 0 0216 K 2 3599 C 14 3490 F 8 3272 C 2 3119 J 12 2454 E 4 1248 J 11  
0218 0 5 7492 E 0 0217 K 2 3599 C 14 3491 F 8 3273 C 2 3120 J 12 2455 E 4 1249 J 11  
0219 0 5 7493 E 0 0218 K 2 3599 C 14 3492 F 8 3274 C 2 3121 J 12 2456 E 4 1250 J 11  
0220 0 5 7494 E 0 0219 K 2 3599 C 14 3493 F 8 3275 C 2 3122 J 12 2457 E 4 1251 J 11  
0221 0 5 7495 E 0 0220 K 2 3599 C 14 3494 F 8 3276 C 2 3123 J 12 2458 E 4 1252 J 11  
0222 0 5 7496 E 0 0221 K 2 3599 C 14 3495 F 8 3277 C 2 3124 J 12 2459 E 4 1253 J 11  
0223 0 5 7497 E 0 0222 K 2 3599 C 14 3496 F 8 3278 C 2 3125 J 12 2460 E 4 1254 J 11  
0224 0 5 7498 E 0 0223 K 2 3599 C 14 3497 F 8 3279 C 2 3126 J 12 2461 E 4 1255 J 11  
0225 0 5 7499 E 0 0224 K 2 3599 C 14 3498 F 8 3280 C 2 3127 J 12 2462 E 4 1256 J 11  
0226 0 5 7500 E 0 0225 K 2 3599 C 14 3499 F 8 3281 C 2 3128 J 12 2463 E 4 1257 J 11  
0227 0 5 7501 E 0 0226 K 2 3599 C 14 3500 F 8 3282 C 2 3129 J 12 2464 E 4 1258 J 11  
0228 0 5 7502 E 0 0227 K 2 3599 C 14 3501 F 8 3283 C 2 3130 J 12 2465 E 4 1259 J 11  
0229 0 5 7503 E 0 0228 K 2 3599 C 14 3502 F 8 3284 C 2 3131 J 12 2466 E 4 1260 J 11  
0230 0 5 7504 E 0 0229 K 2 3599 C 14 3503 F 8 3285 C 2 3132 J 12 2467 E 4 1261 J 11  
0231 0 5 7505 E 0 0230 K 2 3599 C 14 3504 F 8 3286 C 2 3133 J 12 2468 E 4 1262 J 11  
0232 0 5 7506 E 0 0231 K 2 3599 C 14 3505 F 8 3287 C 2 3134 J 12 2469 E 4 1263 J 11  
0233 0 5 7507 E 0 0232 K 2 3599 C 14 3506 F 8 3288 C 2 3135 J 12 2470 E 4 1264 J 11  
0234 0 5 7508 E 0 0233 K 2 3599 C 14 3507 F 8 3289 C 2 3136 J 12 2471 E 4 1265 J 11  
0235 0 5 7509 E 0 0234 K 2 3599 C 14 3508 F 8 3290 C 2 3137 J 12 2472 E 4 1266 J 11  
0236 0 5 7510 E 0 0235 K 2 3599 C 14 3509 F 8 3291 C 2 3138 J 12 2473 E 4 1267 J 11  
0237 0 5 7511 E 0 0236 K 2 3599 C 14 3510 F 8 3292 C 2 3139 J 12 2474 E 4 1268 J 11  
0238 0 5 7512 E 0 0237 K 2 3599 C 14 3511 F 8 3293 C 2 3140 J 12 2475 E 4 1269 J 11  
0239 0 5 7513 E 0 0238 K 2 3599 C 14 3512 F 8 3294 C 2 3141 J 12 2476 E 4 1270 J 11  
0240 0 5 7514 E 0 0239 K 2 3599 C 14 3513 F 8 3295 C 2 3142 J 12 2477 E 4 1271 J 11  
0241 0 5 7515 E 0 0240 K 2 3599 C 14 3514 F 8 3296 C 2 3143 J 12 2478 E 4 1272 J 11  
0242 0 5 7516 E 0 0241 K 2 3599 C 14 3515 F 8 3297 C 2 3144 J 12 2479 E 4 1273 J 11  
0243 0 5 7517 E 0 0242 K 2 3599 C 14 3516 F 8 3298 C 2 3145 J 12 2480 E 4 1274 J 11  
0244 0 5 7518 E 0 0243 K 2 3599 C 14 3517 F 8 3299 C 2 3146 J 12 2481 E 4 1275 J 11  
0245 0 5 7519 E 0 0244 K 2 3599 C 14 3518 F 8 3300 C 2 3147 J 12 2482 E 4 1276 J 11  
0246 0 5 7520 E 0 0245 K 2 3599 C 14 3519 F 8 3301 C 2 3148 J 12 2483 E 4 1277 J 11  
0247 0 5 7521 E 0 0246 K 2 3599 C 14 3520 F 8 3302 C 2 3149 J 12 2484 E 4 1278 J 11  
0248 0 5 7522 E 0 0247 K 2 3599 C 14 3521 F 8 3303 C 2 3150 J 12 2485 E 4 1279 J 11  
0249 0 5 7523 E 0 0248 K 2 3599 C 14 3522 F 8 3304 C 2 3151 J 12 2486 E 4 1280 J 11  
0250 0 5 7524 E 0 0249 K 2 3599 C 14 3523 F 8 3305 C 2 3152 J 12 2487 E 4 1281 J 11  
0251 0 5 7525 E 0 0250 K 2 3599 C 14 3524 F 8 3306 C 2 3153 J 12 2488 E 4 1282 J 11  
0252 0 5 7526 E 0 0251 K 2 3599 C 14 3525 F 8 3307 C 2 3154 J 12 2489 E 4 1283 J 11  
0253 0 5 7527 E 0 0252 K 2 3599 C 14 3526 F 8 3308 C 2 3155 J 12 2490 E 4 1284 J 11  
0254 0 5 7528 E 0 0253 K 2 3599 C 14 3527 F 8 3309 C 2 3156 J 12 2491 E 4 1285 J 11  
0255 0 5 7529 E 0 0254 K 2 3599 C 14 3528 F 8 3310 C 2 3157 J 12 2492 E 4 1286 J 11  
0256 0 5 7530 E 0 0255 K 2 3599 C 14 3529 F 8 3311 C 2 3158 J 12 2493 E 4 1287 J 11  
0257 0 5 7531 E 0 0256 K 2 3599 C 14 3530 F 8 3312 C 2 3159 J 12 2494 E 4 1288 J 11  
0258 0 5 7532 E 0 0257 K 2 3599 C 14 3531 F 8 3313 C 2 3160 J 12 2495 E 4 1289 J 11  
0259 0 5 7533 E 0 0258 K 2 3599 C 14 3532 F 8 3314 C 2 3161 J 12 2496 E 4 1290 J 11  
0260 0 5 7534 E 0 0259 K 2 3599 C 14 3533 F 8 3315 C 2 3162 J 12 2497 E 4 1291 J 11  
0261 0 5 7535 E 0 0260 K 2 3599 C 14 3534 F 8 3316 C 2 3163 J 12 2498 E 4 1292 J 11  
0262 0 5 7536 E 0 0261 K 2 3599 C 14 3535 F 8 3317 C 2 3164 J 12 2499 E 4 1293 J 11  
0263 0 5 7537 E 0 0262 K 2 3599 C 14 3536 F 8 3318 C 2 3165 J 12 2500 E 4 1294 J 11  
0264 0 5 7538 E 0 0263 K 2 3599 C 14 3537 F 8 3319 C 2 3166 J 12 2501 E 4 1295 J 11  
0265 0 5 7539 E 0 0264 K 2 3599 C 14 3538 F 8 3320 C 2 3167 J 12 2502 E 4 1296 J 11  
0266 0 5 7540 E 0 0265 K 2 3599 C 14 3539 F 8 3321 C 2 3168 J 12 2503 E 4 1297 J 11  
0267 0 5 7541 E 0 0266 K 2 3599 C 14 3540 F 8 3322 C 2 3169 J 12 2504 E 4 1298 J 11  
0268 0 5 7542 E 0 0267 K 2 3599 C 14 3541 F 8 3323 C 2 3170 J 12 2505 E 4 1299 J 11  
0269 0 5 7543 E 0 0268 K 2 3599 C 14 3542 F 8 3324 C 2 3171 J 12 2506 E 4 1300 J 11  
0270 0 5 7544 E 0 0269 K 2 3599 C 14 3543 F 8 3325 C 2 3172 J 12 2507 E 4 1301 J 11  
0271 0 5 7545 E 0 0270 K 2 3599 C 14 3544 F 8 3326 C 2 3173 J 12 2508 E 4 1302 J 11  
0272 0 5 7546 E 0 0271 K 2 3599 C 14 3545 F 8 3327 C 2 3174 J 12 2509 E 4 1303 J 11  
0273 0 5 7547 E 0 0272 K 2 3599 C 14 3546 F 8 3328 C 2 3175 J 12 2510 E 4 1304 J 11  
0274 0 5 7548 E 0 0273 K 2 3599 C 14 3547 F 8 3329 C 2 3176 J 12 2511 E 4 1305 J 11  
0275 0 5 7549 E 0 0274 K 2 3599 C 14 3548 F 8 3330 C 2 3177 J 12 2512 E 4 1306 J 11  
0276 0 5 7550 E 0 0275 K 2 3599 C 14 3549 F 8 3331 C 2 3178 J 12 2513 E 4 1307 J 11  
0277 0 5 7551 E 0 0276 K 2 3599 C 14 3550 F 8 3332 C 2 3179 J 12 2514 E 4 1308 J 11  
0278 0 5 7552 E 0 0277 K 2 3599 C 14 3551 F 8 3333 C 2 3180 J 12 2515 E 4 1309 J 11  
0279 0 5 7553 E 0 0278 K 2 3599 C 14 3552 F 8 3334 C 2 3181 J 12 2516 E 4 1310 J 11  
0280 0 5 7554 E 0 0279 K 2 3599 C 14 3553 F 8 3335 C 2 3182 J 12 2517 E 4 1311 J 11  
0281 0 5 7555 E 0 0280 K 2 3599 C 14 3554 F 8 3336 C 2 3183 J 12 2518 E 4 1312 J 11  
0282 0 5 7556 E 0 0281 K 2 3599 C 14 3555 F 8 3337 C 2 3184 J 12 2519 E 4 1313 J 11  
0283 0 5 7557 E 0 0282 K 2 3599 C 14 3556 F 8 3338 C 2 3185 J 12 2520 E 4 1314 J 11  
0284 0 5 7558 E 0 0283 K 2 3599 C 14 3557 F 8 3339 C 2 3186 J 12 2521 E 4 1315 J 11  
0285 0 5 7559 E 0 0284 K 2 3599 C 14 3558 F 8 3340 C 2






# Main Panel C.B.A. (B1, B2, B3, C and D)

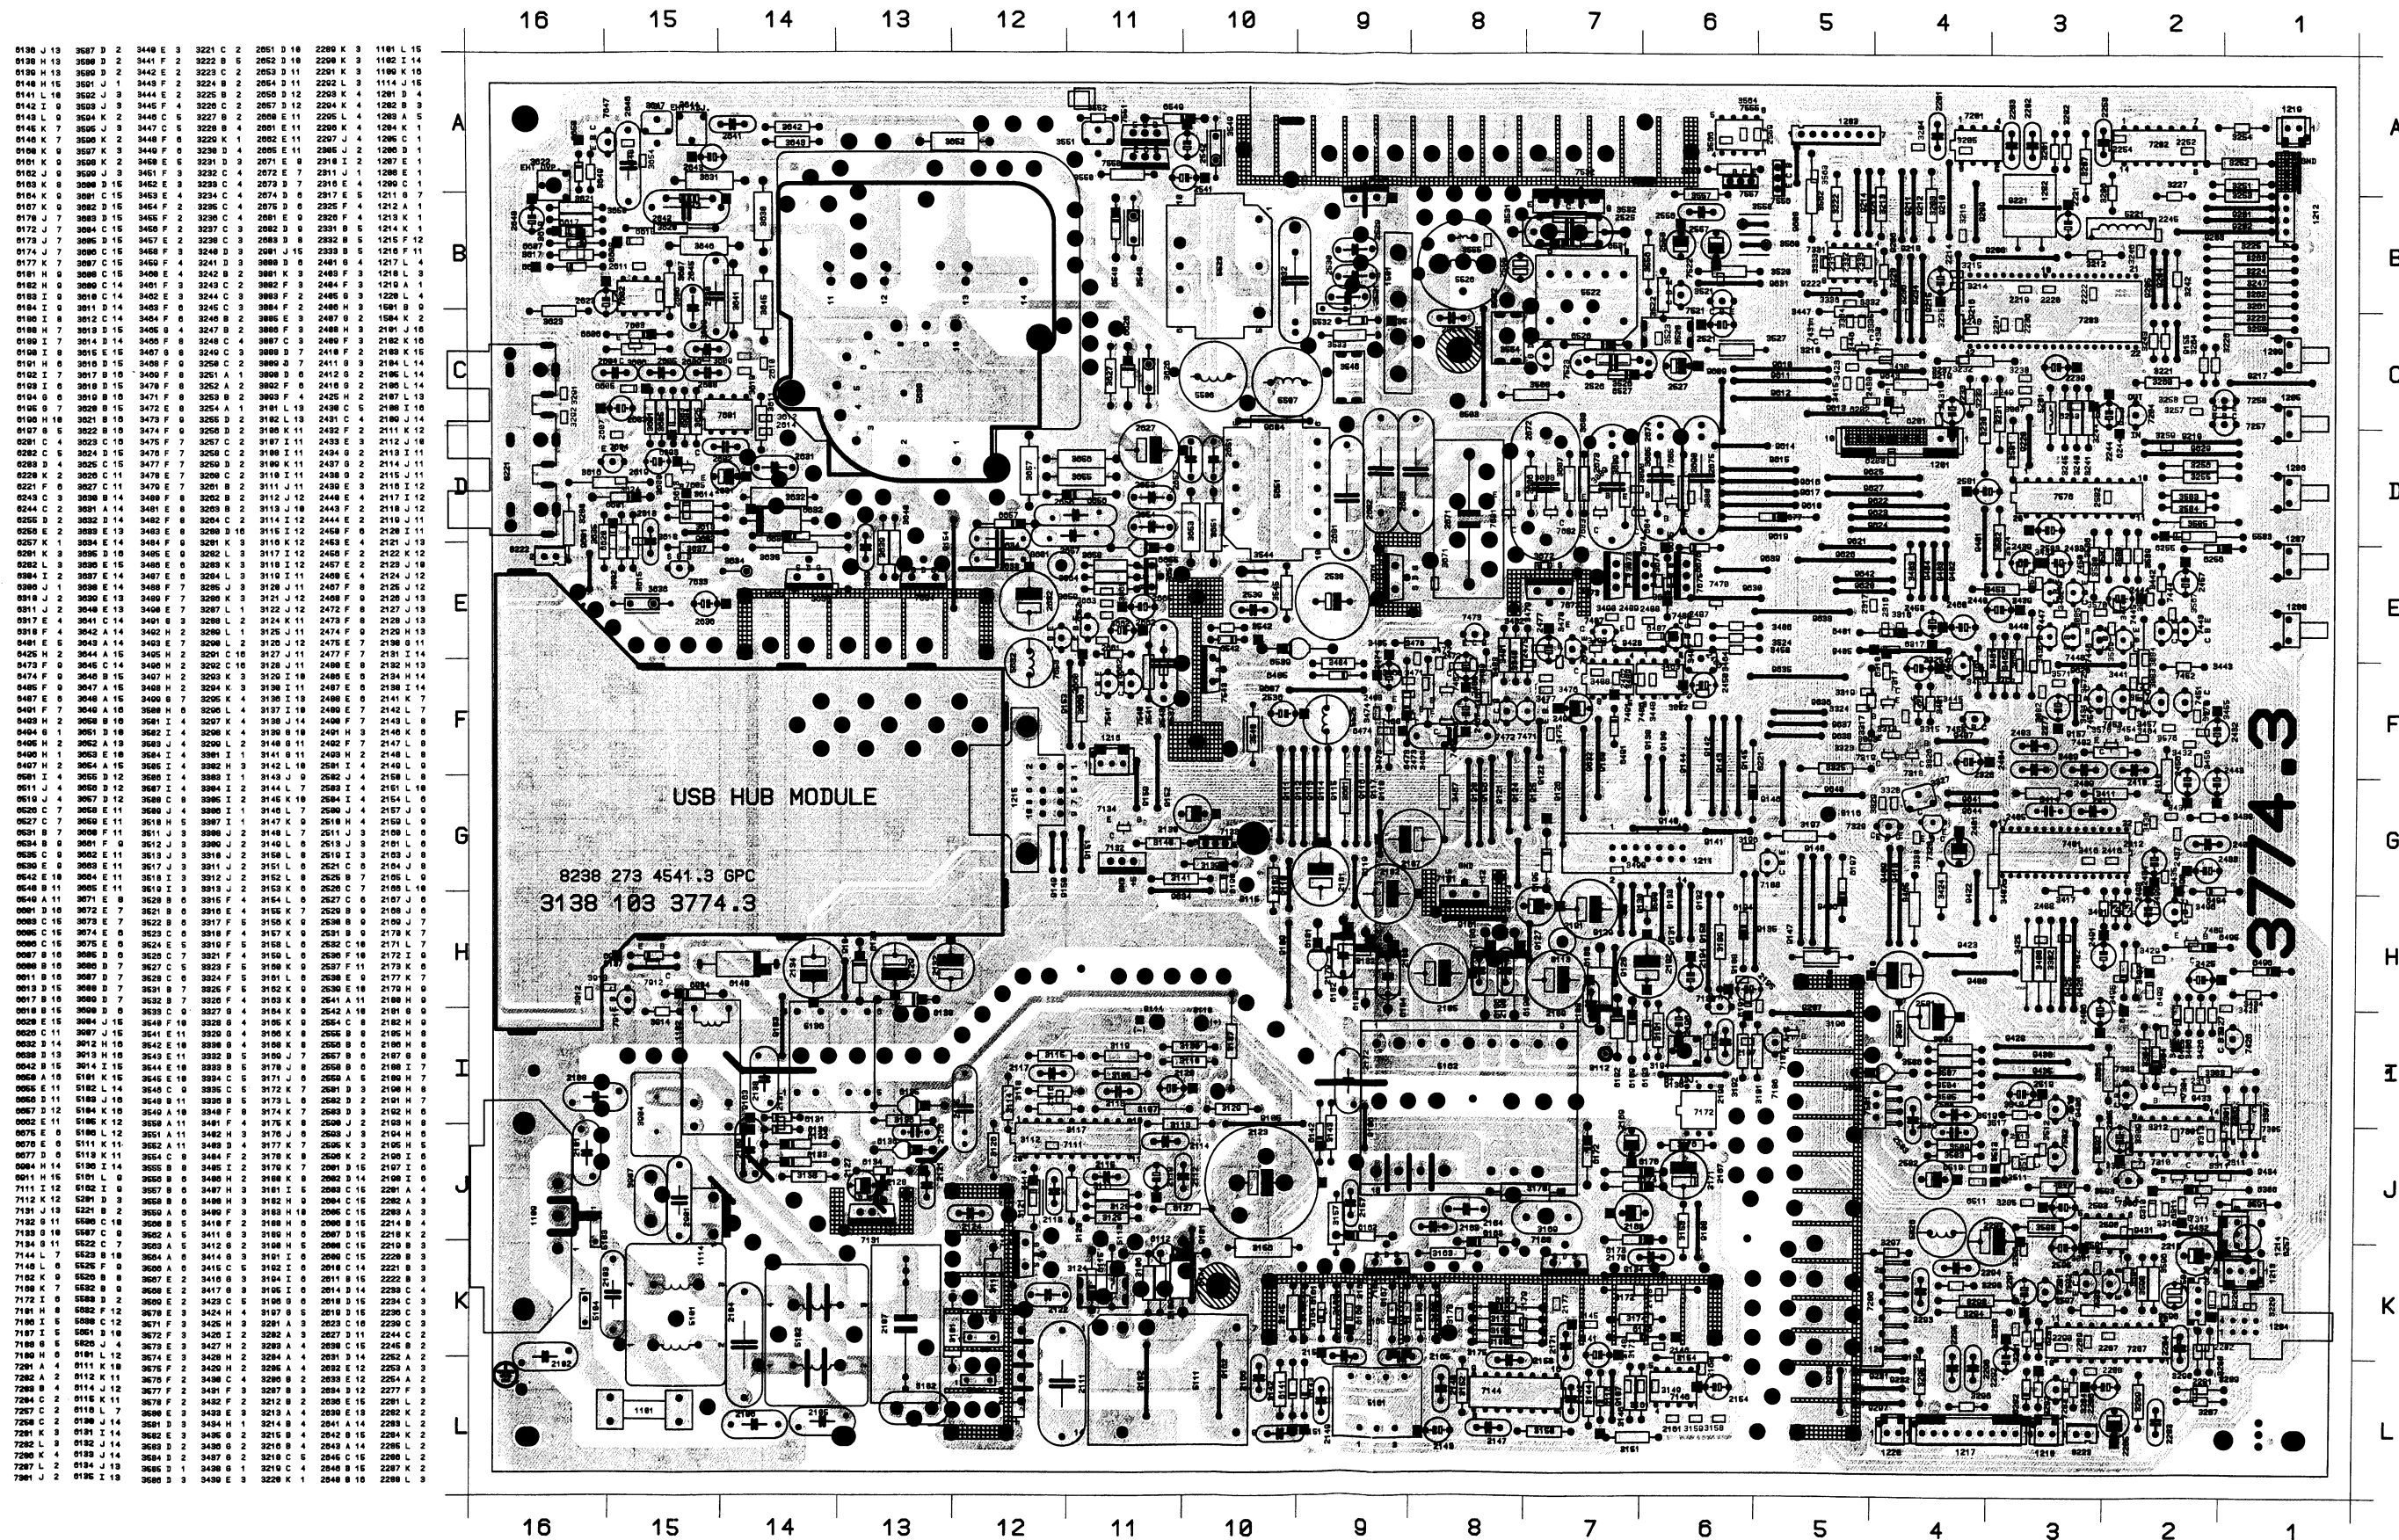


## Audio Schematic Diagram

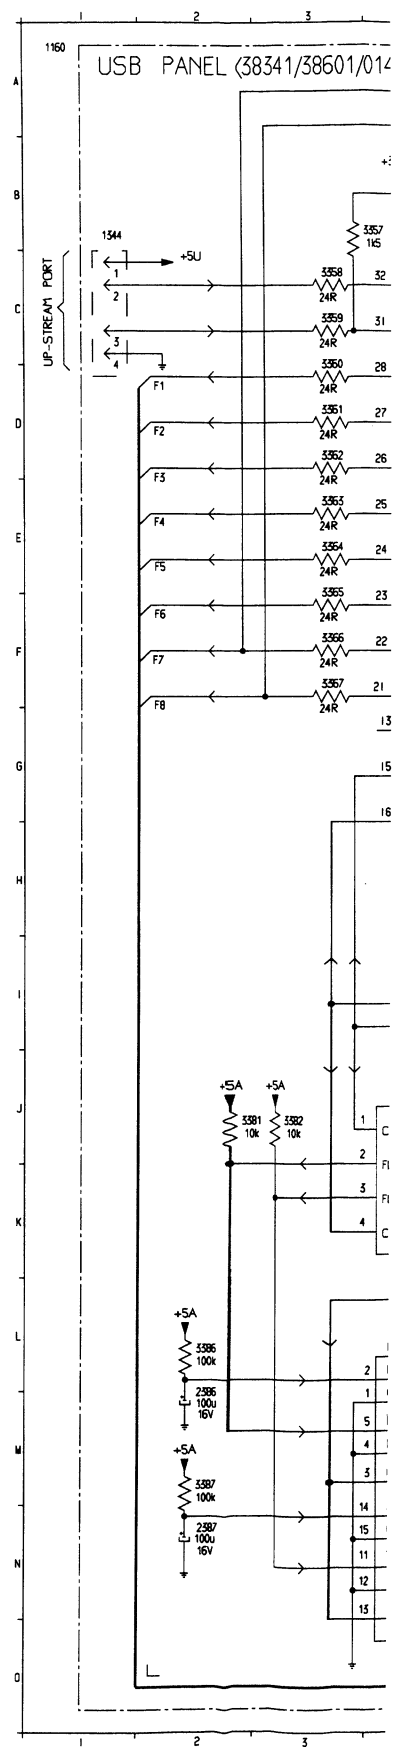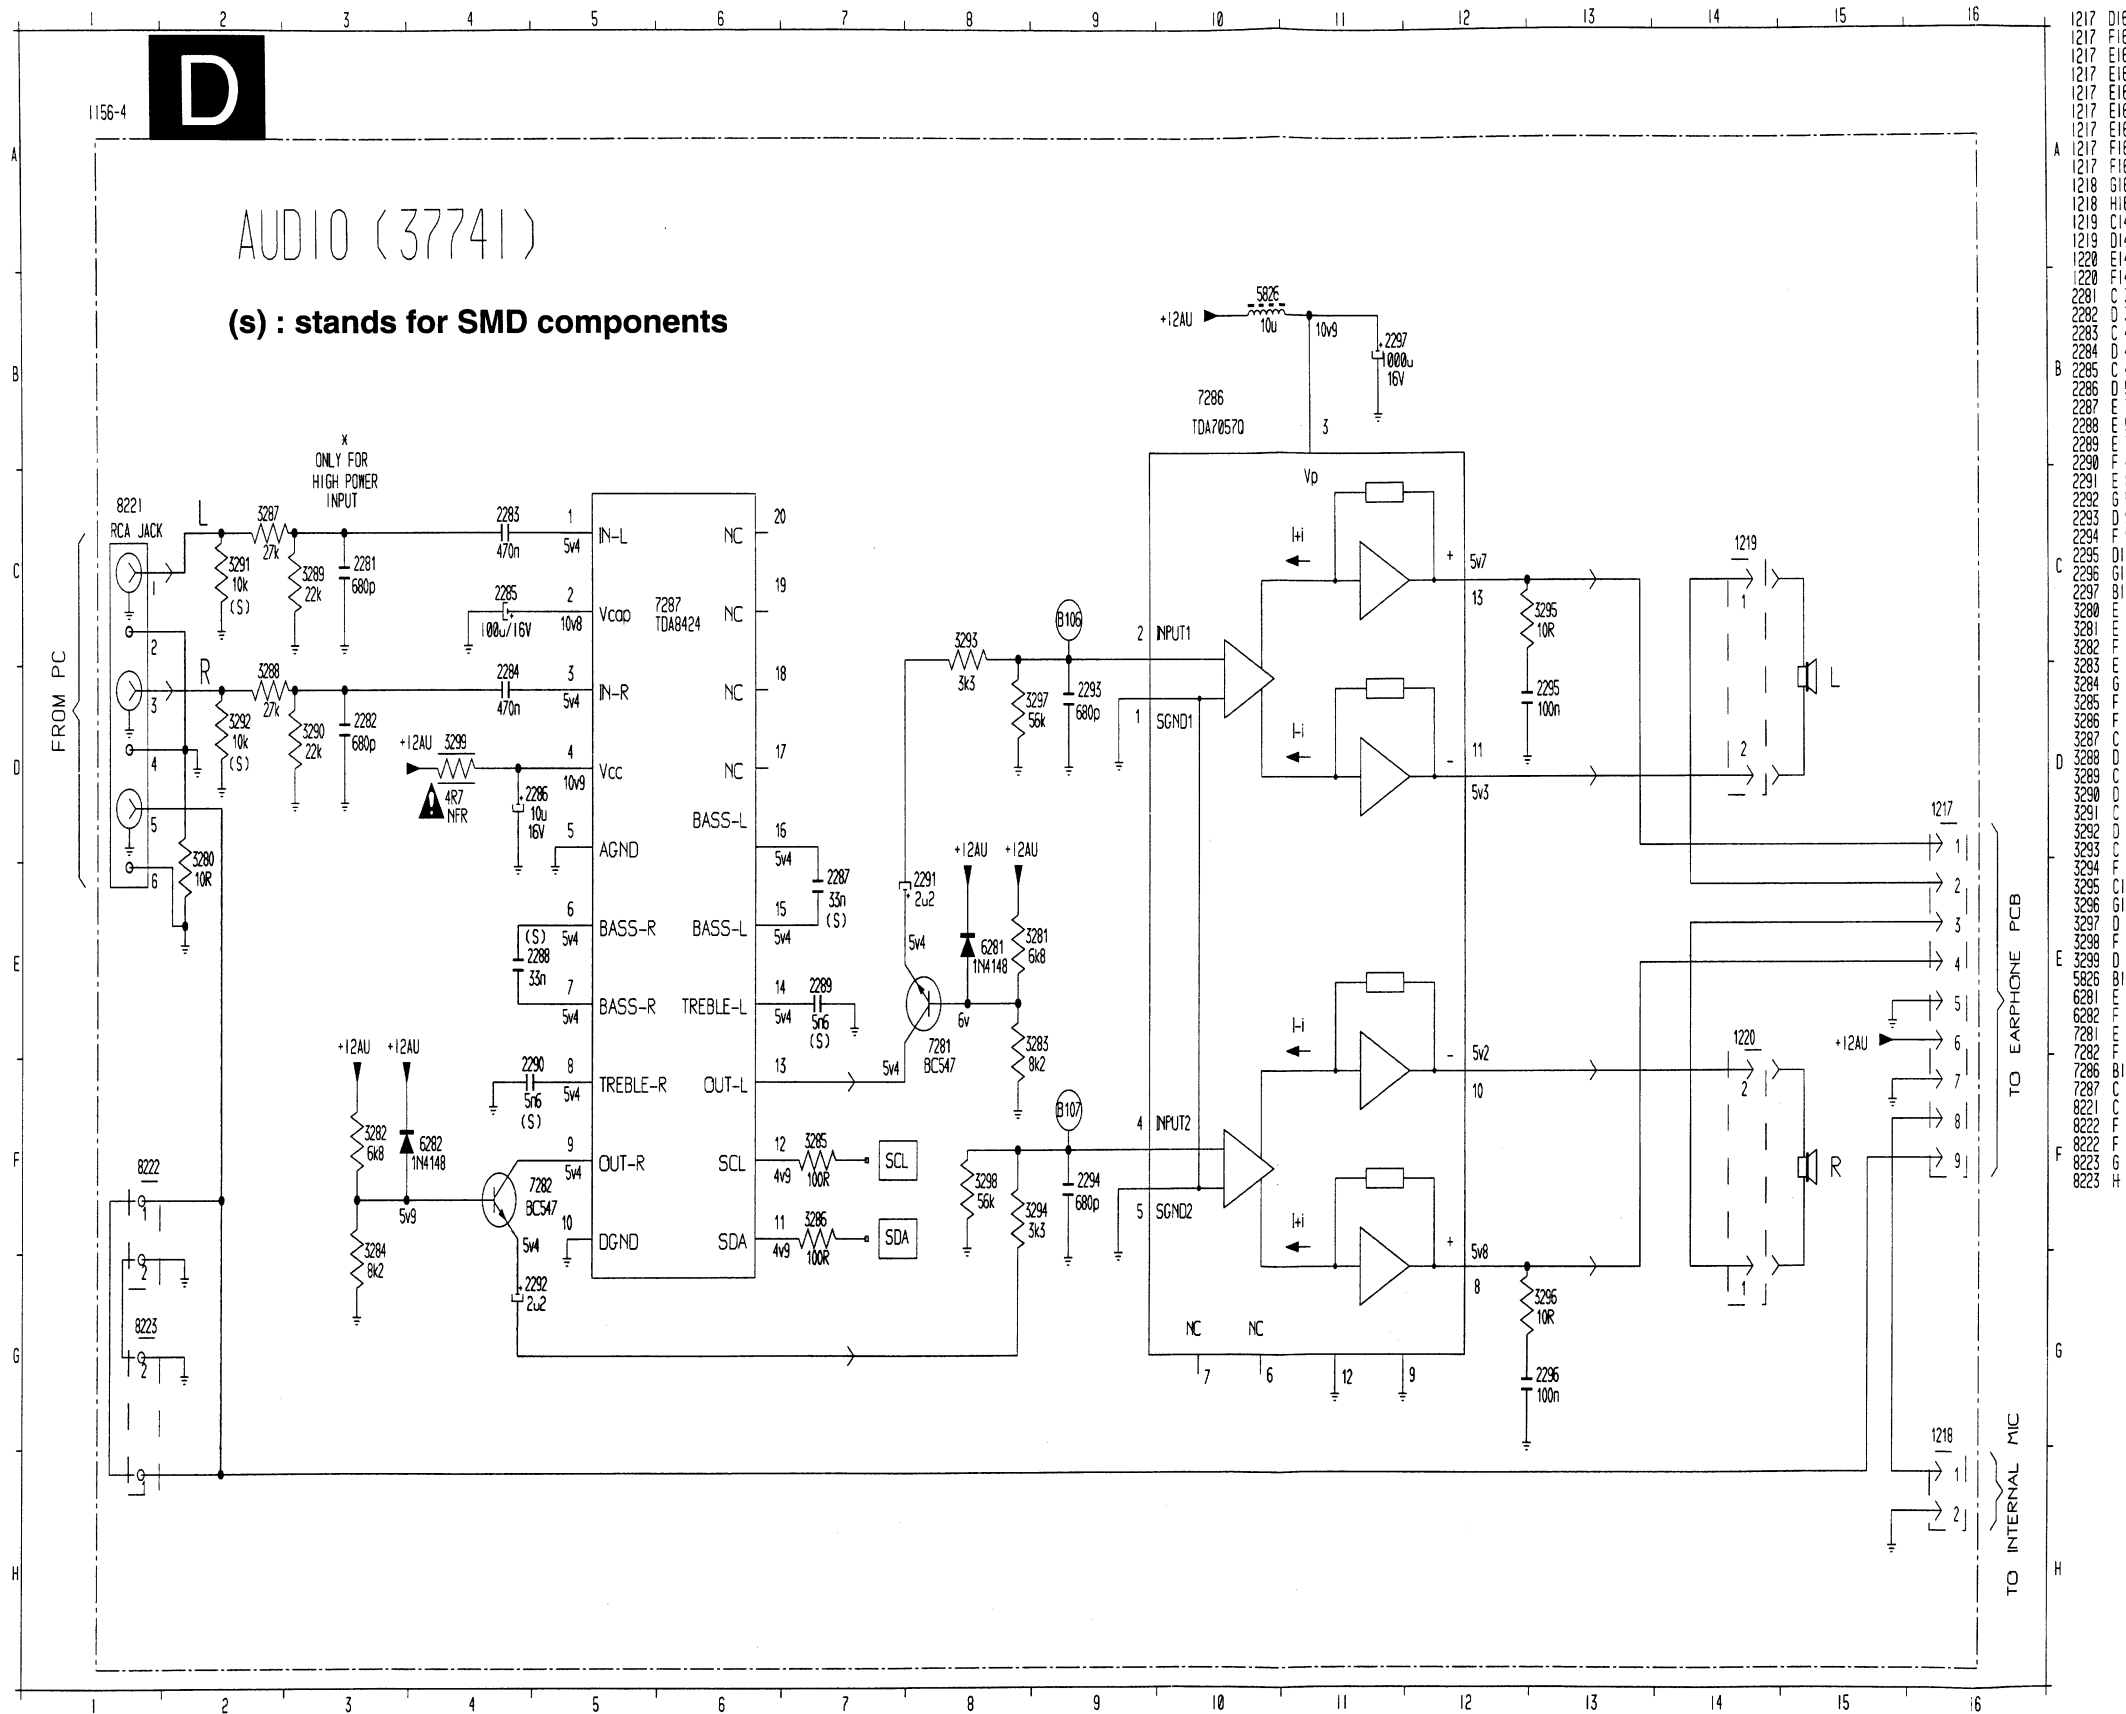

## USB Schematic Diagram (Optional)

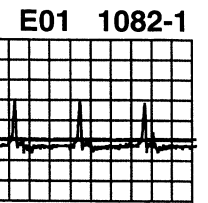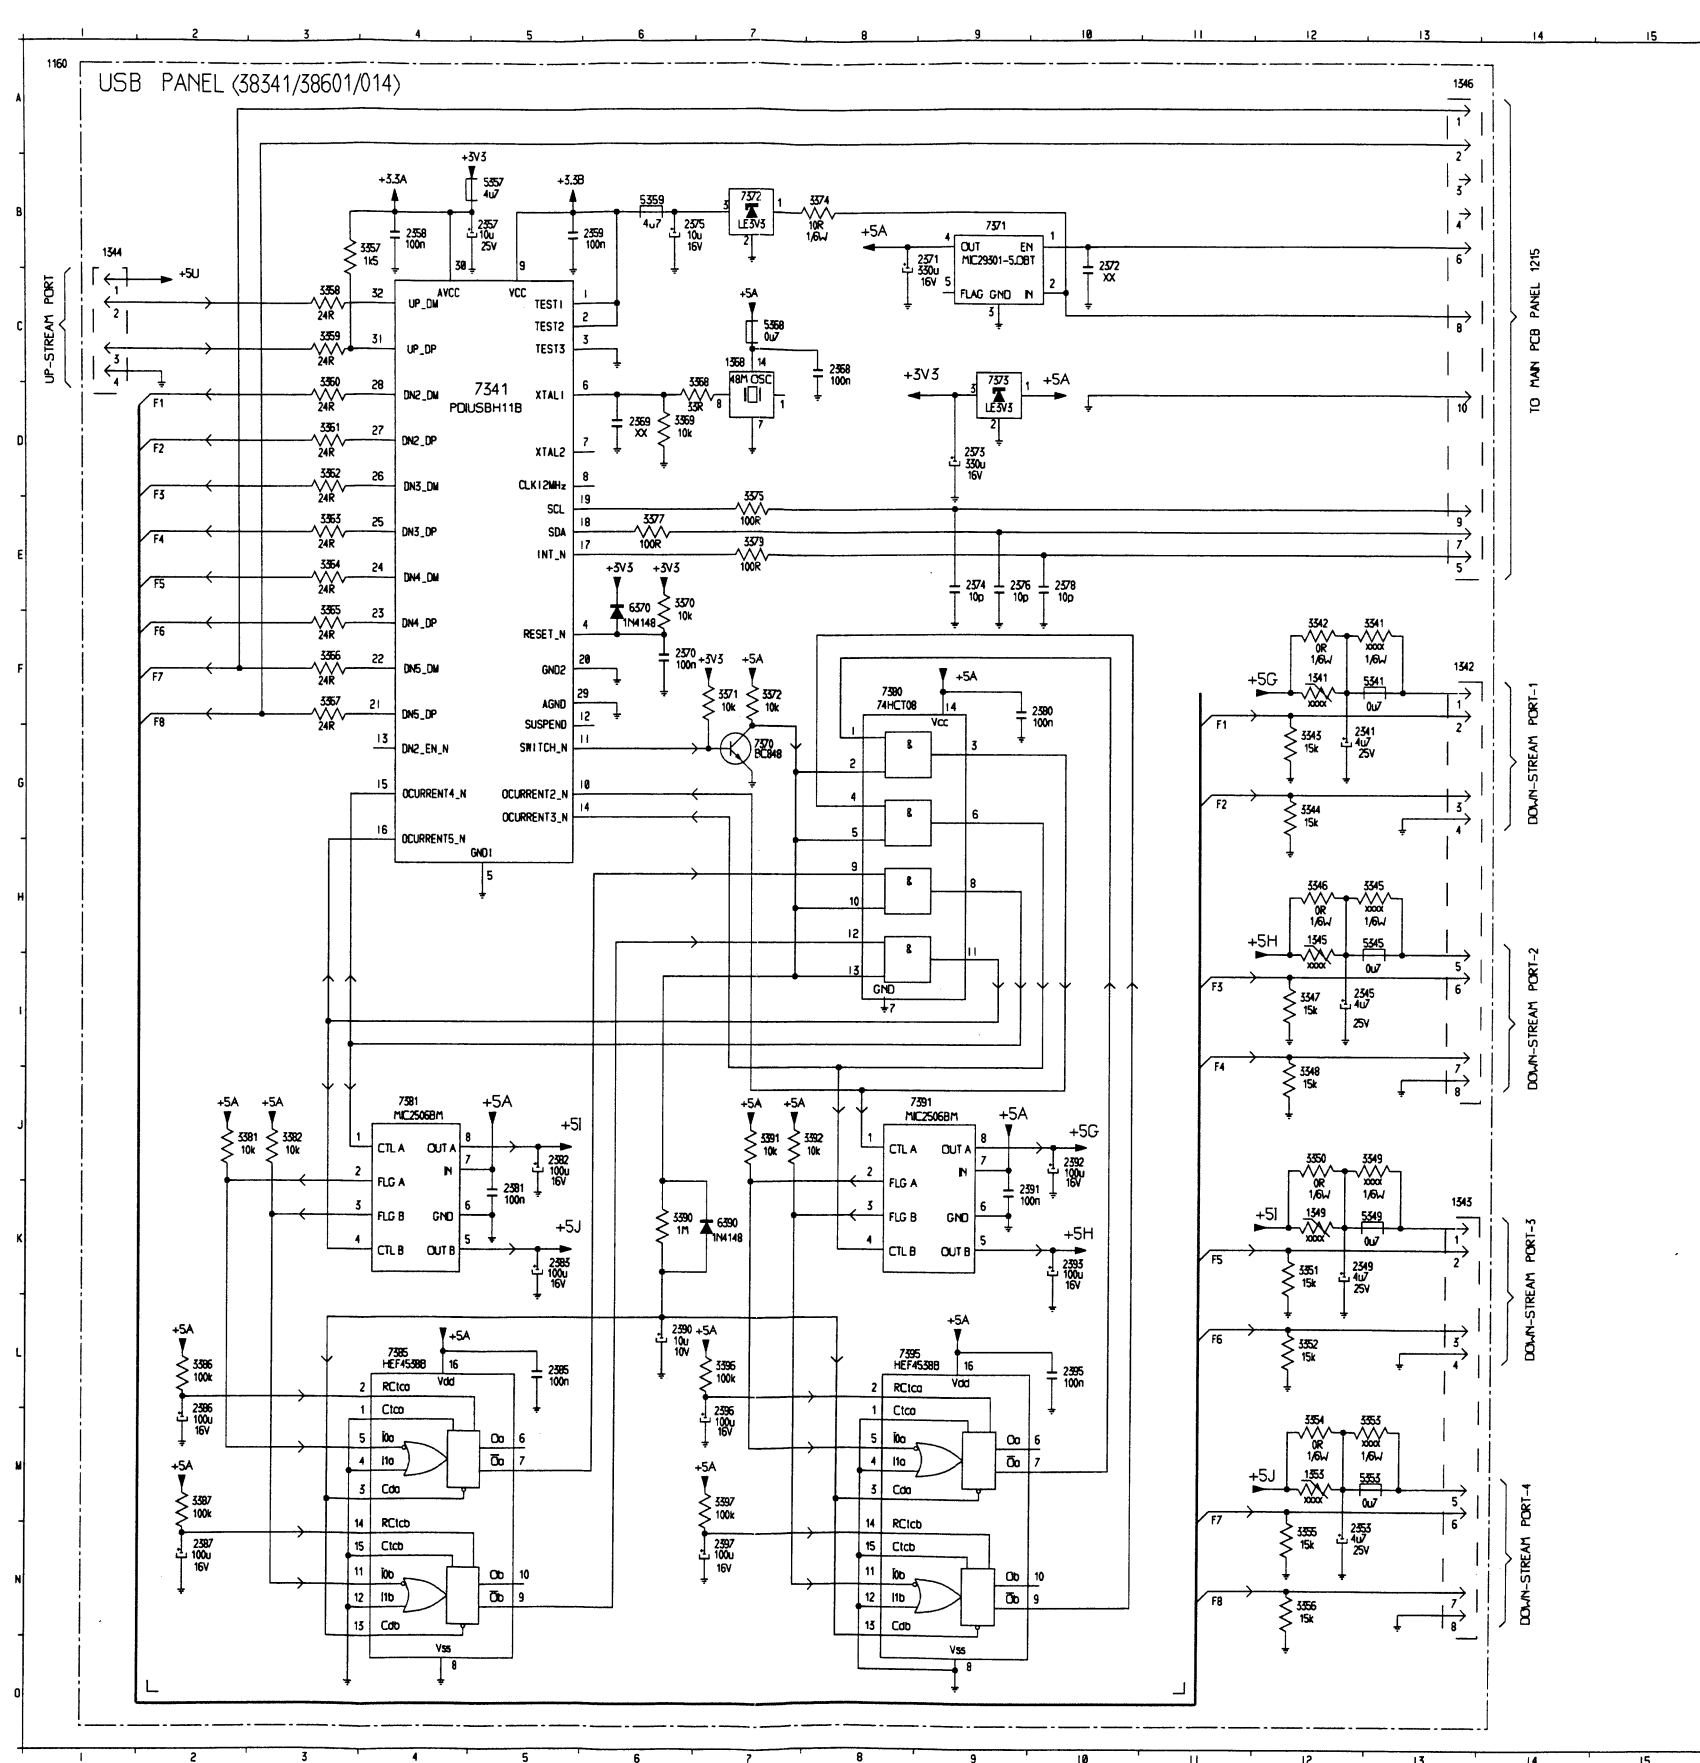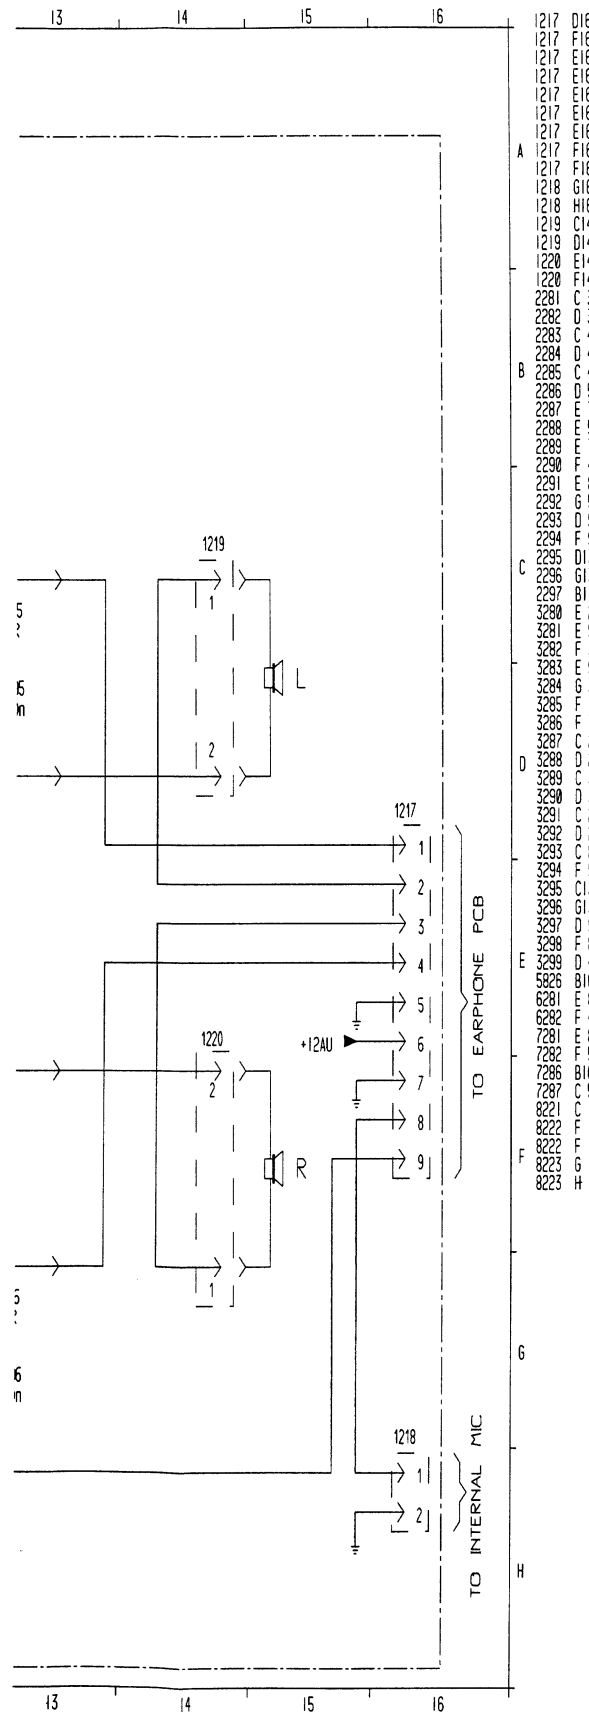


0.1 V/div AC  
10  $\mu$ S/div

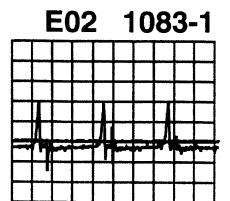


0.1 V/div AC  
10  $\mu$ S/div

## Earphone Schematic Diagram

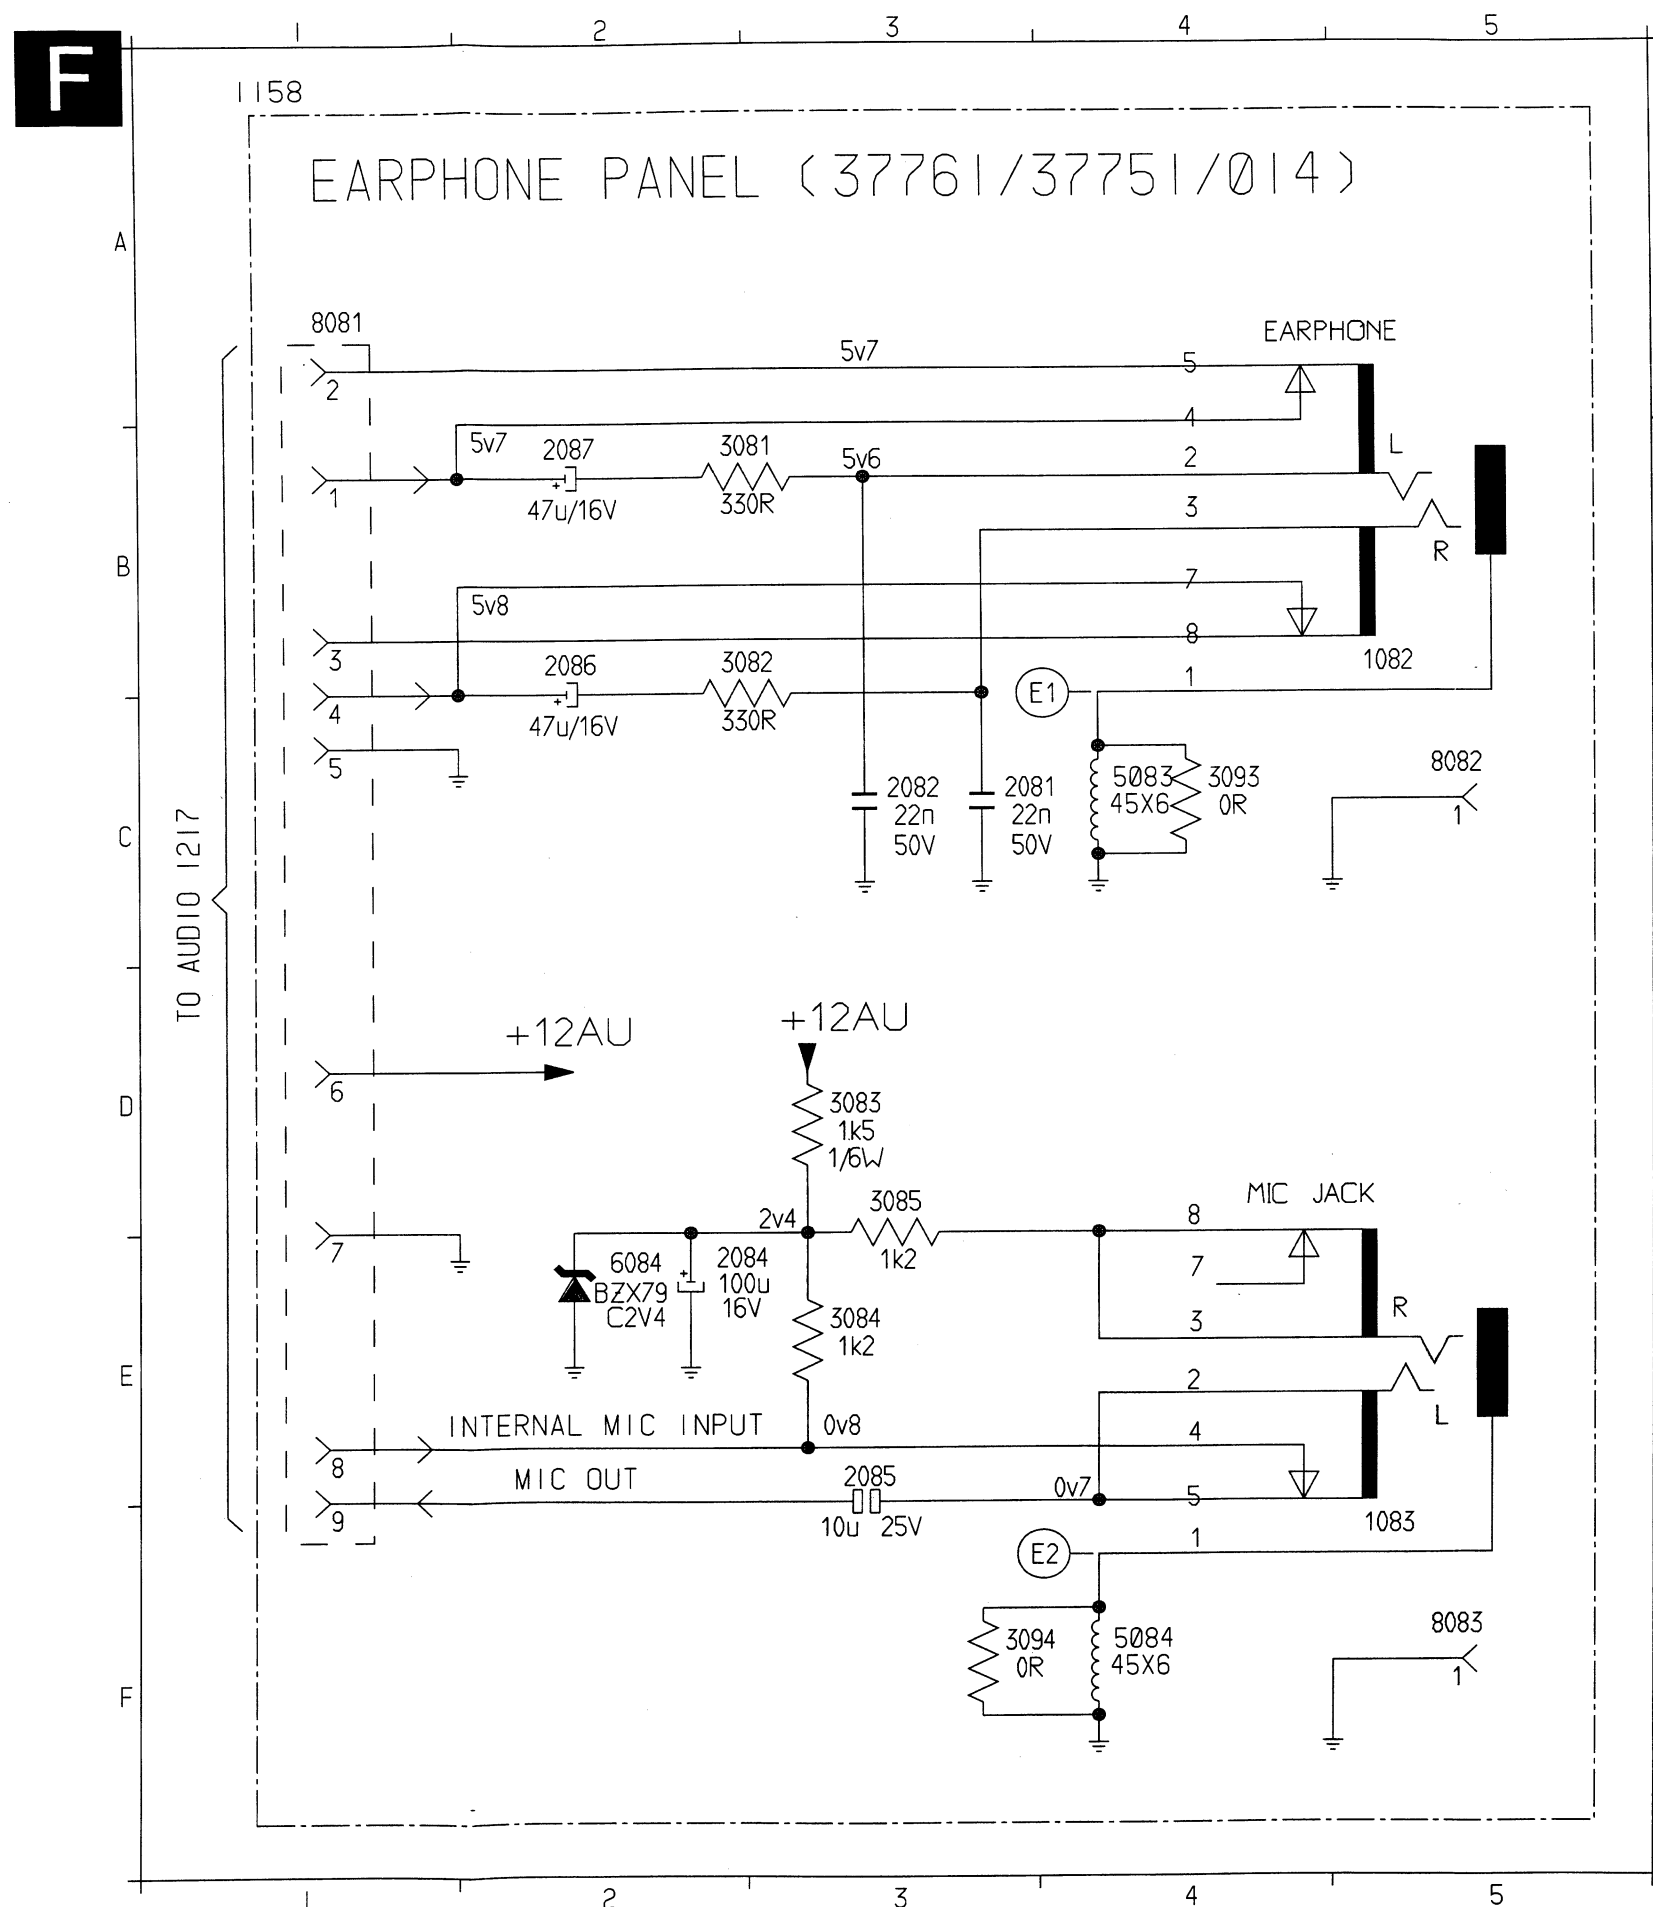

## Rotary Schematic Diagram

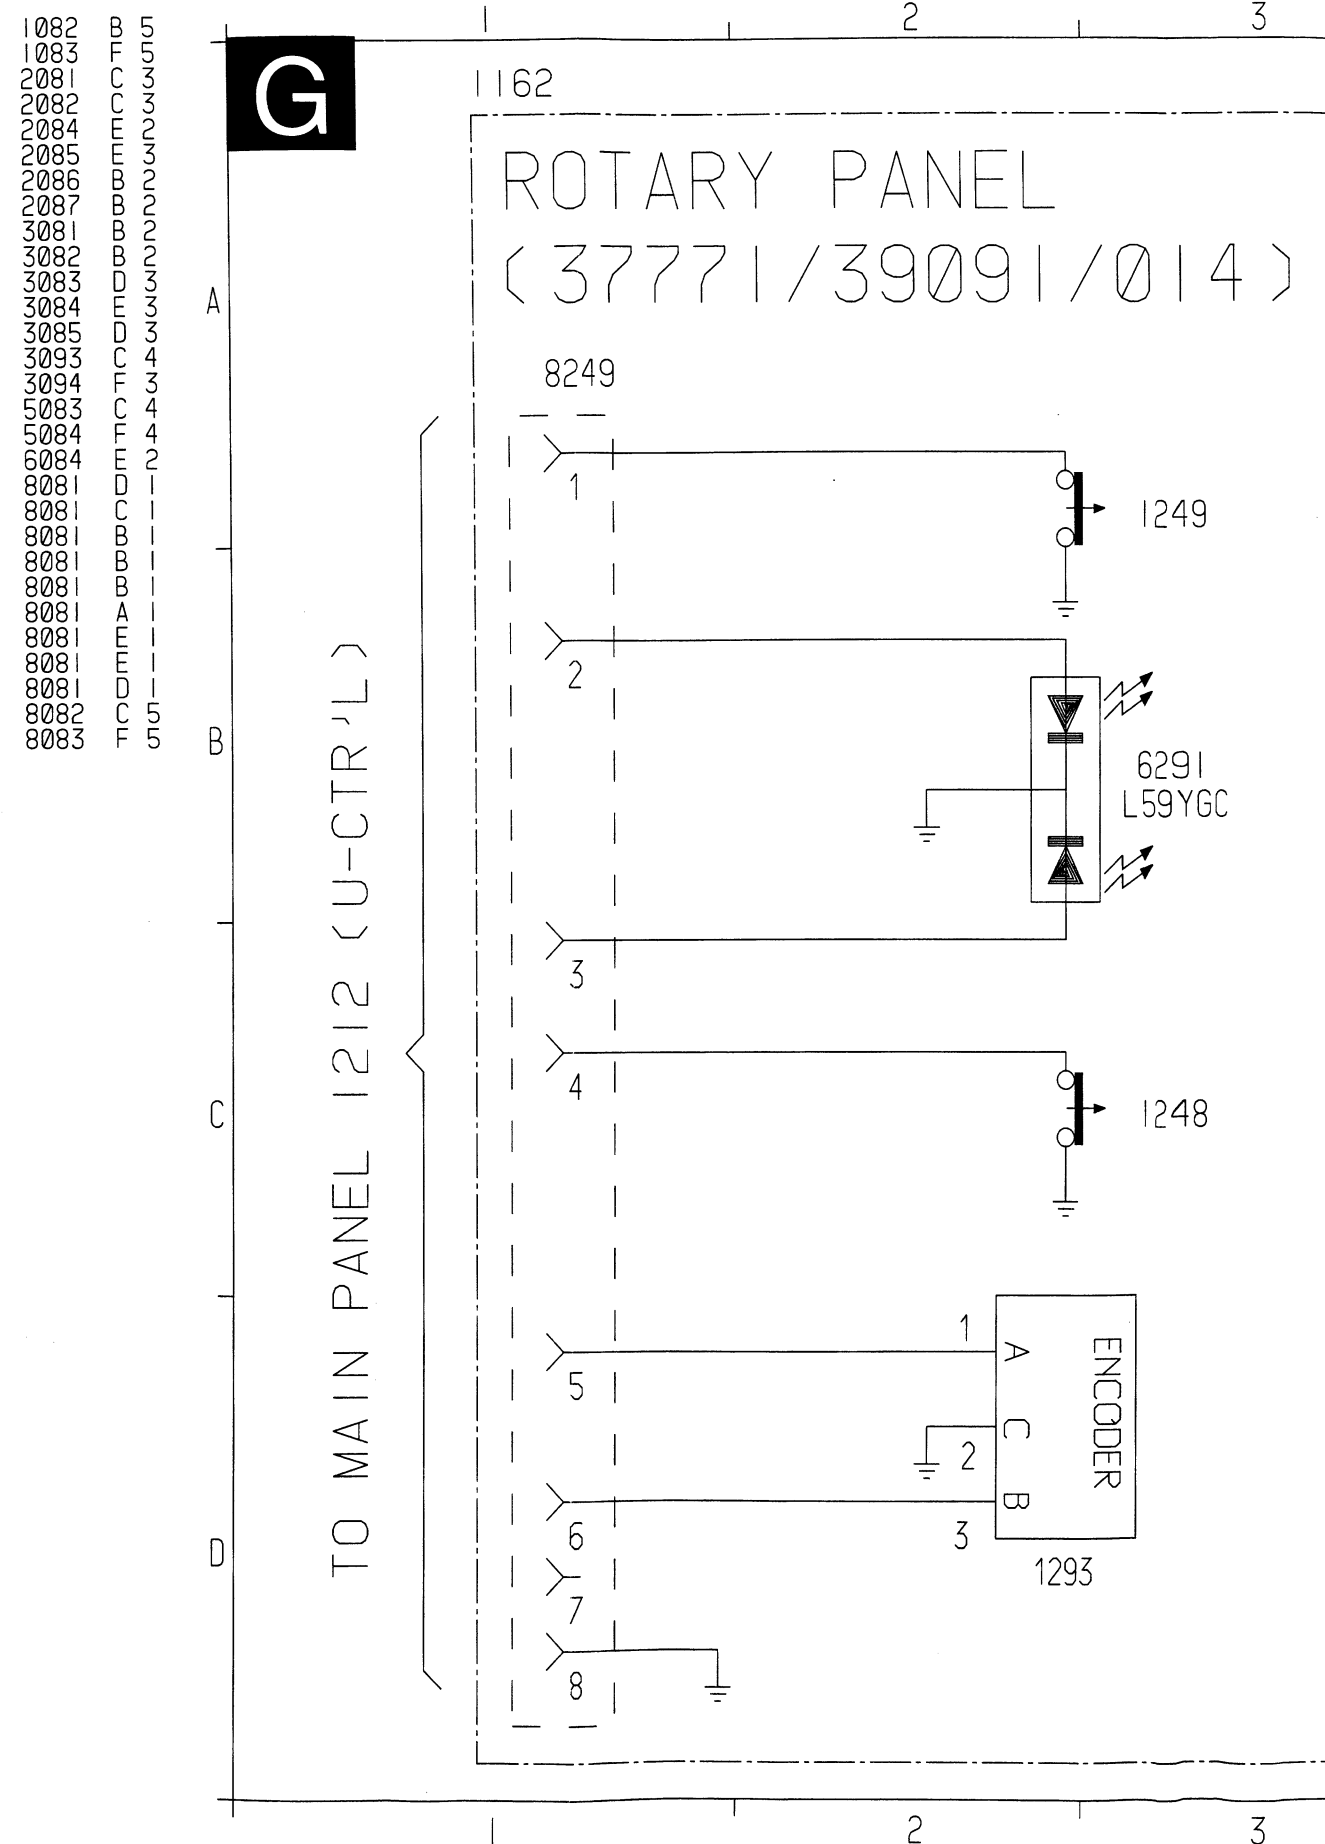

# Rotary Schematic Diagram

# Power Switch Schematic Diagram

1162 1163 1199 1248 1249 1293 6291 8199

G

A

B

C


D

TO MAIN PANEL 1212 (U-CTR'L)

1162


ROTARY PANEL  
( 37771 / 39091 / 014 )

8249

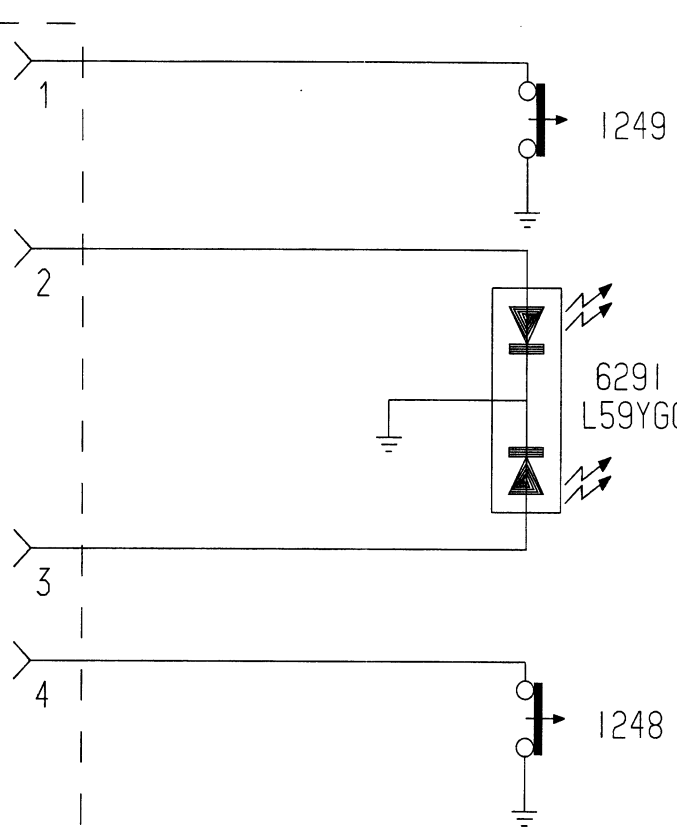

1163

POWER SWITCH PANEL  
( 37681 / 39091 / 014 )

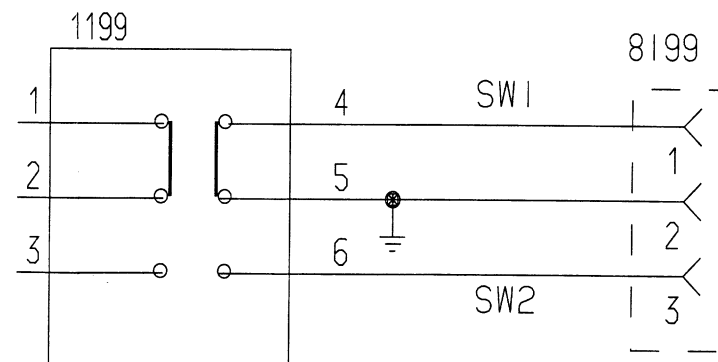

TO MAIN PANEL 1213 (U-CTR'L)

A


B


C

D

1199	B	4
1248	C	3
1249	A	3
1293	D	2
6291	B	3
8199	C	6
8199	C	6
8199	B	6
8249	B	1
8249	A	1
8249	D	1
8249	D	1
8249	C	1
8249	C	1
8249	B	1

# Rotary Panel C.B.A. (G)

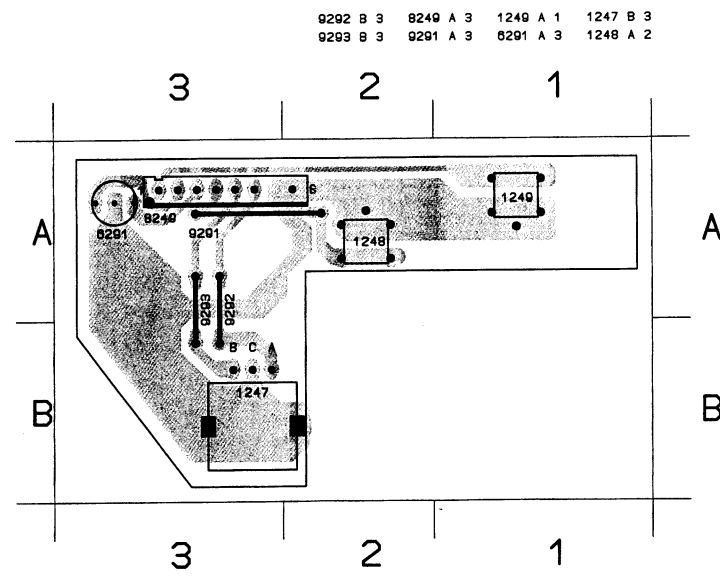

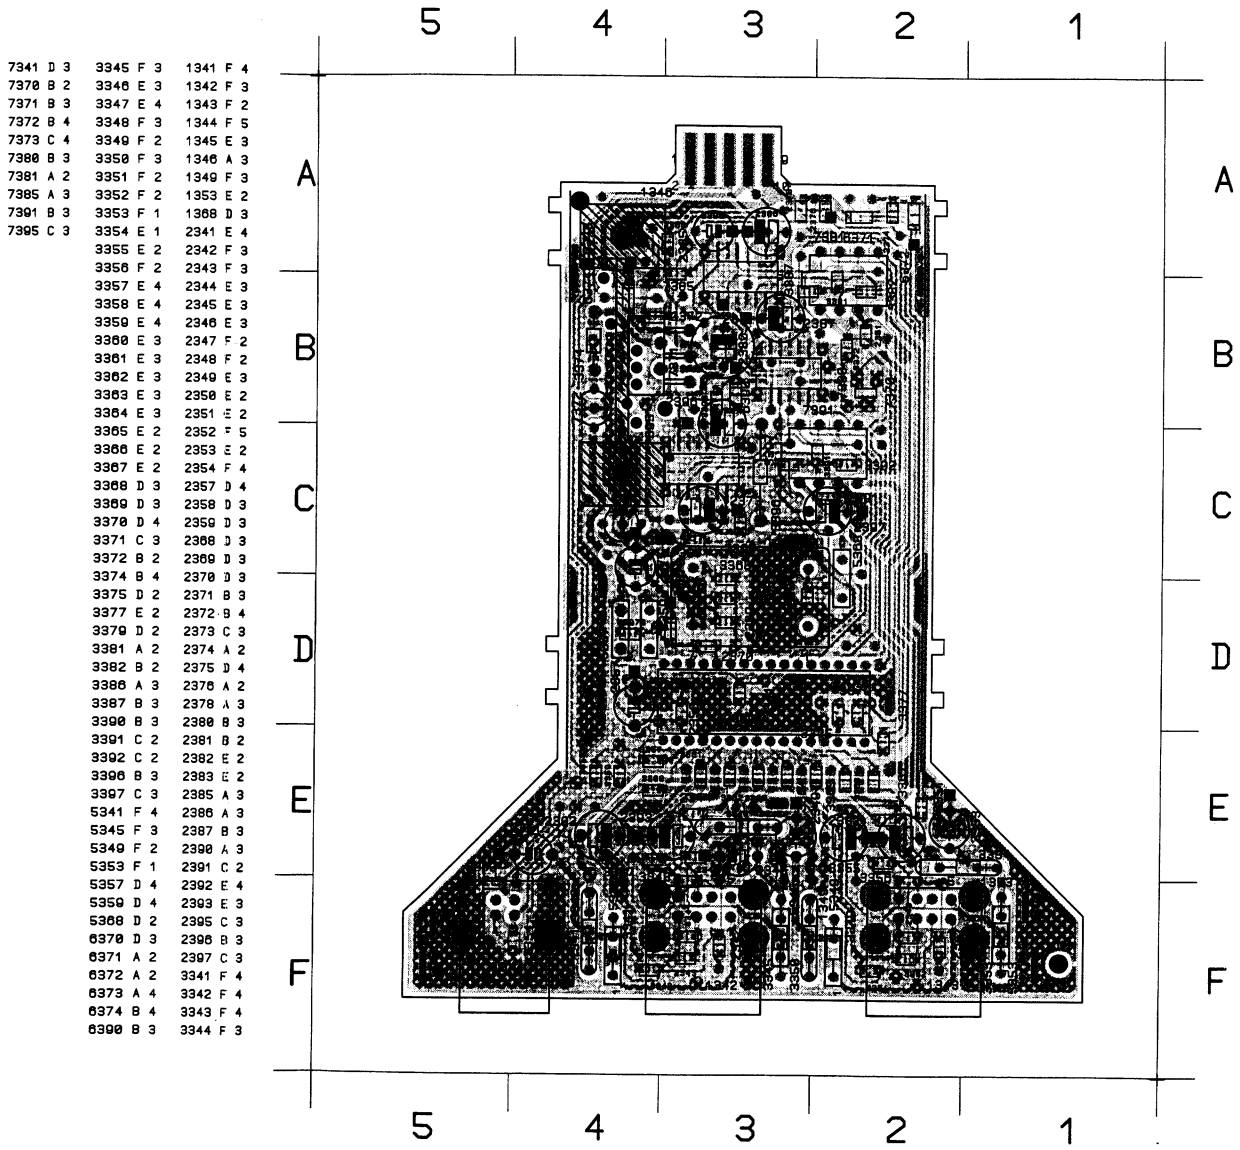



**Warning**

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the unit via a wrist wrap with resistance. Keep components and tools also at the same potential.

**1. Servicing of SMDs (Surface Mounted Devices)****1.1 General cautions on handling and storage**

- Oxidation on the terminals of SMDs results in poor soldering. Do not handle SMDs with bare hands.
- Avoid using storage places that are sensitive to oxidation such as places with sulphur or chlorine gas, direct sunlight, high temperatures or a high degree of humidity. The capacitance or resistance value of the SMDs may be affected by this.
- Rough handling of circuit boards containing SMDs may cause damage to the components as well as the circuit boards. Circuit boards containing SMDs should never be bent or flexed. Different circuit board materials expand and contract at different rates when heated or cooled and the components and/or solder connections may be damaged due to the stress. Never rub or scrape chip components as this may cause the value of the component to change. Similarly, do not slide the circuit board across any surface.

**1.2 Removal of SMDs**

- Heat the solder (for 2-3 seconds) at each terminal of the chip. By using a solder wick and a slight horizontal force, small components can be removed with the soldering iron. They can also be removed with a solder sucker (see Fig. 4.1A)

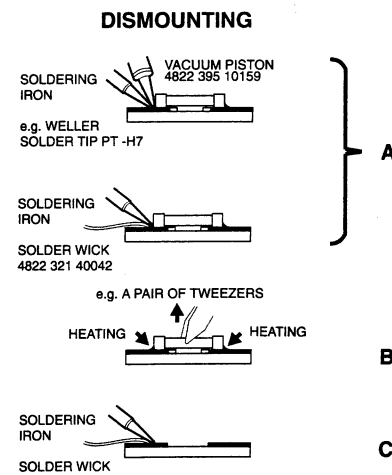


Fig. 4.1

- While holding the SMD with a pair of tweezers, take it off gently using the soldering iron's heat applied to each terminal (see Fig. 4.1 B).
- Remove the excess solder on the solder lands by means of a solder wick or a solder sucker (see Fig. 4.1C).

**1.3 Caution on removal**

- When handling the soldering iron, use suitable pressure and be careful.
- When removing the chip, do not use undue force with the pair of tweezers.
- The soldering iron to be used (approx. 30 W) should preferably be equipped with a thermal control (soldering temperature: 225 to 250 °C).
- The chip, once removed, must never be reused.

**1.4 Attachment of SMDs**

- Locate the SMD on the solder lands by means of tweezers and solder the component on one side. Ensure that the component is positioned correctly on the solder lands (see Fig. 4.2A).
- Next complete the soldering of the terminals of the component (see Fig. 4.2B).

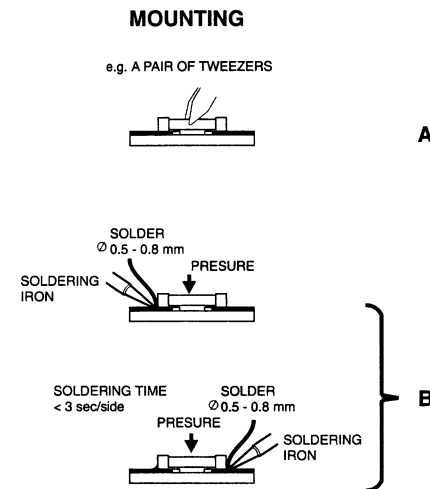


Fig. 4.2

**2. Caution when attaching SMDs**

- When soldering the SMD terminals, do not touch them directly with the soldering iron. The soldering should be done as quickly as possible, care must be taken to avoid damage to the terminals of the SMDs themselves.
- Keep the SMD's body in contact with the printed board when soldering.
- The soldering iron to be used (approx. 30 W) should preferably be equipped with a thermal control (soldering temperature: 225 to 250 °C).
- Soldering should not be done outside the solder land.
- Soldering flux (of rosin) may be used, but should not be acidic.
- After soldering, let the SMD cool down gradually at room temperature.
- The quantity of solder must be proportional to the size of the solder land. If the quantity is too great, the SMD might crack or the solder lands might be torn loose from the printed board (see Fig. 4.3).




**EXAMPLES**

Fig. 4.3





Exploded View

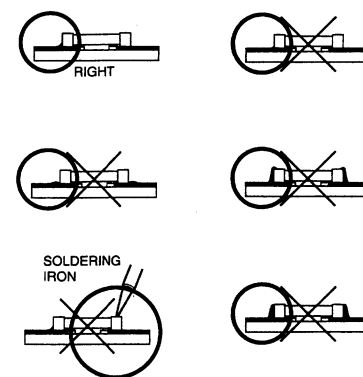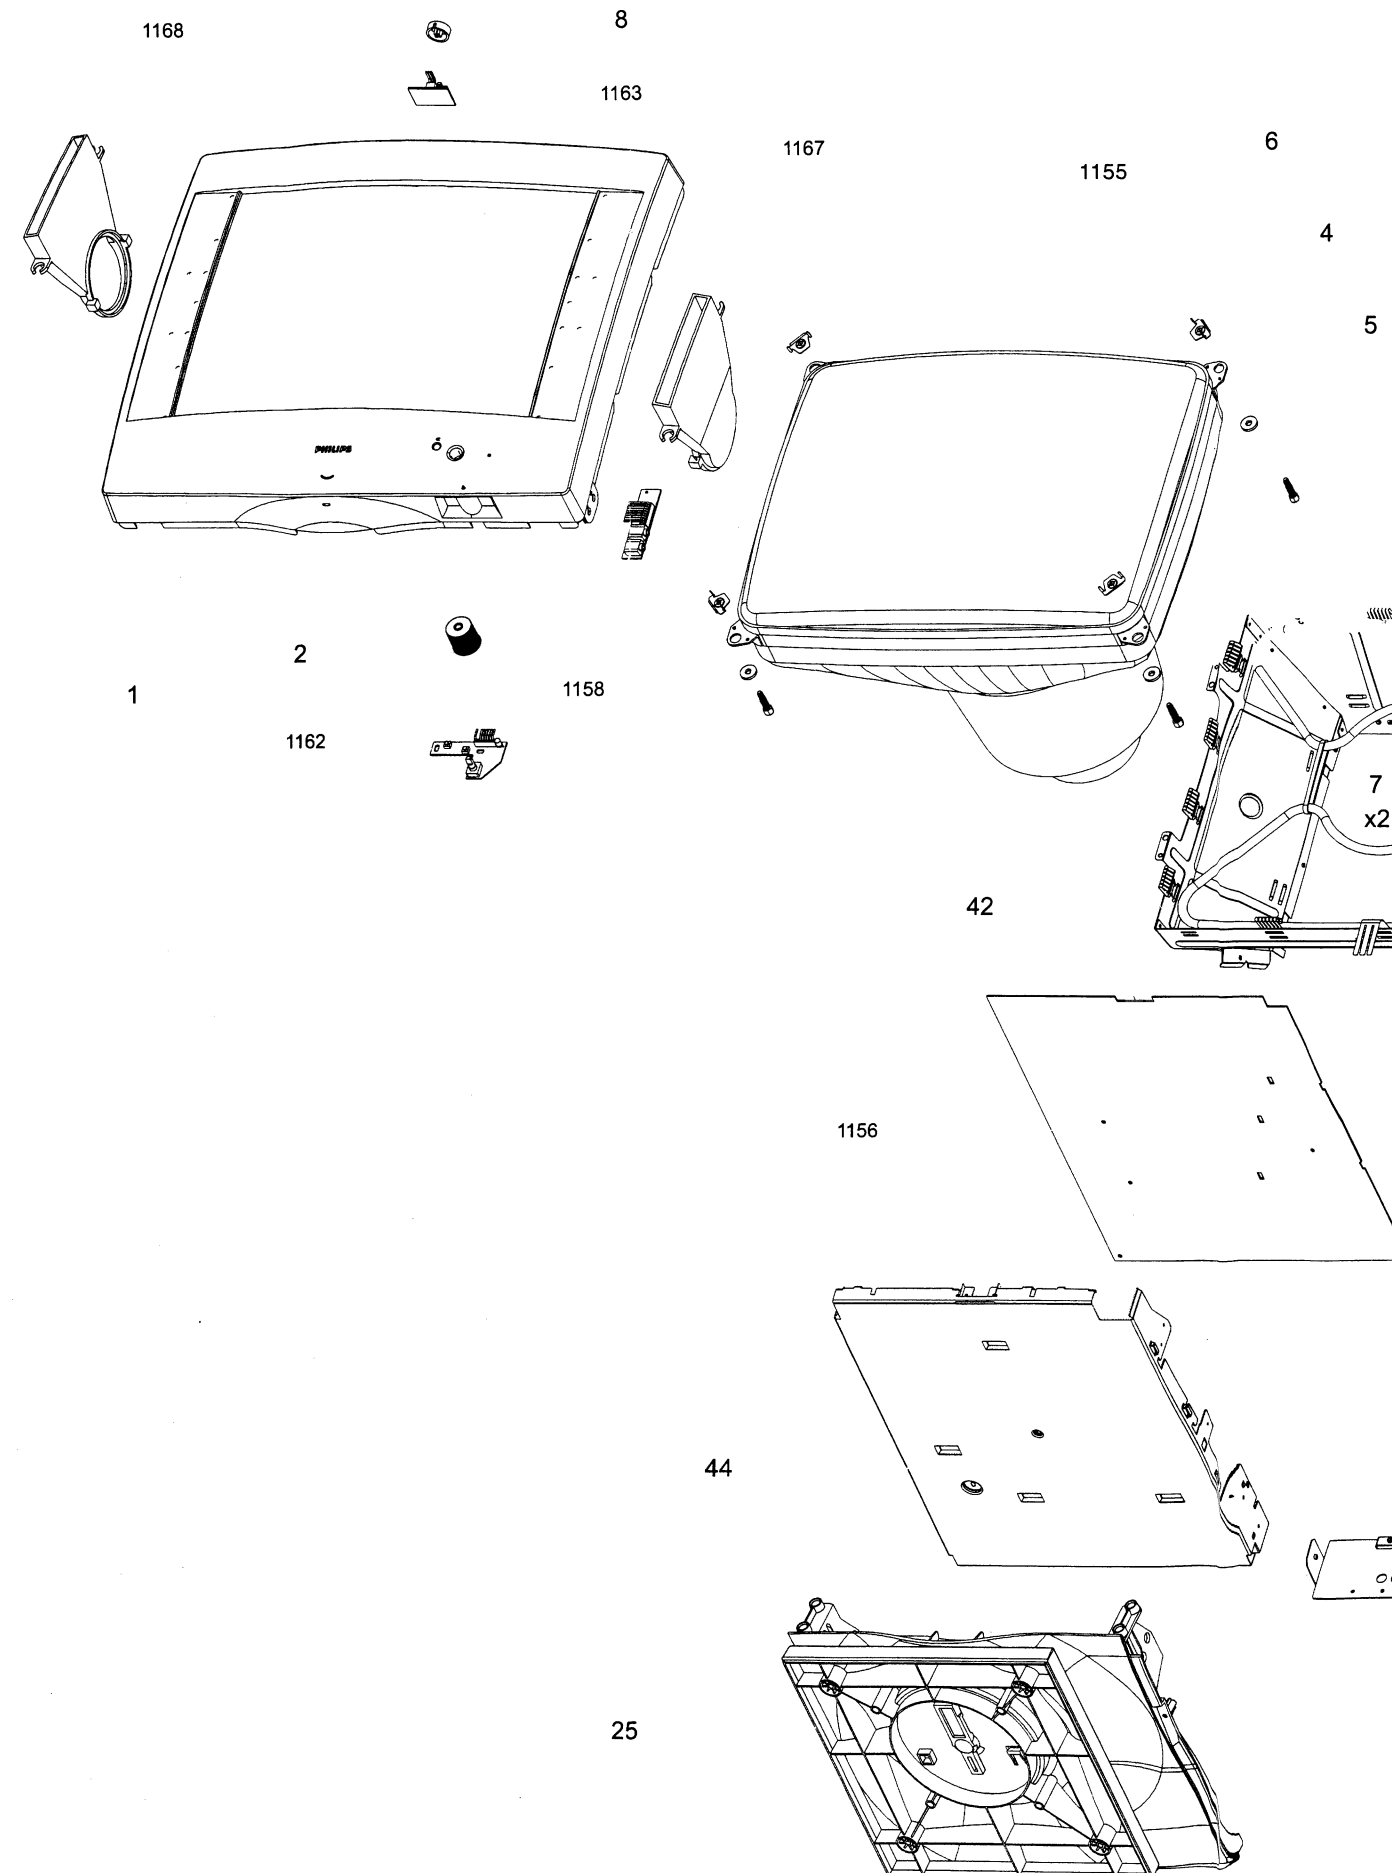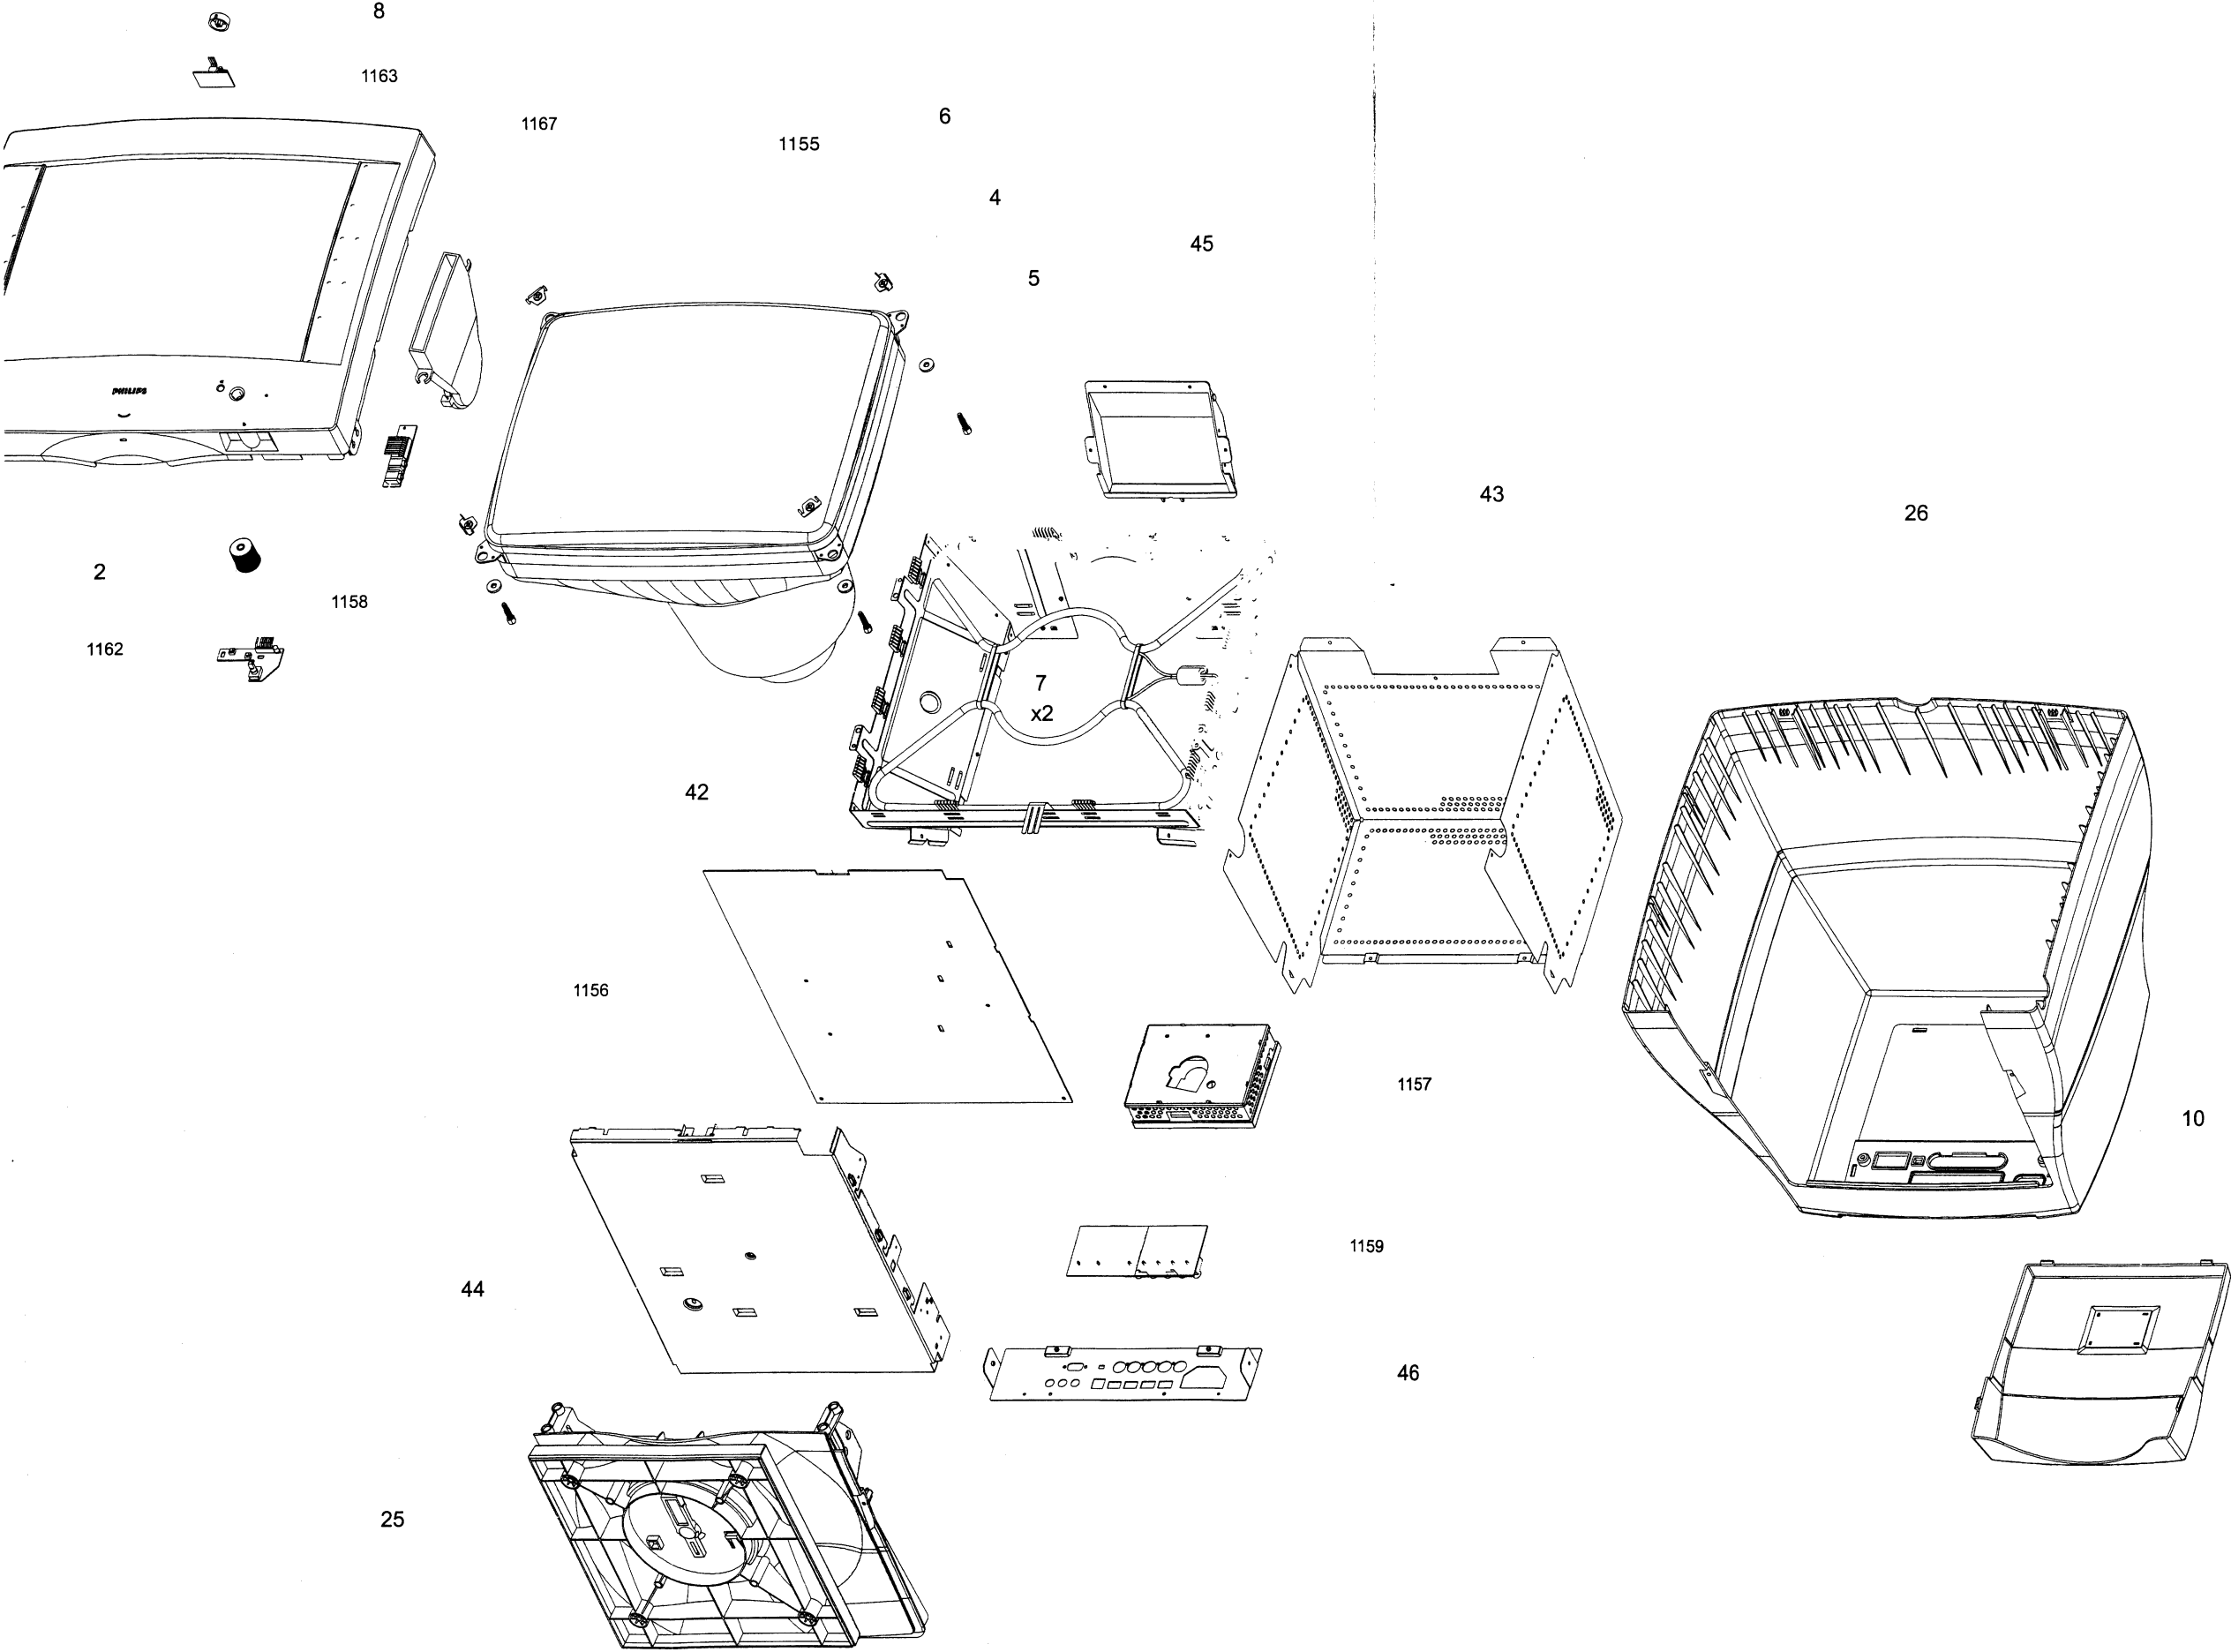

# Spare parts list

19A580BQ/74C

29

## Parts indicated on exploded view: Model: 19A580BQ/74C

1	3138 107 94230	FRONT CABINET ASSY
	3138 104 39310	LENS
	3138 104 39320	FUNCTION KNOB
	4822 816 11141	SPEAKER PANEL (R)
2	3138 104 38260	LOCKER
4	3138 104 39300	ROTARY KNOB
5	3138 101 63950	CRT MOUNTING WASHER
5	3138 100 41180	SCREW-CRT (TAP TITE SCREW W/WASHER)
6	3138 101 64480	PLATE-CRT
8	3138 104 39380	POWER KNOB
10	3138 107 94440	CABLE COVER ASSY
	3138 104 39330	CABLE COVER
	3138 104 40990	NAME PLATE
25	3138 107 94240	PEDESTAL ASSY
	3138 104 39280	BOTTOM SLIDER
	3138 104 39270	BASE - PEDESTAL
26	3138 104 39270	BACK COVER CRT
1155A	4822 131 11275	M46LLQ683X01 (S)
1156	3138 128 62000	MAIN PCB ASSY
1157	3138 128 62480	VIDEO PCB ASSY
1158	3138 128 59270	EARPHONE PCB ASSY
1162	3138 128 59310	ENCODER PCB ASSY
1163	3138 128 59320	DC POWER SWITCH PCB ASSY
1167	3138 128 63030	SPEAKER ASSY
1168	3138 128 63030	SPEAKER ASSY

### Various

1166A	3138 128 77960	DEGAUSSING COIL ASSY
	4822 701 20292	TAPPING SCREW WITH WASHER
	3138 105 35110	D.F.U
	3138 105 35200	QUICK SET UP GUIDE
	4822 600 10409	P.E. BAG (for DFU)
	3138 106 51130	CARTON
	3138 106 51100	CUSHION TOP-L
	3138 106 51110	CUSHION TOP-R
	3138 106 51120	CUSHION BOTTOM
	4822 701 13753	P.E. BAG (for SET)

### Accessories

	4822 320 12215	AUDIO CABLE
	4822 320 12216	MICROPHONE CABLE
	4822 265 11089	VGA ADAPTOR HD15/DB15 (MAC ADAPTOR)
	3138 117 01000	CD-ROM COLORIFIC
1151A	4822 321 11283	MAINS CORD
1152	4822 320 12217	I/F CABLE

## 1156 Main panel

### Various

1156	3138 128 62000	MAIN PCB ASSY
	4822 492 71337	SPRING (FUSE HOLDER)
	4822 701 20292	TAPPING SCREW WITH WASHER
	5322 390 20011	VET SILIC.P4 20GR
1101A	4822 070 34002	FUSE, 218004.(4A)

1102A	4822 280 70378	RELAY 2P 12V/60MA OMI-SS212 B
1109	3138 128 78430	AC INLET ASSY
1114	4822 265 30891	2 P.
1202	4822 242 10836	12.000 000 MHz
1203	4822 267 10703	2P MALE
1211	4822 267 10696	14P MALE (62511B)
1212	4822 267 10697	7P WAFER (63576)
1213	4822 267 10698	3P MALE (61143B)
1215	4822 267 10704	8P FEMALE
1217	4822 267 10699	9P WAFER (63578)
1218	4822 265 11118	CONNECTOR 2P MALE
1221	4822 265 11175	R.C.A. JACK
	4822 492 62076	TRANSISTORS
	4822 466 93161	INSULATION PLATE
	4822 466 92891	INSULATING PLATE
	5322 390 20011	VET SILIC.P4 20GR
1263	3138 128 63080	EEPROM ASSEMBLY (7201)
1504	4822 265 31231	3 P MALE
<b>II</b>		
2104	4822 121 70446	220nF 20% 250V
2105	4822 126 14088	2.2nF 20% 250V
2106	4822 126 14088	2.2nF 20% 250V
2107	5322 121 44212	1μF 10% 275B
2111	4822 121 43641	470nF 5% 400V
2112	4822 121 43699	220nF 100V
2113	4822 121 43699	220nF 100V
2114	4822 121 43696	100nF 100V
2115	4822 121 43696	100nF 100V
2116	5322 122 32531	100pF 5% 50V
2117	4822 126 10453	50V
2118	4822 122 30057	2.7nF 10% 100V
2119	4822 124 22669	1μF 20% 50V
2120	4822 124 22669	1μF 20% 50V
2121	4822 121 43696	100nF 100V
2122	4822 126 13469	330pF 10% Y5B 2KV
2123	4822 124 11517	450V 100U 20%
2124	4822 121 43696	100nF 100V
2125	4822 121 70357	22nF 10% 630V
2126	4822 121 70386	47nF 10% 250V
2127	4822 124 81186	47U 20% 20%
2128	4822 126 13196	CER2 SMD 25V 100N PM10 R
2129	4822 124 12112	1000μF 20% 10V
2130	4822 124 40849	330μF 20% 16V
2132	4822 124 12112	1000μF 20% 10V
2134	4822 124 12113	3300μF 20% 10V
2138A	4822 126 14088	2.2nF 20% 250V
2141	4822 124 22669	1μF 20% 50V
2142	4822 126 13606	10N 2% 100V
2143	4822 124 40239	0.47μF 20% 63V
2146	4822 126 13196	CER2 SMD 25V 100N PM10 R
2147	5322 122 32331	1nF 10% 100V
2148	4822 121 43696	100nF 100V
2149	4822 121 43913	470nF 10% 100V
2150	5322 122 32311	470pF 10% 100V
2151	5322 122 32311	470pF 10% 100V
2154	4822 124 42145	100μF 20% 25V
2157	4822 121 43908	47nF 10% 250V
2159	4822 121 43699	220nF 100V
2160	4822 126 13196	CER2 SMD 25V 100N PM10 R
2161	4822 122 33342	33nF 10% 63V
2163	4822 121 43908	47nF 10% 250V
2164	4822 121 43364	10nF 10% 400V
2165	4822 121 43699	220nF 100V
2166	4822 121 43696	100nF 100V
2167	4822 124 42359	47μF 100V
2168	4822 124 42149	220μF 20% 25V
2169	4822 124 42145	100μF 20% 25V
2170	4822 126 11103	10nF 5% 50V
2171	4822 121 43696	100nF 100V
2172A	4822 126 14088	2.2nF 20% 250V
2173	4822 126 13196	CER2 SMD 25V 100N PM10 R
2181	4822 124 11941	100μF 20% 250V
2182	4822 124 11941	100μF 20% 250V
2185	4822 124 12034	220μF 20% 100V
2186	4822 122 32899	100pF 10%B 500V
2187	4822 124 11942	2200μF 20% 25V
2188	4822 122 32899	100pF 10%B 500V

2189	4822 124 11943	1000μF 20% 25V
2190	4822 122 32899	100pF 10%B 500V
2191	4822 124 81285	2200μF 20% 16V
2192	4822 124 11942	2200μF 20% 25V
2193	4822 124 81131	330μF 20% 16V
2194	4822 124 42199	22μF 20% 50V
2195	4822 124 40207	100μF 20% 25V
2196	4822 124 22669	1μF 20% 50V
2197	5322 122 31866	6.8nF 10% 63V
2198	5322 122 32336	560pF 10% 100V
2201	4822 121 43696	100nF 100V
2202	5322 122 32143	22pF 100V
2203	5322 122 32143	22pF 100V
2214	4822 124 23539	10μF 20% 50V
2218	5322 124 41817	220μF 16V
2219	5322 122 32659	33pF 5% 50V
2220	5322 122 32659	33pF 5% 50V
2221	4822 124 22681	47μF 20% 16V
2222	4822 122 33575	220pF 5% 50V
2233	4822 124 23539	10μF 20% 50V
2234	5322 122 32658	22pF 5% 50V
2236	5322 122 32658	22pF 5% 50V
2239	4822 124 22681	47μF 20% 16V
2244	4822 124 22686	10μF 16V
2245	4822 126 13196	CER2 SMD 25V 100N PM10 R
2252	4822 122 33177	10nF 20% 50V
2253	4822 121 43699	220nF 100V
2254	4822 122 33177	10nF 20% 50V
2277	4822 124 23441	10μF 20% 50V
2281	5322 126 10184	680P 5% 50V
2282	5322 126 10184	680P 5% 50V
2283	4822 121 43913	470nF 10% 100V
2284	4822 121 43913	470nF 10% 100V
2285	4822 124 22678	100μF 20% 16V
2286	4822 124 22686	10μF 16V
2287	4822 122 33342	33nF 10% 63V
2288	4822 122 33342	33nF 10% 63V
2289	4822 122 32646	5.6nF 10% 50V
2290	4822 122 32646	5.6nF 10% 50V
2291	4822 124 12072	2.2μF 20% 50V
2292	4822 124 40763	2.2μF 100 V
2293	5322 122 32052	680pF 10% 100V
2294	5322 122 32052	680pF 10% 100V
2295	4822 121 43696	100nF 100V
2296	4822 121 43696	100nF 100V
2297	4822 124 42172	1000μF 16V
2305	4822 124 22681	47μF 20% 16V
2310	5322 122 32452	47pF 5% 63V
2311	5322 122 32452	47pF 5% 63V
2316	4822 126 13561	220nF 10% 16V
2317	4822 126 13196	CER2 SMD 25V 100N PM10 R
2325	4822 124 80132	47μF 20% 25V
2326	4822 124 42136	10μF 25V
2331	4822 126 13196	CER2 SMD 25V 100N PM10 R
2332	5322 122 32531	100pF 5% 50V
2333	5322 122 32531	100pF 5% 50V
2401	4822 124 22678	100μF 20% 16V
2403	4822 121 10705	47nF 5% 100V
2404	4822 121 10705	47nF 5% 100V
2405	4822 121 43513	100nF 100V
2406	4822 124 23539	10μF 20% 50V
2407	4822 121 43696	100nF 100V
2408	5322 122 32531	100pF 5% 50V
2409	4822 121 43695	47nF 10% 100V
2410	4822 121 70439	2.2nF 5% 100V
2411	4822 126 13606	10N 2% 100V
2412	4822 126 12104	12nF 5% 63V
2416	5322 122 32654	22nF 10% 63V
2425	4822 124 23539	10μF 20% 50V
2430	5322 122 32531	100pF 5% 50V
2431	4822 126 13196	CER2 SMD 25V 100N PM10 R
2432	4822 124 22669	1μF 20% 50V
2433	4822 124 40242	1μF 20% 63V
2434	4822 124 23539	10μF 20% 50V
2437	4822 122 33177	10nF 20% 50V
2438	4822 124 22669	1μF 20% 50V
2439	4822 124 40242	1μF 20% 63V
2440	4822 124 40246	4.7μF 20% 63V
2443	4822 124 23539	10μF 20% 50V
2444	4822 124 40242	1μF 20% 63V
2450	4822 124 40246	4.7μF 20% 63V
2453	4822 124 23441	10μF 20% 50V
2456	4822 124 23539	10μF 20% 50V
2457	4822 124 23539	10μF 20% 50V
2460	4822 124 23539	10μF 20% 50V
2467	4822 124 80132	47μF 20% 25V
2468	4822 122 33177	10nF 20% 50V
2472	4822 126 13196	CER2 SMD 25V 100N PM10 R
2473	4822 121 43916	330nF 10% 250V
2474	4822 124 22681	47μF 20% 16V

2477	4822 124 23539	10μF 20% 50V
2480	4822 124 80132	47μF 20% 25V
2486	5322 122 32448	10pF 5% 50V
2487	5322 122 32452	47pF 5% 63V
2488	5322 126 10184	680P 5% 50V
2489	5322 126 10184	680P 5% 50V
2490	4822 124 40207	100μF 20% 25V
2491	4822 124 23539	10μF 20% 50V
2492	5322 122 32654	22nF 10% 63V
2493	4822 124 80132	47μF 20% 25V
2501	4822 124 42144	470μF 63V
2502	4822 124 22366	100μF 20% 40V
2503	4822 126 14106	220pF 5% 50V
2504	4822 121 10706	22nF 5% 100V
2509	4822 121 43513	100nF 100V
2510	4822 124 42144	470μF 63V
2511	5322 116 80853	560pF 5% 63V
2513	5322 116 80853	560pF 5% 63V
2519	4822 124 23539	10μF 20% 50V
2521	4822 124 22681	47μF 20% 16V
2526	4822 121 70444	47nF 250V
2527	4822 124 22675	1μF 20% 160V
2529	4822 126 13035	220pF 10% 2KV
2530	4822 126 13035	220pF 10% 2KV
2531	4822 121 43364	10nF 10% 400V
2532	4822 121 70147	3.9nF 5% 1.6KV
2536	4822 124 22681	47μF 20% 16V
2537	4822 121 43918	100nF 10% 400V

2683	4822 121 70598	82nF 5% 400V	3196	4822 051 20682	6k8 5% 0.1W	3323	4822 051 20471	470Ω 5% 0.1W	3490	4822 051 20471	470Ω 5% 0.1W
2901	4822 121 40336	47nF 10% 250V	3197	4822 116 80678	10k 1%	3324	4822 117 11503	220Ω 1% 0.1W	3491	4822 050 24709	47Ω 1% 0.6W
			3201	4822 050 21003	10k 1% 0.6W	3325	4822 050 24708	407 1% 0.6W	3492	4822 111 50521	100k 5%
			3202	4822 050 21003	10k 1% 0.6W	3326	4822 051 20393	39k 5% 0.1W	3493	4822 051 20224	220k 5% 0.1W
			3203	4822 050 23302	3k3 1% 0.6W	3327	5322 100 11544	220k 30%lin 0.1W	3495	4822 117 11383	12k 1% 0.1W
						3328	4822 117 10833	10k 1% 0.1W			
3080	4822 051 20008	0Ω JUMP. (SMD)	3204	4822 051 20332	3k3 5% 0.1W	3329	4822 117 10833	10k 1% 0.1W	3496	4822 117 10833	10k 1% 0.1W
3081	4822 051 20008	0Ω JUMP. (SMD)	3205	4822 117 10833	10k 1% 0.1W	3330	4822 051 20393	39k 5% 0.1W	3497	4822 050 26803	68k 1% 0.6W
3082	4822 051 20008	0Ω JUMP. (SMD)	3206	4822 050 21001	100Ω 1% 0.6W	3332	4822 117 10834	47k 1% 0.1W	3498	4822 051 20102	1k 5% 0.1W
3083	4822 051 20008	0Ω JUMP. (SMD)	3207	4822 050 21001	100Ω 1% 0.6W	3333	4822 117 10834	47k 1% 0.1W	3499	4822 051 20008	0Ω JUMP. (SMD)
3084	4822 051 20008	0Ω JUMP. (SMD)	3212	4822 050 24702	4k7 1% 0.6W				3501▲	4822 052 11228	202 5% 0.5W
3085	4822 051 20008	0Ω JUMP. (SMD)	3213	4822 050 21001	100Ω 1% 0.6W	3334	4822 051 20101	100Ω 5% 0.1W	3502	4822 050 22202	2k2 1% 0.6W
3086	4822 051 20008	0Ω JUMP. (SMD)	3214	4822 051 20102	1k 5% 0.1W	3335	4822 051 20101	100Ω 5% 0.1W	3503	4822 050 24701	470Ω 1% 0.6W
3087	4822 051 20008	0Ω JUMP. (SMD)	3215	4822 117 11449	2k2 1% 0.1W	3336	4822 051 20101	100Ω 5% 0.1W	3504	4822 050 24701	470Ω 1% 0.6W
3088	4822 051 20008	0Ω JUMP. (SMD)	3216	4822 051 20472	4k7 5% 0.1W	3401	4822 050 24701	470Ω 1% 0.6W	3505	4822 050 22202	2k2 1% 0.6W
3089	4822 051 20008	0Ω JUMP. (SMD)	3220	4822 117 10834	47k 1% 0.1W	3402	4822 051 20472	4k7 5% 0.1W	3506	4822 050 21808	128 1% 0.6W
						3403	4822 050 24702	4k7 1% 0.6W			
3090	4822 051 20008	0Ω JUMP. (SMD)	3221	4822 050 22201	220Ω 1% 0.6W	3404	4822 051 20472	4k7 5% 0.1W	3507	4822 050 21808	128 1% 0.6W
3092	4822 051 20008	0Ω JUMP. (SMD)	3222	4822 050 22201	220Ω 1% 0.6W	3405	4822 117 11449	2k2 1% 0.1W	3508	4822 050 24701	470Ω 1% 0.6W
3093	4822 051 20008	0Ω JUMP. (SMD)	3223	4822 050 21003	10k 1% 0.6W	3406	4822 050 23301	330Ω 1% 0.6W	3509	4822 050 23309	33Ω 1% 0.6W
3101	4822 053 21514	510k 5% 0.5W	3224	4822 050 21003	10k 1% 0.6W	3407	4822 051 53904	390k 1% 0.125W	3510▲	4822 052 11228	202 5% 0.5W
3102	4822 116 30469	5Ω 15%	3225	4822 050 21003	10k 1% 0.6W				3511	4822 051 20223	22k 5% 0.1W
3106	4822 050 21205	1M 1% 0.6W	3226	4822 050 21003	10k 1% 0.6W	3408	4822 050 24701	470Ω 1% 0.6W	3512	4822 051 20332	3k3 5% 0.1W
3107	4822 050 23604	360k 1% 0.6W	3227	4822 050 21003	10k 1% 0.6W	3409	4822 050 21203	12k 1% 0.6W	3513	4822 050 13302	3k3 1% 0.4W
3108	4822 116 52271	33k 5% 0.5W	3228	4822 050 24702	4k7 1% 0.6W	3410	4822 050 21242	1k24 1% 0.6W	3517	4822 051 20472	4k7 5% 0.1W
3109	4822 051 53904	390k 1% 0.125W	3229	4822 051 20102	1k 5% 0.1W	3411	4822 050 27501	750Ω 1% 0.6W	3518	4822 051 20223	22k 5% 0.1W
3110	4822 051 53904	390k 1% 0.125W	3230	4822 050 21001	100Ω 1% 0.6W	3412	4822 050 28202	8k2 1% 0.6W	3519	4822 050 22203	22k 1% 0.6W
						3414	4822 050 12203	22k 1% 0.4W			
3111	4822 050 13304	330k 1% 0.4W	3231	4822 050 21001	100Ω 1% 0.6W	3415	4822 117 11449	2k2 1% 0.1W	3520▲	4822 052 10478	407 5% 0.33W
3112	4822 051 20105	1M 5% 0.1W	3232	4822 117 11449	2k2 1% 0.1W	3416	4822 117 11383	12k 1% 0.1W	3521	4822 117 11449	2k2 1% 0.1W
3113	4822 050 24708	407 1% 0.6W	3233	4822 050 21002	1k 1% 0.6W	3417	4822 111 50522	33k 5% 1/6W	3522	4822 050 24701	470Ω 1% 0.6W
3114	4822 050 23902	3k9 1% 0.6W	3234	4822 051 20332	3k3 5% 0.1W	3423	4822 117 11449	2k2 1% 0.1W	3523	4822 117 10833	10k 1% 0.1W
3115	4822 116 52207	1k2 5% 0.5W	3235	4822 051 20101	100Ω 5% 0.1W				3524	4822 050 24701	470Ω 1% 0.6W
3116	4822 117 12179	0Ω 1% 5W	3236	4822 051 20332	3k3 5% 0.1W	3424▲	4822 052 10478	407 5% 0.33W	3526	4822 050 21803	18k 1% 0.6W
3117	4822 050 24703	47k 1% 0.6W	3237	4822 050 21001	100Ω 1% 0.6W	3425	4822 050 21203	12k 1% 0.6W	3527▲	4822 052 11101	100Ω 5% 0.5W
3118	4822 050 28202	8k2 1% 0.6W	3238	4822 051 20472	4k7 5% 0.1W	3426	4822 050 12703	27k 1% 0.4W	3528	4822 117 12669	1k 5% 7W
3119	4822 050 12702	2k7 1% 0.4W	3239	4822 052 10478	407 5% 0.33W	3427	4822 050 23902	3k9 1% 0.6W	3531	4822 053 12108	1Ω 5% 3W
3120	4822 050 22003	20k 1% 0.6W	3240	4822 050 21001	100Ω 1% 0.6W	3428	4822 117 12602	750k 5% 0.1W	3532	4822 050 26809	68Ω 1% 0.6W
						3429	4822 117 10833	10k 1% 0.1W			
3121▲	4822 052 11279	27Ω 5% 0.5W	3241	4822 050 21001	100Ω 1% 0.6W	3430	4822 117 11449	2k2 1% 0.1W	3533	4822 050 21501	150Ω 1% 0.6W
3122	4822 050 22203	22k 1% 0.6W	3242	4822 050 21001	100Ω 1% 0.6W	3431	4822 051 20104	100k 5% 0.1W	3540▲	4822 052 10828	802 5% 0.33W
3124	4822 117 12669	1k 5% 7W	3243	4822 050 21001	100Ω 1% 0.6W	3432	4822 051 20563	56k 5% 0.1W	3541	4822 050 24709	47Ω 1% 0.6W
3125	4822 052 10133	13k 5% 0.33W	3244	4822 051 20822	8k2 5% 0.1W	3433	4822 051 20563	56k 5% 0.1W	3542	4822 050 21003	10k 1% 0.6W
3126	4822 050 12203	22k 1% 0.4W	3245	4822 050 22203	22k 1% 0.6W				3543	4822 050 21202	1k2 1% 0.6W
3127	4822 050 24704	470k 1% 0.6W	3246	4822 051 20683	68k 5% 0.1W	3434	4822 116 82046	2k2 5% 1/6W	3544▲	4822 052 11108	1Ω 5% 0.5W
3128	4822 050 24704	470k 1% 0.6W	3247	4822 050 21001	100Ω 1% 0.6W	3435	4822 051 20561	560Ω 5% 0.1W	3545	4822 117 10442	10Ω 5%
3129	4822 050 29104	910k 1% 0.6W	3248	4822 051 20472	4k7 5% 0.1W	3436	4822 051 20563	56k 5% 0.1W	3546	4822 117 12941	33Ω 5% 7W
3130	4822 050 29104	910k 1% 0.6W	3249	4822 051 20472	4k7 5% 0.1W	3437	4822 117 11449	2k2 1% 0.1W	3548▲	4822 052 10108	1Ω 5% 0.33W
3136	4822 050 21004	100k 1% 0.6W	3250	4822 050 21003	10k 1% 0.6W	3438	4822 050 13903	39k 1% 0.4W	3549▲	4822 052 10108	1Ω 5% 0.33W
						3439	4822 050 23903	39k 1% 0.6W			
3137	4822 050 24708	407 1% 0.6W	3251	4822 050 24702	4k7 1% 0.6W	3440	4822 050 25603	56k 1% 0.6W	3550	4822 050 22201	220Ω 1% 0.6W
			3252	4822 050 21001	100Ω 1% 0.6W	3441	4822 117 10833	10k 1% 0.1W	3551	4822 100 11141	10k 30%lin 0.1W
			3253	4822 050 24702	4k7 1% 0.6W	3442	4822 050 13903	39k 1% 0.4W	3552	4822 050 26801	680Ω 1% 0.6W
			3254	4822 050 21001	100Ω 1% 0.6W	3443	4822 050 21204	120k 1% 0.6W	3554	4822 117 12942	150Ω 5% 7W
			3255	4822 050 11503	15k 1% 0.4W				3555	4822 051 20562	56k 5% 0.1W
3139	4822 050 11002	1k 1% 0.4W	3256	4822 050 24702	4k7 1% 0.6W	3444	4822 117 10965	18k 1% 0.1W	3556	4822 117 10442	10Ω 5%
3140	4822 050 23301	330Ω 1% 0.6W	3257	4822 051 20271	270Ω 5% 0.1W	3445	4822 117 10833	10k 1% 0.1W	3557	4822 117 10753	12Ω 5% 0.5W
3141	4822 050 21501	150Ω 1% 0.6W	3258	4822 051 20121	120Ω 5% 0.1W	3446	4822 117 10833	10k 1% 0.1W	3558▲	4822 052 11279	27Ω 5% 0.5W
3142	4822 050 11002	1k 1% 0.4W	3259	4822 051 20332	3k3 5% 0.1W	3447	4822 050 22202	2k2 1% 0.6W	3559	4822 050 24701	470Ω 1% 0.6W
3143	4822 050 23901	390Ω 1% 0.6W	3260	4822 050 22203	22k 1% 0.6W	3448	4822 051 20302	3k 5% 0.1W	3560▲	4822 052 11279	27Ω 5% 0.5W
3144	4822 116 52289	5k6 5% 0.5W				3449	4822 117 10833	10k 1% 0.1W			
3145	4822 050 15601	560Ω 1% 0.4W	3261	4822 050 21001	100Ω 1% 0.6W	3450	4822 050 21002	1k 1% 0.6W	3562	4822 050 21203	12k 1% 0.6W
3146	4822 050 21003	10k 1% 0.6W	3262	4822 050 21001	100Ω 1% 0.6W	3451	4822 051 20393	39k 5% 0.1W	3563	4822 117 11383	12k 1% 0.1W
3147	4822 050 24702	4k7 1% 0.6W	3263	4822 050 21001	100Ω 1% 0.6W						

## 31

PCS 90 021

## Spare parts list

[illegible]



6001 4822 130 31631 BYV10-20  
6002 5322 130 34337 BAV99  
6003 5322 130 34337 BAV99  
6004 5322 130 34337 BAV99  
6005 5322 130 34337 BAV99



7001 4822 209 16095 BA7657F

### 1162 Encoder panel

#### Various

1162 3138 128 59310 ENCODER PCB  
ASSY  
1247 4822 273 10344 ROT. ENCODER  
20P  
1248 4822 276 13249 SWI TACT B  
1249 4822 276 13249 SWI TACT B



6291 4822 130 83789 L-59GYC

### 1163 Power switch panel

#### Various

1163 3138 128 59320 DC POWER  
SWITCH PCB  
ASSY  
1199 4822 276 13886 SWITCH 2P  
PUSH BUTTON

### 1167 Speaker ass'y

#### Various

1167 3138 128 63030 SPEAKER ASSY  
3138 104 41490 SPEAKER HORN  
4822 701 14688 RUBBER  
SUPPORT-SPEA  
KER  
3138 101 31440 SPEAKER  
SPRING



5001 4822 240 10265 8 OHM/2.5W

### 1168 Speaker ass'y

#### Various

1168 3138 128 63030 SPEAKER ASSY  
3138 104 41490 SPEAKER HORN  
4822 701 14688 RUBBER  
SUPPORT-SPEA  
KER  
3138 101 31440 SPEAKER  
SPRING



5001 4822 240 10265 8 OHM/2.5W

### 1169 Microphone ass'y

#### Various

1169 3138 128 63200 MIC PHONE  
ASSY  
4822 242 30337 WM-55A103  
3138 128 78440 3P CONNECTOR

## Quick Reference for 17" and 19" Monitors

### Major Difference Between 19A580BQ/74C And 17A580BQ/74C

ITEM \ MODEL 12 NC	19A580BQ/74C	17A580BQ/74C
1	3138 107 94230 (Front Cabinet Assy)	3138 107 94670 (Front Cabinet Assy)
	3138 104 39260(Front Cabinet)	3138 104 40530 (Front Cabinet )
	3138 104 39310(LENS)	3138 104 40590(LENS)
	3138 104 39320(Function Knob)	3138 104 40580(Function Knob)
	x	3138 104 40600(Speaker-Grille)
	3138 104 39350(Speaker-Panel - R)	x
	3138 104 39340(Speaker Panel -L)	x
2	3138 104 39300(Rotary Knob)	3138 104 40720(Rotary Knob)
8	3138 104 39380(Power Knob)	3138 104 40710(Power Knob)
10	3138 107 94440(Cable Cover Assy)	3138 107 94730(Cable Cover Assy)
	3138 104 39330(Cable Cover)	3138 104 40610(Cable Cover)
	3138 106 49960(P.E. BAG)	3138 106 32610(P.E. BAG)
25	3138 107 94240(Pedestal Assy)	3138 107 94680(Bottom Plate Assy)
	3138 104 39280(Bottom)	3138 104 40550(Bottom)
	3138 104 39290(Base - Pedestal)	3138 104 40560(Base - Pedestal)
26	3138 104 39270(Back Cover)	3138 107 94960(Back Cover Assy)
	x	3138 104 40541(Back Cover)
	x	3138 104 41711(USB Cover)
27	3138 104 40950(USB Cover)	x
125	3138 105 35110(D.F.U.)	3138 105 35190(D.F.U.)
450	3138 106 51130(Carton)	3138 106 51790(Carton)
451	3138 106 51100(Cushion-Top-L)	3138 106 51340(Cushion-Top-L)
452	3138 106 51110(Cushion-Top-R)	3138 106 51350(Cushion-Top-R)
453	3138 106 51120( Cushion-Bottom)	3138 106 51360(Cushion-Bottom)
454	3138 106 38440( P.E. BAG for SET)	3138 106 39690(P.E. BAG for SET)
1155	4822 131 11275 M46LLQ 683X01( S)	4822 131 11277 M41KSX 683X24 ( T)
1156	3138 128 62000(Main PCB Assy)	3138 128 62450(Main PCB Assy)
1158	3138 128 59270(Earphone PCB Assy)	3138 128 63380(Earphone PCB Assy)
1166	3138 128 77960(Degaussing Coil Assy)	3138 128 77930(Degaussing PCB Assy)
8160	x	3138 128 72740(Rotation Coil)

### Difference List Between 3138 128 59270 And 3138 128 63380

ITEM \ 12 NC	3138 128 59270(Earphone PCB Assy)	3138 128 63380(Earphone PCB Assy)
2081	5322 122 32654(22n/50v)	x
2082	5322 122 32654(22n/50v)	x



## Difference List

## Difference List Between 3138 128 62000 And 3138 128 62450

MODEL ITEM	17A580BQ/74C	17A580BQ/00C
125	3138 105 35190 D.F.U.	3138 105 35180 D.F.U.
126	3138 105 35210 QUICK SET UP GUIDE	3138 105 35200 QUICK SET UP GUIDE
127	x	3138 105 35330 QUICK SET UP GUIDE
128	3138 106 32610 P.E. BAG	3138 106 33440 P.E. BAG
450	3138 106 51790 CARTON	3138 106 51400 CARTON

## Difference List

MODEL ITEM	19A580BQ/74C	19A580BQ/00C
125	3138 105 35110 D.F.U.	3138 105 35260 D.F.U.
126	3138 105 35210 QUICK SET UP GUIDE	3138 105 35200 QUICK SET UP GUIDE
127	x	3138 105 35330 QUICK SET UP GUIDE
450	3138 106 51130 CARTON	3138 106 51800 CARTON
1151	3138 128 75240 MAINS CORD	3138 128 75250 MAINS CORD

MODEL ITEM	19A580BQ/74C	17A580BQ/74C
1263	3138 128 63080(Eeprom Assy )	3138 128 63320(Eeprom Assy)
2603	4822 124 22669(1u/50v)	4822 124 23539(10u/50v)
2674	4822 121 70411(220n/250v)	4822 121 10708(180n/250v)
2681	4822 121 70241(120n/250v)	4822 121 70598(82n/400v)
3175	4822 050 24703(47 k)	4822 050 23904(39k)
3214	4822 051 20102(1 k)	4822 117 10833(10k)
3239	4822 052 10478(4R7)	4822 152 20596(4u7)
3245	4822 050 22203(22 k)	4822 050 21003(10k)
3481	4822 050 26203(62 k)	4822 050 25603(56k)
3501	4822 052 11228(2R2)	4822 052 11108(1 R)
3510	4822 052 11228(2R2)	4822 052 11108(1 R)
3556	4822 117 10442(10 R)	4822 117 12834(22 R)
3562	4822 050 21203(12 k)	4822 050 28202(8K2)
3563	4822 117 11383(12 k)	4822 051 20273(27 K)
3564	4822 051 20102(1 k)	4822 051 20562(5K6)
3566	4822 117 11383(12 k)	4822 117 10834(47 K)
3665	4822 117 10833(10 k)	4822 117 11383(12 K)
5101	3138 118 74160 (Line Filter 14 mH Min)	x
5101	x	3138 178 70890 (Line Filter 15 mH Min)
5102	3138 118 74160 (Line Filter 14 mH Min)	x

## CM5800 BRIEF

### A. GENERAL

The CM5800 is a Digitally Controlled Autoscan Color Display Monitor with 19" Low Emission CRT which is specially designed for low cost and high performance. This monitor can operate at horizontal scan frequencies from 30 to 95 kHz and vertical scan frequencies from 47 to 160 Hz.

This monitor is equipped with an embedded microcontroller which can preset the required modes. The CM5800 provides many functions, such as digitally adjustable picture, DDC1/2B, power management, low emission, high immunity, etc.

This monitor complies with MPRII low emission standard and also fulfills TCO'91 automatic power saving requirements. To reduce power consumption to less than 15 watts in standby or suspend mode and less than 5 watts in off mode, the monitor also complies with the energy star computer program initiated by the EPA.

### B. DESCRIPTION OF CM5800

This description mainly introduces the functions, including power supply / power saving management, horizontal / vertical deflection, video amplifier, microcontroller, etc.

#### 1. POWER SUPPLY / POWER SAVING MANAGEMENT

##### POWER SUPPLY:

This monitor is designed with an off-line flyback switch mode power supply which can operate with input from 90 VAC to 270 VAC. The power supply uses an IC (L4990) for current mode pwm controller and drives the mosfet switch directly. The control scheme transforms a switching converter from a voltage source into a multi-output voltage. The control concept exhibits many desirable properties such as inherent over-load protection, stable and fast system response.

The maximum power consumption is up to 130 watts. A power limiting circuit is added for safety reasons.

Secondary feedback via an optocoupler is used to obtain a stable output voltage. The secondary feedback supplies all necessary voltages for deflection and video. Voltage stabilizer IC is used to supply the small signals and microcontroller/EPROM.

##### POWER SAVING MANAGEMENT:

This monitor can reduce power consumption while no sync pulses are detected by microcontroller and automatically recover to normal power when sync signals are detected by microcontroller.

During power saving mode, the second power supply still delivers 5V to  $\mu$ c (CPU).

The consumed power is less than 15 watts during standby / suspend modes, and less than 5 watts during off mode.

#### 2. HORIZONTAL / VERTICAL DEFLECTION

##### HORIZONTAL DEFLECTION:

##### SYNC PROCESSING PART:

The heart of horizontal/vertical deflection controller is TDA4858 which can offer complete and efficient small signal sync processing for autosync monitors. This device is fully dc controllable and can be used in applications with a microcontroller as well as stand-alone with potentiometer control.

This controller provides sync processing, which can accept separate , composite (H+V) and sync-on-video input signals. A very short setting time after mode change for protection of external power components has been taken.

The TDA4858 provides extensive functions like a flexible smps block and a geometry control with facilities ,leading to excellent picture quality. This device also can directly drive the vertical deflection output stage ,the line driver stage , the E/W output stage and the EHT stage. All controls are dc and tracked with the incoming frequencies.

#### DEFLECTION PART:

The horizontal deflection is built around the buck converter which makes it possible to combine H-deflection and EHT generator and allows size and e/w correction without influencing EHT.

The flyback pulse from the buck converter is used by the line output.

Transformer (LOT) generates the required 26.0kV anode voltage.

The adjustable focus (G3) and screen (G2) voltages are internally derived from the anode voltage. Other secondary windings are used to generate the voltages for G1 and horizontal raster DC shift. For 19 inch monitor also provides dynamic focus on G4 to get a good focus performance.(G4 also adjustable).

To guarantee constant EHT over the whole frequency range , the B+ is made tracked with H-frequency by means of a step down converter.

The horizontal size and east/west correction are obtained by varying the voltage of buck converter of the lower deflection a circuit.

Five-capacitors switch and dc controlled linearity coil are designed for optimal screen linearity.

For safety reasons ,x-ray protection circuit is included ,and the control information sensing by TDA4858 will shut down the h-deflection (and there by EHT generator) if the anode voltage exceeds a certain value.

This circuit is also used for beam current overload protection . Shut down the deflection in case the total beam current exceeds a certain limit to protect both CRT and LOT.

#### VERTICAL DEFLECTION:

The majority of vertical deflection functions is integrated by two ICs ; TDA4858 and TDA8172.

The TDA4858 takes care of sync polarity correction ,automatic catching and holding of the vertical oscillator ,generation of sawtooth drive current for vertical output and vertical s-correction ,and generation of a correct V-blanking pulse for video blanking during vertical retrace lines.

The TDA8172 which is a dc-coupled vertical deflection booster with differential input signals is suitable for color monitor. The output stage has thermal and soar protection ,and high linear sawtooth signal amplification to obtain the required vertical deflection current.

To obtain a fast vertical retrace for non-VGA mode an external flyback supply is used.

## CM5800 BRIEF

### 3. VIDEO AMPLIFIER

The heart of the video circuit is TDA4885. This controller can drive the hybrid post-amp, CR6927 by buffer stage. The video DC level and gain at the cathode will be controlled by the software.

The red, green and blue video signals are amplified and inverted by the preamplifier to output stage and AC coupled to the CRT cathodes.

Three cut-off adjustments are provided to set the video black level at cathode for all three guns. Also three individual gain adjustments are provided to adjust the white point at maximum swing. Both cut-off and gain controls are digital type controlled by microprocessor. For limiting the beam current and preventing local doming, the beam current limit will automatically reduce the video swing in case the maximum beam current is exceeded (ABL adjustment: R3647).

Brightness control, which is controlled by TDA4885, reduces power consumption in video amplifier. To suppress the vertical retrace lines during vertical retrace, a vertical blanking pulse is added to grid 1.

A spot-killer circuit is also added to prevent CRT spot burn-in when the set is switched off.

DDC 1/2B:

Via SDA, data about the monitor, including the serial number, production codes, CRT type and applicable timings are stored in the EEPROM (24IC21). To avoid picture interference, the reading and writing processes are executed during vertical blanking which is informed by the vertical sync.

### 4. MICROCONTROLLER

#### GENERAL DESCRIPTION:

The Philips P87C380 microprocessor is used to control the monitor. The preset data are stored in EEPROM ST24W08.

#### HARDWARE DEFINITION:

##### A. KEYBOARD

There are 3 key pads and one rotary encoder at the front of monitor for the OSD control.

- OSD function key:

Push it to confirm entrance or exit from the OSD window

- Encoder:

To select or adjust the parameters which are chosen from OSD.

- Brightness key:

Push it, the OSD shows the window, then adjust with the encoder.

- Contrast key:

Push it, the OSD shows the window, then adjust with the encoder.

B. OSD WILL DISAPPEAR AND SAVE AUTOMATICALLY AFTER NON-OPERATION

C. SOFTWARE WILL CONTROL THE DPMS ACCORDING TO THE SYNC STATUS.

## D. VIDEO PRESET MODES

Preset video resolution and sync. Polarities

Resolution modes	H frequency	V frequency	H	V
720 x 400	31.469K	70.087Hz (VGA)	-	+
640 x 480	31.469K	59.940Hz (VESA/60)	-	-
640 x 480	37.500K	75.000Hz (VESA/75)	-	-
640 x 480	43.269K	85.008Hz (VESA/85)	-	-
800 x 600	37.879K	60.317Hz (VESA/60)	+	+
800 x 600	46.875K	75.000Hz (VESA/75)	+	+
800 x 600	53.674K	85.061Hz (VESA/85)	+	+
1024 x 768	48.363K	60.004Hz (VESA/60)	-	-
1024 x 768	60.023K	75.029Hz (VESA/75)	+	+
1024 x 768	68.677K	84.997Hz (VESA/85)	+	+
1280 x 1024	63.981K	60.020Hz (VESA/60)	+	+
1280 x 1024	80.000K	75.000Hz (VESA/75)	+	+
1280 x 1024	91.146K	85.024Hz (VESA/85)	+	+
1600 x 1200	75.000K	60.000Hz (VESA/60)	+	+
1600 x 1200	93.750K	75.000Hz (VESA/75)	+	+

## TELEVISION/MONITOR SAFETY GUIDELINES FOR THE PROFESSIONAL SERVICE TECHNICIAN

## Safety Checks

After the original service problem has been corrected, a complete safety check should be made. Be sure to check over the entire set, not just the areas where you have worked. Some previous servicer may have left an unsafe condition, which could be unknowingly passed on to your customer. Be sure to check all of the following:

## Fire and Shock Hazard

1. Be sure all components are positioned in such a way as to avoid the possibility of adjacent component shorts. This is especially important on those chassis which are transported to and from the service shop.
2. Never release a repaired unit unless all protective devices such as insulators, barriers, covers, strain reliefs, and other hardware have been installed in accordance with the original design.
3. Soldering and wiring must be inspected to locate possible cold solder joints, solder splashes, sharp solder points, frayed leads, pinched leads, or damaged insulation (including the ac cord). Be certain to remove loose solder balls and all other loose foreign particles.
4. Check across-the-line components and other components for physical evidence of damage or deterioration and replace if necessary. Follow original layout, lead length, and dress.
5. No lead or component should touch a receiving tube or a resistor rated at 1 watt or more. Lead tension around protruding metal surfaces or edges must be avoided.
6. Critical components having special safety characteristics are identified with an s by the Ref. No. in the parts list and enclosed within a broken line\* (where several critical components are grouped in one area) along with the safety symbol s on the schematic diagrams and/or exploded views.
7. When servicing any unit, always use a separate isolation transformer for the chassis. Failure to use a separate isolation transformer may expose you to possible shock hazard, and may cause damage to servicing instruments.
8. Many electronic products use a polarized ac line cord (one wide pin on the plug). Defeating this safety feature may create a potential hazard to the servicer and the user. Extension cords which do not incorporate the polarizing feature should never be used.
9. After reassembly of the unit, always perform an ac leakage test or resistance test from the line cord to all exposed metal parts of the cabinet. Also, check all metal control shafts (with knobs removed), antenna terminals, handles, screws, etc. to be sure the unit may be safely operated without danger of electrical shock.

\* Broken line

## Implosion

1. All picture tubes used in current model receivers are equipped with an integral implosion system. Care should always be used, and safety glasses worn, whenever handling any picture tube. Avoid scratching or otherwise damaging the picture tube during installation.
2. Use only replacement tubes specified by the manufacturer.


## X-radiation

1. Be sure procedures and instructions to all your service personnel cover the subject of X-radiation. Potential sources of X-rays in TV receivers are the picture tube and the high voltage circuits. The basic precaution which must be exercised is to keep the high voltage at the factory recommended level.
2. To avoid possible exposure to X-radiation and electrical shock, only the manufacturer's specified anode connectors must be used.
3. It is essential that the service technician has an accurate HV meter available at all times. The calibration of this meter should be checked periodically against a reference standard.
4. When the HV circuitry is operating properly there is no possibility of an X-radiation problem. High voltage should always be kept at the manufacturer's rated value - no higher - for optimum performance. Every time a color set is serviced, the brightness should be run up and down while monitoring the HV with a meter to be certain that the HV is regulated correctly and does not exceed the specified value. We suggest that you and your technicians review test procedures so that HV and HV regulation are always checked as a standard servicing procedure, and the reason for this prudent routine is clearly understood by everyone. It is important to use an accurate and reliable HV meter. It is recommended that the HV reading be recorded on each customer's invoice, which will demonstrate a proper concern for the customer's safety.
5. When troubleshooting and making test measurements in a receiver with a problem of excessive high voltage, reduce the line voltage by means of a Variac to bring the HV into acceptable limits while troubleshooting. Do not operate the chassis longer than necessary to locate the cause of the excessive HV.

6. New picture tubes are specifically designed to withstand higher operating voltages without creating undesirable X-radiation. It is strongly recommended that any shop test fixture which is to be used with the new higher voltage chassis be equipped with one of the new type tubes designed for this service. Addition of a permanently connected HV meter to the shop test fixture is advisable. The CRT types used in these new sets should never be replaced with any other types, as this may result in excessive X-radiation.
7. It is essential to use the specified picture tube to avoid a possible X-radiation problem.
8. Most TV receivers contain some type of emergency "Hold Down" circuit to prevent HV from rising to excessive levels in the presence of a failure mode. These various circuits should be understood by all technicians servicing them, especially since many hold down circuits are inoperative as long as the receiver performs normally.

### Leakage Current Cold Check

1. Unplug the ac line cord and connect a jumper between the two prongs of the plug.
2. Turn on the power switch.
3. Measure the resistance value between the jumpered ac plug and all exposed cabinet parts of the receiver, such as screw heads, antennas, and control shafts. When the exposed metallic part has a return path to the chassis, the reading should be between 1 megohm and 5.2 megohms. When the exposed metal does not have a return path to the chassis, the reading must be infinity. Remove the jumper from the ac line cord.

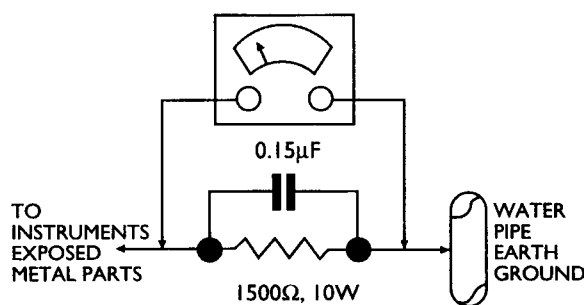

### Leakage Current Hot Check

1. Do not use an isolation transformer for this test. Plug the completely reassembled receiver directly into the ac outlet.
2. Connect a 1.5k, 10W resistor paralleled by a 0.15uF. capacitor between each exposed metallic cabinet part and a good earth ground such as a water pipe, as shown above.
3. Use an ac voltmeter with at least 5000 ohms/ volt sensitivity to measure the potential across the resistor.
4. The potential at any point should not exceed 0.75 volts. A leakage current tester may be used to make this test; leakage current must not exceed 0.5milliamps. If a measurement is outside of the specified limits, there is a possibility of shock hazard. The receiver should be repaired and rechecked before returning it to the customer.
5. Repeat the above procedure with the ac plug reversed. (Note:An ac adapter is necessary when a polarized plug is used. Do not defeat the polarizing feature of the plug.)

## Picture Tube Replacement

The primary source of X-radiation in this television receiver is the picture tube. The picture tube utilized in this chassis is specially constructed to limit X-radiation emissions. For continued X-radiation protection, the replacement tube must be the same type as the original, including suffix letter, or a Philips approved type.

## Parts Replacement

Many electrical and mechanical parts in Philips television sets have special safety related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. The use of a substitute part which does not have the same safety characteristics as the Philips recommended replacement part shown in this service manual may create shock, fire, or other hazards.

**WARNING:** Before removing the CRT anode cap, turn the unit **OFF** and short the HIGH VOLTAGE to the CRT DAG ground.  
**SERVICE NOTE:** The CRT DAG is not at chassis ground.

# Service Information

Service information 4822 727 21038 is herewith cancelled.


This [DDC Module (DDC cable)= 4822 320 12004(=4822 724 27550)] and [DDC V2(DDCV2N.EXE) software(3.5" disk)=4822 711 00024(= 4822 724 27560)] are used for "BU Monitor - Chungli product range" which incorporates a DDC1/DDC2B function that allows bi-directional communication between the monitor and PC system for optimal video configuration. [July 01 1997, Revision 2.0], which upgrades the software and service information(4822 727 21027 & 4822 727 21038) , is fully compatible with previous one.

## Additional information :

Additional information about DDC (Display Data Channel) may be obtained from Video Electronics Standards Association (VESA). Extended Display Identification (EDID) information may be also be obtained from VESA.

## Pin assignment


The 15-pin D-sub connector (male) of the signal cable (3 rows) for DDC feature :

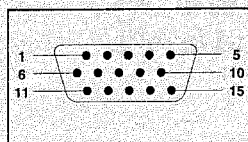

Pin No.	Assignment	Pin No.	Assignment
1	Red video input	9	No pin
2	Green video input	10	Logic ground
3	Blue video input	11	Identical output connected to pin 10
4	Identical output connected to pin 10	12	Serial data line (SDA)
5	Ground	13	H.sync
6	Red video ground	14	V. sync (VCLK for DDC)
7	Green video ground	15	Data clock (SCL)
8	Blue video ground		

## Connection

(Rear of the monitor)

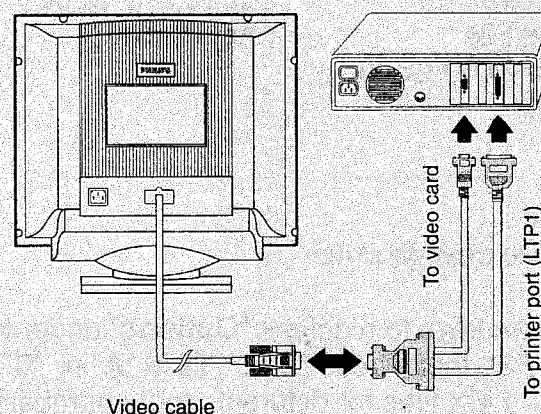

## DDC data re-programming

### 1. General

In case the DDC data memory IC, replaced due to a defect the data contents of this IC have to be re-programmed via a PC.

In case of replacement of the video board it is advised to re-soldered DDC IC from the old board onto the new board, in this case the IC dose not need to be re-programmed.

### 2. DDCV2N.EXE can be used for : EDID Structure Version/Revision

Version	: 1
Revision	: 0

(text file)

and

Version	: 1
Revision	: 1

(.hex file)



## INSTRUCTIONS

## DDC Reprogramming Instruction (for PHILIPS Branded models)

## System Requirements

DDC Module (DDC cable), P/N = 4822 320 12004

An Intel 386 (or above) PC or compatible

DOS 6.0 or above

DDCV2N.EXE software

## Procedure

Connect DDC Cable as shown in cover page.

Insert diskette in Drive a: Select Run "**DDCV2N.EXE**" under DOS or Win.Press "**Enter**" at the introduction screen

Menu Configuration:

File	R/W	Setup	Quit
Load EDID	Write EDID to EEPROM	Options	
Load txt file (V1.0)	Read From EEPROM	Barcode format	
Save EDID	Edit EDID Code		
Save txt File	Auto Scan		
Convert EDID Code			
Os shell			
Exit			

General :

## 1. How to change drive

Use arrow keys to highlight "**Options**" under the Setup menu, Press "**Enter**".Press "**F2**", then Press "**ESC**", fill in "**A**" or "**C**".

[(If your .HEX files for different Model numbers in drive "A", then fill in "A").,



(If your .HEX files for different Model numbers in drive "C", then fill in "C").

Normally, to read DDC data from EEPROM of Monitor is enough.]

Press "**Enter**", then Press "**ESC**"

## 2. How to select .HEX files for different Model numbers

example:

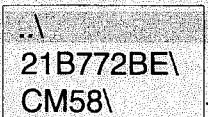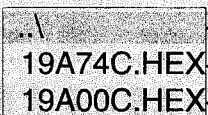Use arrow keys to highlight "**Load EDID**" under the File menu, Press "**Enter**"Bring up  Press "**Enter**"Bring up  ← select, Press "**Enter**"Bring up  ← at this highlight area, Press "**Enter**", then go back to last screen

19A74C.HEX ← select for 19A580BQ/74C

19A00C.HEX ← select for 19A580BQ/00C

### How to write DDC hex files to Monitor

Use arrow keys to highlight "**Options**" under the Setup menu, Press "**Enter**"

Tab down to ID Serial Number, Use down arrow key to place the asterisk (\*) beside "store in DEC with LSB first". Press "**control/enter**" to save.  
(Ensure the top asterisk (\*) is beside in store in HEX with LSB first.)

Use arrow keys to highlight "**Load EDID**" under the file menu, Press "**Enter**".

Use arrow keys to highlight "**BRANDED\**", Press "**Enter**".

Use arrow keys to highlight "**the model list under subdirectly**", Press "**Enter**".

Use arrow keys to highlight "**Write EDID to EEPROM**" under the R/W menu, Press "**Enter**".

Use arrow keys to highlight "**Read from EEPROM**" under the R/W menu, Press "**Enter**".

Use arrow keys to highlight "**Edit EDID Code**" under the R/W menu, Press "**Enter**".

Verify the ID Serial number on the screen matches the serial number of the unit.

Verify EDID Structure Version is "Version :1, Revision :1"

Press "**ESC**"

Use arrow keys to highlight "**Quit**", Press "**Enter**".

### Menu Configuration:

File	R/W	Setup	Quit
Load EDID	Write EDID to EEPROM	Options	
Load txt file (V1.0)	Read From EEPROM	Barcode format	
Save EDID	Edit EDID Code		
Save txt File	Auto Scan		
Convert EDID Code			
Os shell			
Exit			

Remark: ID product code and ID Serial Number setting are for "PHILIPS" & "STENCIL" DDC TEXT

## INSTRUCTIONS

## How to change the Year, Week & Serial number of Monitor (for BRANDED models)

Use arrow keys to highlight "**Barcode format**", under the Setup menu, Press "**Enter**".

Bring up :

Barcode example : 9741222266  
Barcode format : YYWWSSSSSS

Fill in 9741222266, press "Enter"

Fill in yywwssssss, press "Enter"

continue :

Barcode example : 9741222266  
Barcode format : YYWWSSSSSS

Manufacture Year : 1997  
Manufacture Week : 41  
Serial no. : 222266

```
EDID [16]    Week : 29
EDID [17]    Year  : 07 [Year-1990]
EDID [12..15] S/N. : 0003643a
```

data correct ? (Y/N) Y

Fill in "Y", don't press "Enter"

There is a description at the lower of the screen for Barcode format as below.

Barcode format : Y,W,S,X,- (year,week,s/no,ignore,fixed)

Y stands for "year".

W stands for "week"

S stands for "s/no (serial number)".

X stands for "ignore". Allow user to fill in any 'character' or 'numeric'.

stands for "fixed". User have to fill in Special 'character' or 'numeric' for "AutoScan" if user fill in '-' at "Barcode format :".

Use arrow keys to highlight "**Auto Scan**" under the R/W menu, Press "**Enter**".

Bring up:

Auto Scan

◆◆△△□□□□□□

- SerialNumber

- YearCode

$\Delta$  WeekCode

- \* don't care

← year, week, serial number can be changed

Fill in "Barcode data (for instance: 9741222266)" beside Auto Scan, press "**Enter**"

9745000240

9640001000

Press "ESC" "ESC", return to R/W menu.

## How to change the serial number of Monitor (for PCEC models)

Use arrow keys to highlight "**Barcode format**", under the Setup menu, Press "**Enter**".

Bring up : Barcode example : 5800C12345678  
Barcode format : XXXXXSSSSSSSS  
-----

Fill in 5800C12345678, press "Enter"  
Fill in xxxxxxxxsssss, press "Enter"

continued : Barcode example : 5800C12345678  
Barcode format : XXXXXSSSSSSSS  
-----

Manufacture Year : 1997  
Manufacture Week : 40  
Serial no. : 12345678  
Serial no. ASCII : 5800C12345678  
.....  
.....

(can be changed), press "Enter"  
(can be changed), press "Enter"

Fill in 5800C12345678, press "Enter"

data correct ? (Y/N) Y

Fill in "Y", don't press "Enter"

There is a description at the lower of the screen for Barcode format as below.

Barcode format : Y,W,S,X,- (year,week,s/no,ignore,fixed)

Y stands for "year".  
W stands for "week"  
S stands for "s/no (serial number)".  
X stands for "ignore". Allow user to fill in any 'character' or 'numeric'.  
- stands for "fixed". User have to fill in Special 'character' or 'numeric' for "AutoScan" if user fill in '-' at "Barcode format :".

Use arrow keys to highlight "**Auto Scan**" under the R/W menu, Press "**Enter**".

Bring up: Auto Scan

← year, week, serial number can be changed

- ☐ SerialNumber
- ☐ YearCode
- ☐ WeekCode
- ☐ don't care

Fill in "Barcode data (for instance: 5800C12345678)" beside Auto Scan, press "**Enter**"

5800J28256153  
58008H75602720

Press "**ESC**" "**ESC**", return to R/W menu.

**For the original DDC TEXT file:**

Use arrow keys to highlight **"Load txt file (V1.0)"** under the File menu, Press **"Enter"**

**1. Data text file editing options**

The data text file can be edited by the DOS-editor.

**2. Re-programming instructions**

- Turn on PC and monitor
- Connect the module to the PC and monitor, see connection figure on front page.
- Insert the floppy disk into drive A: and follow the following routine:
- Type "DDC" and then press "ENTER". On the screen it will show: "Adaptor check...", then the screen will display "main menu".
- Use the arrow keys to highlighting items 1, 2, 3, 4, 0 :

**Step 1** - Select item "1" ,which appear as a highlight,and press "ENTER" to convert a text data into EDID data.

- Enter the text file name with directory path eg. "a:\CM0200\BND14PHL.TXT" and press "ENTER".  
The available text file on the floppy will now be converted into a binary file that can be downloaded into the memory IC.
- Press "ENTER" to continue, the program will return to main menu.

**Step 2** - Select item "2" ,under the main menu , and press "ENTER" to write a complete EDID data file to EEPROM. Now, the data will be loaded into the memory IC.

- Press "ENTER" to continue, the program will return to main menu.

**Step 3** - Select item "3" ,under the main menu,and press "ENTER" to verify that EDID downloading is successful. This function also can be used to view current DDC data in monitor.

- Press "ENTER" and follow the indication on the screen to return main menu.

**Step 4** - Select item "4" ,under the main menu,and press "ENTER" to enter DOS prompt and DOS Editor of your system. By DOS Editor, the function allow you to modify or update DDC data eg. manufacturing week, serial number etc according to the rear cover type label of the set.

The production serial number of type label consist of:  
TY - origin of production centre  
00 - technical service change code  
95 - production year  
12 - production week  
123456 - 6 digits (max) serial number

Once the modification of DDC text file is completed under DOS Editor, Quit to DOS prompt and return to main menu by typing "EXIT" and press "ENTER".  
After text file is modified according above description, you can repeat the process of step 1 to step 3 to re-program DDC data again.

**Step 5** - Select item "0" ,under the main menu,and press "ENTER" to quit DDC program and return to DOS prompt.

**3. Remark 1 :**

During the re-programming, it is recommended to follow step 1, step 2, and step 3.

Due to different format requirements by customer, If read DDC data from monitor by step 3 , product ID and serial number will show 3 formats, <decimal>, <hexa-decimal>, and <ASCII>, the correct format can be obtained by running step 1 again (the correct format can be detected and identified automatically by step 1 from original text file).

## THE CONTROL SOFTWARE FOR MONITORS THROUGH USB

CustoMax for your monitor

version 3.0

----

The information in this document is subject to change without notice and does not represent a commitment on the part of the developer.

The software may be used or copied only in accordance with the terms of the agreement.

In no event will the developer of this product be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for any purpose without expressing written consent.

PHILIPS and the PHILIPS logo are registered trademarks of PHILIPS Electronics N.V.

MS-DOS and Windows are registered trademarks of Microsoft Corporation.

IBM PC/XT/AT/386/486 are registered trademarks of International Business Machines Corporation.

---

## TABLE OF CONTENTS

1. The content of the package
2. Installation
3. CustoMax, how it works
4. CustoMax quick overview
  - 4.1. Sound & Vision controls
  - 4.2. Screen geometry controls
  - 4.3. Colour quality controls
  - 4.4. Image quality controls
  - 4.5. Hardware & Software settings
  - 4.6. User guidance

---

## 1. THE CONTENT OF THE PACKAGE

In the package you should find

The USB module

The USB cable

The CD-ROM with the CustoMax software & USB device driver on it

The Directions for use

---

## 2. INSTALLATION

System requirements

Hardware : a PC which supports the USB function and has a USB outlet.

Software: Windows system which supports USB (Win 95 2.1 or Win 98 ).

Installation of USB module

1. Turn off the monitor and unplug the power cord.
2. Remove the cover of "USBAY" at the back of the monitor.
3. Insert USB module into the slot.
4. Fix the USB module to the monitor by screwing.
5. Plug-in the power cord and turn on the monitor.

To establish the USB connection

6. Insert CD-Rom
7. The two ends of USB cable attached are different. Plug-in the square end into the "upstream" outlet of the USB module.
8. Plug-in the other end into the USB outlet of the PC.
9. Windows recognises two new pieces of hardware
  - Philips USB hub
  - USB Human Interface Device

This last item is presented through a wizard.

Follow the "next" steps on screen (choose the recommended options) until installation has been finished

Usages Tips: Check device manager tab in system manager properties.


Human Interface devices

- Philips CustoMax (USB monitor control)

Universal serial bus controller


- Philips USB Hub

if

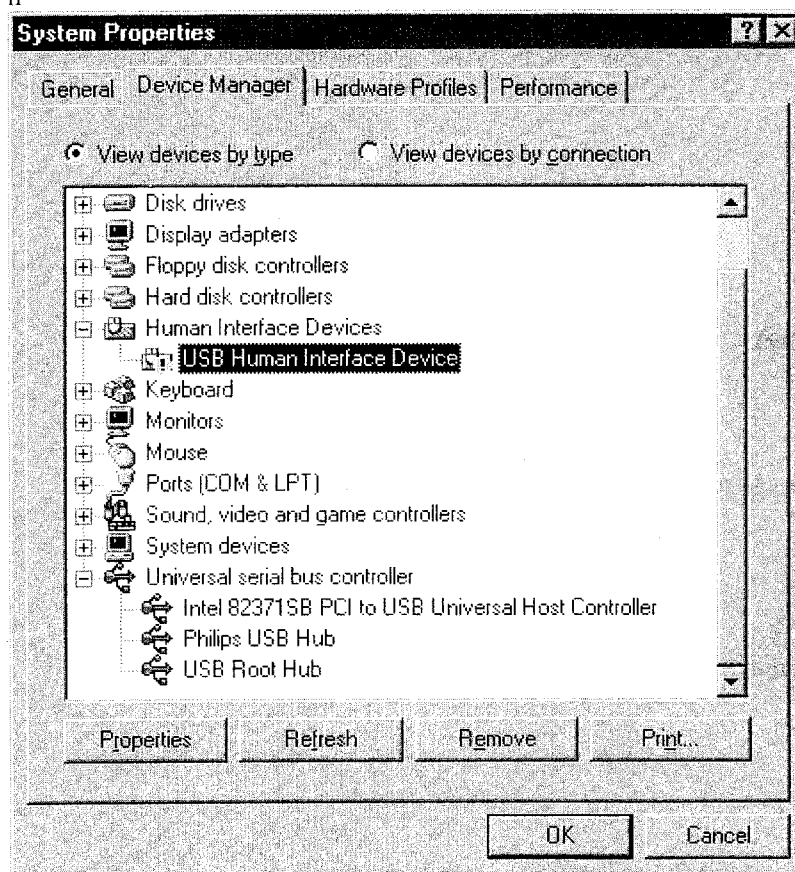


select properties




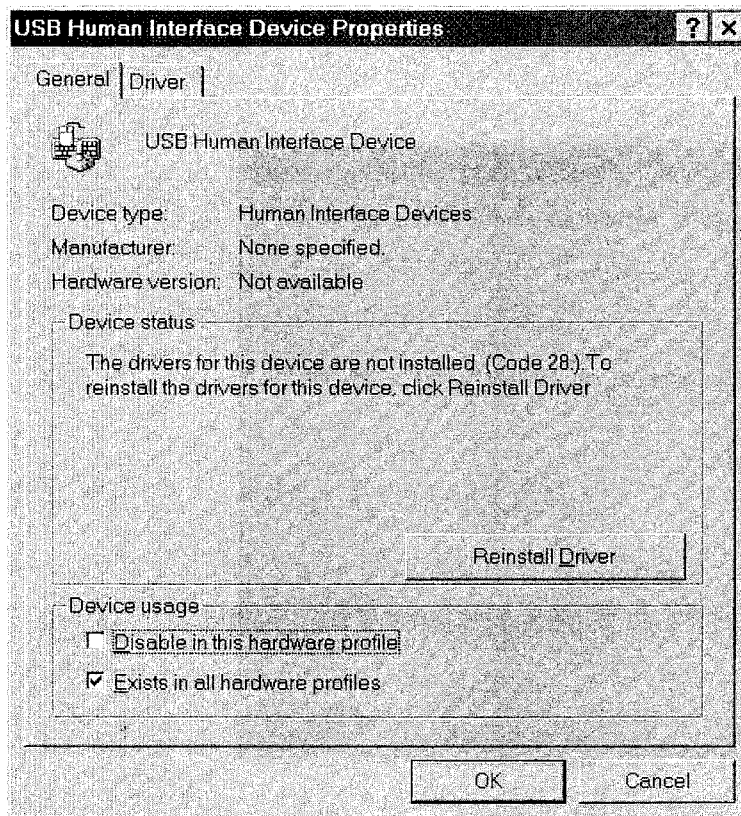


select driver

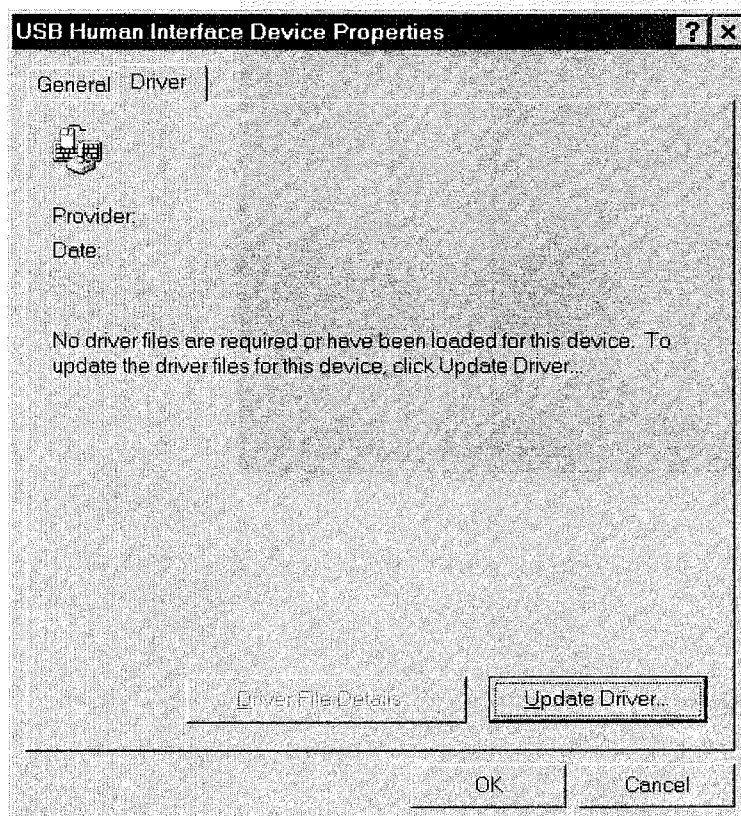


select Update Driver

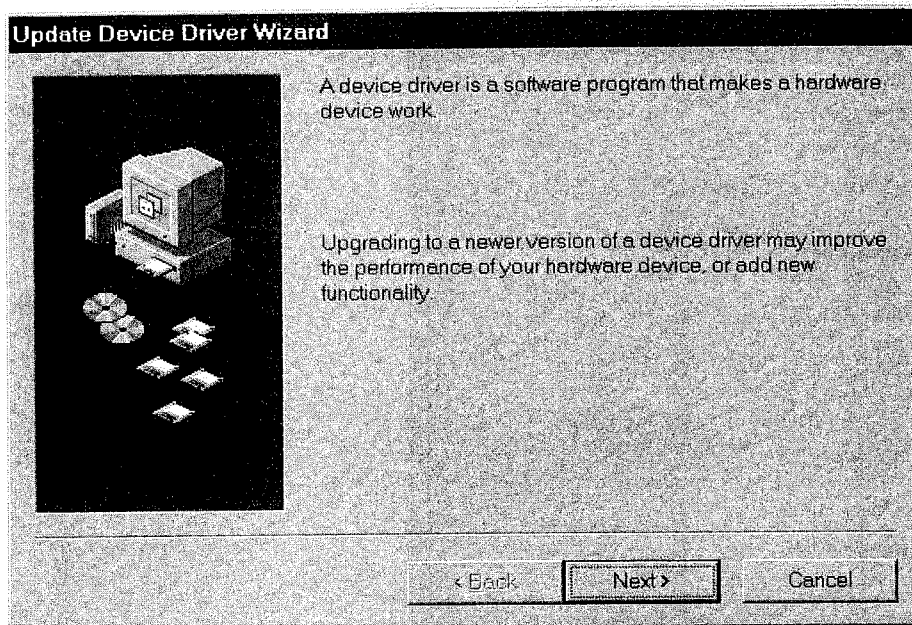


select next

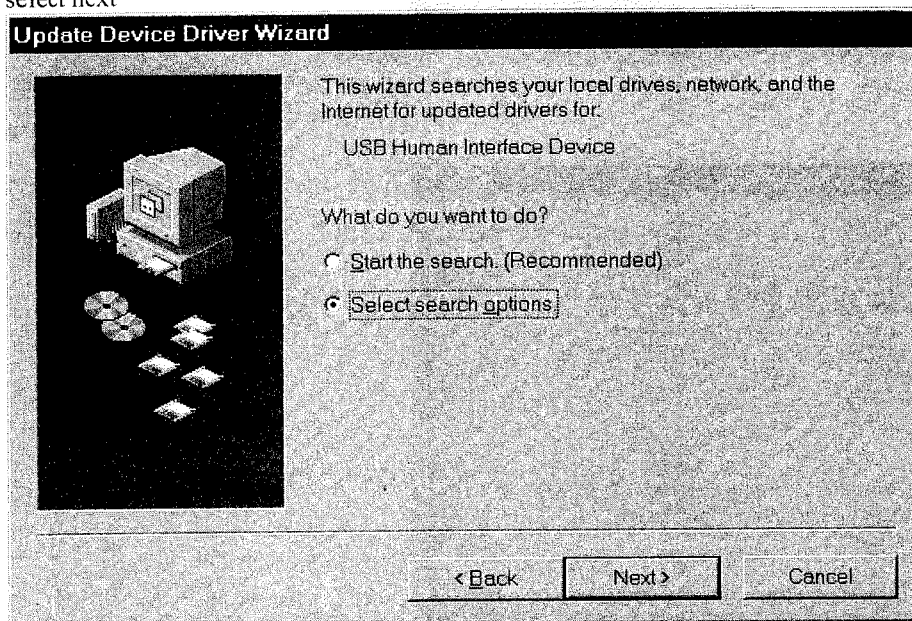

select next

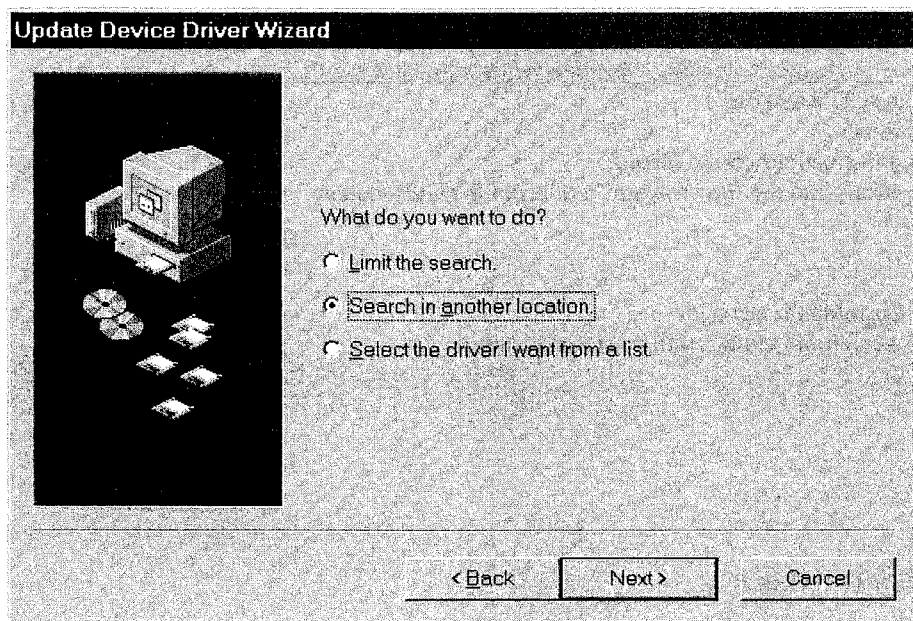

select next

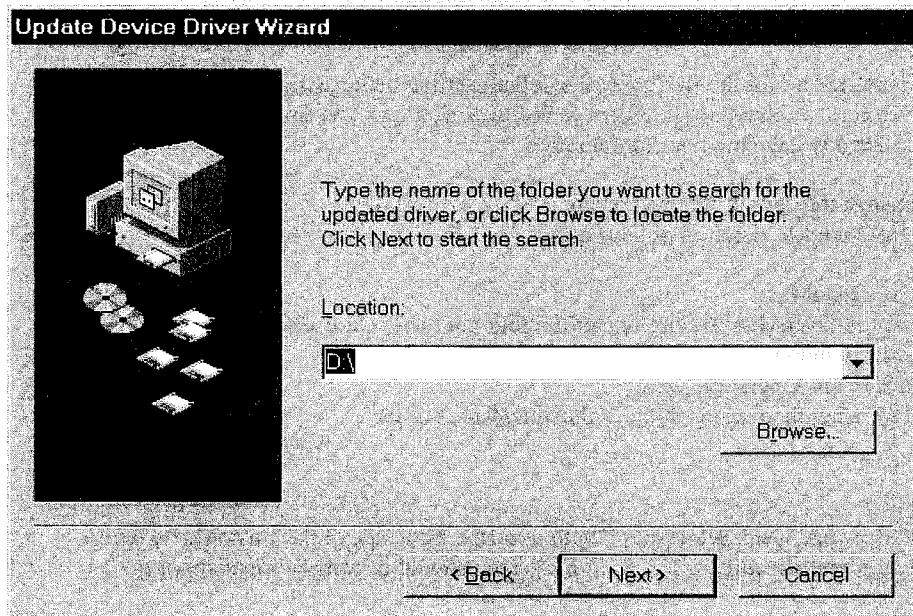

select next

then follow Wizard

#### Installation of CustoMax

10. Double click on CD-Rom icon

11. Start the CustoMax installation program: CustoMax 3.exe

#### CustoMax

Start CustoMax using one of these four ways

1. Icon on the right-side of the taskbar
2. Tab in display properties
3. Start menu
4. ctrl-alt-c

There is no need to turn off the PC or monitor when establish USB connection.

## Installation of CustoMax

1. Install the USB module and connect the USB cable between your monitor & PC.
  2. Put the CD-ROM in the CD-ROM drive.
  3. Click on the CD-ROM icon.
  4. Follow the installation instructions on the screen.
- Plug-in the desired peripherals into the "downstream" outlets of the USB module.

## Usage tips

The shortcut to start-up CustoMax is ctrl + alt + c.  
 If installed on a network server: the settings will be stored locally.

---

## 3. CUSTOMAX 3.0. HOW IT WORKS

CustoMax 3.0 for monitors is a software program for adjusting the audio and video, screen geometry, colour quality, image quality and hardware and software settings through USB. The start-up settings of CustoMax, Window Background and Language can be changed.

Note. When CustoMax is started up for the first time, the default setting being activated will be the 'Hardware & Software Settings'. Within the 'Hardware & Software Settings' you first will have to select the type of monitor you currently have in your configuration.

Default Enables you to change the default selected menu  
 Usages tip: we recommend sound & vision as default menu.

## Main procedures for using CustoMax:

1. To select a specific part of CustoMax, choose one of the four navigation buttons on the left side of the CustoMax window.
2. Select one of the buttons in the 'Operation' area.
3. Perform adjustments by using the buttons in the 'Adjustment' area of the CustoMax window.

## Usage tips

To switch off, or on, the 'How to..' Help, select the '?' button, on the right side of the CustoMax window.  
 To perform adjustments, the contrast and brightness of the screen should be fairly normal and user controllable.

*As soon as you finish the program, a DONE is automatically executed to store all settings. Also, before changing the main menu, a DONE is automatically executed.  
 This minimizes the amount of times having to press DONE.*

---

## 4. CUSTOMAX, QUICK OVERVIEW

## 4.1. SOUND &amp; VISION CONTROL

## SOUND &amp; VISION CONTROL

To adjust audio and video levels. The options to adjust are: Mute, Volume, Balance, Bass, Treble, Brightness, and Contrast.

## MUTE

To switch off/on the sound.

**VOLUME**

To change the sound level.

**BALANCE**

To change the sound balance.

**BASS**

To change the bass level.

**TREBLE**

With the 'Treble' function you can change the treble level.

**BRIGHTNESS**

To change the brightness level.

**CONTRAST**

To change the contrast level.

**CONTRAST PATTERN 1**

To help you adjust the contrast level.

**CONTRAST PATTERN 2**

To help you adjust the contrast level.

**ADJUSTMENT BUTTONS**

To make adjustments to the audio and video levels.

**DONE**

To save any changes and selections made before closing and returning to the display of the five main navigation and Help buttons.

**UNDO**

To undo any changes and selections made in this particular part of Customax.

**Usage Tips**

- ù The Mute, Volume, Balance, Bass, Treble, Brightness, and Contrast buttons appear after Sound & Vision Control has been selected.
- ù With the left mouse button a selected contrast pattern can be toggled to the foreground or background.
- ù The Adjustments Buttons only appear after an audio or video button has been selected.
- ù The Done and Undo buttons appears after one of the five main navigation buttons on the left side of the Customax window has been selected.
- ù The Undo function will only be executed after an additional confirmation has been made in the pop-up window.

**4.3. COLOUR QUALITY CONTROL****COLOUR QUALITY CONTROL**

To adjust the colour temperature.

**DEGAUSS**

To demagnetise the monitor's screen surface.

**FACTORY COLOUR PRESET**

To reset the current user-defined colour will back to default. User preset 1 is reset to 9300 K, user preset 2 is reset to 6500 K, and user preset 3 is reset to 5500 K.

**FACTORY PRESET 1**

To set the colour temperature to 9300 K

**FACTORY PRESET 2**

To set the colour temperature to 6500 K

**FACTORY PRESET 3**

To set the colour temperature to 5500 K

**USER DEFINABLE PRESETS 1**

To change the colour temperature to a user-defined preset.

**USER DEFINABLE PRESETS 2**

To change the colour temperature to a user-defined preset.

**USER DEFINABLE PRESETS 3**

To change the colour temperature to a user-defined preset.

**RED BACKGROUND COLOUR**

To help you adjust the colour balance setting.

**GREEN BACKGROUND COLOUR**

To help you adjust the colour balance setting.

**BLUE BACKGROUND COLOUR**

To help you adjust the colour balance setting.

**COMBINED BACKGROUND COLOUR**

To help you adjust the colour balance setting.

**WHITE BACKGROUND COLOUR**

To help you adjust the colour balance setting.

**COLOUR TRIANGLE**

To increase or decrease the proportion of each of the colours Red, Green or Blue.

**DONE**

To save any changes and selections made before closing and returning to the display of the five main navigation and Help buttons.

**UNDO**

To undo any changes and selections made in this particular part of CustoMax.

**Usage Tips**

ù The Degauss function is available under Screen Geometry Control, Colour Quality Control and Image Quality Control.

ù The number of available presets depends on the type of monitor you have selected in the Hardware & Software Settings part of CustoMax.

ù The specific colour temperatures in the three Factory Presets cannot be changed.

ù Adjustments to the colour temperature settings can only be made after first selecting one of the three user presets.

ù To undo the reset to factory default, and to change back to the last defined user preset: Press Undo. The Factory Colour Preset function will immediately be executed, but can be changed back to the last defined user preset by selecting Undo.

ù Move a Draggable Marker in the Colour Triangle, in the Adjustment area of the CustoMax window, to a new position on its axis. Alternatively, drag the central point of the triangle to a new position, or click directly on the new position in the triangle.

**HARDWARE & SOFTWARE SETTINGS****HARDWARE & SOFTWARE SETTINGS**

To influence the behaviour of your monitor.

## THE CONTROL SOFTWARE FOR MONITORS THROUGH USB

### HARDWARE & SOFTWARE SETTINGS

To influence the behaviour of your monitor.

### POWER SAVER

To reduce monitor power consumption

### START-UP' function

To activate or to select the default Navigation setting at start-up. The options are: 'Sound & Vision', 'Geometry', 'Colour Quality', 'Image Quality', or 'Hard- & Software'.

### CUSTOMAX WINDOW BACKGROUND

To select a different CustoMax window background. The options are 'Water', 'Fire', 'Air', 'Earth', 'Glas', 'Leave', 'Flowers', 'Monitor housing', 'PCB', 'Droodle' 'Solid Background 1', 'Solid Background 2'.

### LANGUAGE

To change to another language. The options are: 'UK English', 'US English', 'Deutsch', 'Français', 'Italiano' and 'Español'.

### MONITOR TYPE

To select the present type of monitor. The options are: '107', '109', and '201B'.

### HARDWARE & SOFTWARE SETTINGS DISPLAY

Provides information on the current 'Hardware & Software Settings'

### DONE

To save any changes and selections made before closing and returning to the display of the five main navigation and Help buttons.


### UNDO

To undo any changes and selections made in this particular part of CustoMax.

### Usage Tips

- ù The Power Saver function will be executed after a predetermined period of time, during which the monitor has not been used.
- ù The new Navigation default at Start-up will be executed after you have restarted CustoMax.
- ù The CustoMax Window Background will be changed immediately after a Selection has been made.
- ù The Language will be changed immediately after a Selection has been made.
- ù Options relating to the type of monitor selected will be changed immediately after a Selection has been made.
- ù The displayed information cannot be manipulated in the area of display.



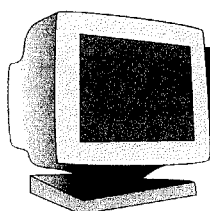

## TABLE OF CONTENTS

### GETTING STARTED

Introduction .....	1
Safety .....	1
Description of Controls .....	2-3
Setting Up Guide .....	Foldout

### HOW TO USE THE ON SCREEN DISPLAY

#### MAIN CONTROLS WINDOW

Brightness .....	4
Contrast .....	4
Degauss .....	5
Volume .....	5

#### SCREEN SIZE & POSITION WINDOW

Full Size .....	6
Horizontal Position .....	6
Horizontal Size .....	7
Vertical Position .....	7
Vertical Size .....	7

#### COLOR TEMPERATURE WINDOW

9300 K CAD/CAM .....	8
6500 K DTP .....	8
5500 K Photo Retouch .....	8
User Presets .....	9

#### SPECIAL CONTROLS WINDOW

Language .....	10
Advanced Controls / Corner Correction .....	10
Advanced Controls / Vertical Linearity .....	11
Advanced Controls / Moire .....	11

Advanced Controls / Rotary Default .....	12
Advanced Controls / Power Saving .....	12
OSD Controls .....	13
Video Input .....	13
AUDIO CONTROLS WINDOW .....	
Mute .....	14
Bass .....	14
Treble .....	14
Balance .....	14
GEOMETRY CONTROLS WINDOW .....	
Pincushion .....	15
Balanced Pincushion .....	15
Trapezoid .....	15
Parallelogram .....	15
Rotation .....	15
EXIT & RESET .....	16


### ADDITIONAL INFORMATION

BNC & USB Set Ups .....	17
Audio Hook Ups & Power Saving Feature .....	18
Pin Assignment .....	19
Specifications .....	19
Index .....	19
Glossary .....	19
Troubleshooting .....	20
Warranty .....	21

## OTHER LANGUAGE VERSIONS

FRENCH (FRANCAIS) .....	22
SPANISH (ESPAÑOL) .....	44

## INTRODUCTION AND SAFETY

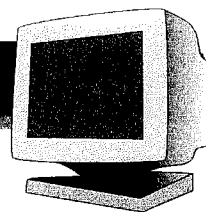

### Introduction

The Philips Brilliance 109 color monitor displays sharp and brilliant images of text and graphics with a maximum resolution of 1600x1200 pixels. It is optimal for Windows, CAD / CAM / CAE, desktop publishing, spread sheets, multi-media, and any other application that demands a large screen size and high resolutions.

The monitor automatically scans horizontal frequencies from 30KHz to 95KHz, and vertical frequencies from 50Hz to 160Hz. With microprocessor-based digital-controlled circuitry and On-Screen Display (OSD) controls, the monitor can automatically adjust itself to the video card's scanning frequency and displays an image with the precise parameters you desire.

### Features

- An anti-glare, anti-static, and anti-reflection high-contrast screen coating eliminates any bad effects caused by room light reflecting on and dust attracted to the screen's surface.
- With the Color Adjustment feature, you can easily choose different preset color temperatures or set your own customized color parameters.
- The Image Tilt Adjustment feature corrects a rotated image. This correction minimizes the distortions caused by elements such as the Earth's magnetic field.
- The full-size feature expands the image on the monitor to fill the screen when used in factory preset modes.

- USB Bay at back of monitor is prepared for the Universal Serial Bus hub. You can easily and flexibly connect USB-designed devices – such as a mouse or keyboard – to the monitor for true Plug-and-Play function. USB hub shipped separately.

- Green Design – including automatic power saving function (NUTEK) and low-emission compliance (TCO '95) – shows your commitment to the environment.

- DDC1/DDC2B allows communication between the monitor and the PC for optimal video configuration.

- The Power Factor Correction feature improves the power factor and results in higher power-consumption efficiency.

- Moire Cancellation eliminates diffraction, a fringe pattern in the picture.

**Note:** Your monitor operates according to the VESA DDC level 1/2B. Only computers that support the same guidelines and operate at the same or a higher level can make use of this feature. If your computer does not support the relevant guidelines, you can still use your monitor and computer. However, you may need to manually specify the appropriate resolution in the computer.

As an Energy Star Partner, Philips has determined that this product meets the Energy Star guidelines for energy efficiency.



Contact us at our web site: <http://www.monitors.be.philips.com>

### Safety precautions and maintenance

- Unplug the monitor, if you are not going to use it for an extended period of time.
- Unplug the monitor, if you need to clean it with a slightly damp cloth. Wiping the screen with a dry cloth is okay when the power is off. However, never use alcohol or ammonia-based liquids.
- Consult a service technician if the monitor does not operate normally when following the instructions in this manual.
- The back cover should be removed only by qualified service personnel.
- Keep the monitor out of direct sunlight and away from stoves or any other heat source.
- The top of the monitor is not a shelf. Remove any object that could fall into the vents or prevent proper cooling of the monitor's electronics.

- Keep the monitor dry. To avoid electric shock, do not expose it to rain or excessive moisture.

- Keep the monitor away from magnetic objects, such as speakers, electric motors, transformers, etc.

- When positioning the monitor, make sure the power plug and outlet are easily accessible.


### End-of-life disposal

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.


Please find out about the local regulations on how to dispose of your old monitor.

ENERGY STAR is a U.S. registered mark.


IBM, IBM PC, and Power PC are registered trademarks of International Business Machines Corporation.  
Apple, Macintosh, Quadra, Performa, and Centris are registered trademarks of Apple Computer, Inc.

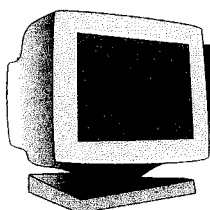


## DESCRIPTION OF CONTROLS

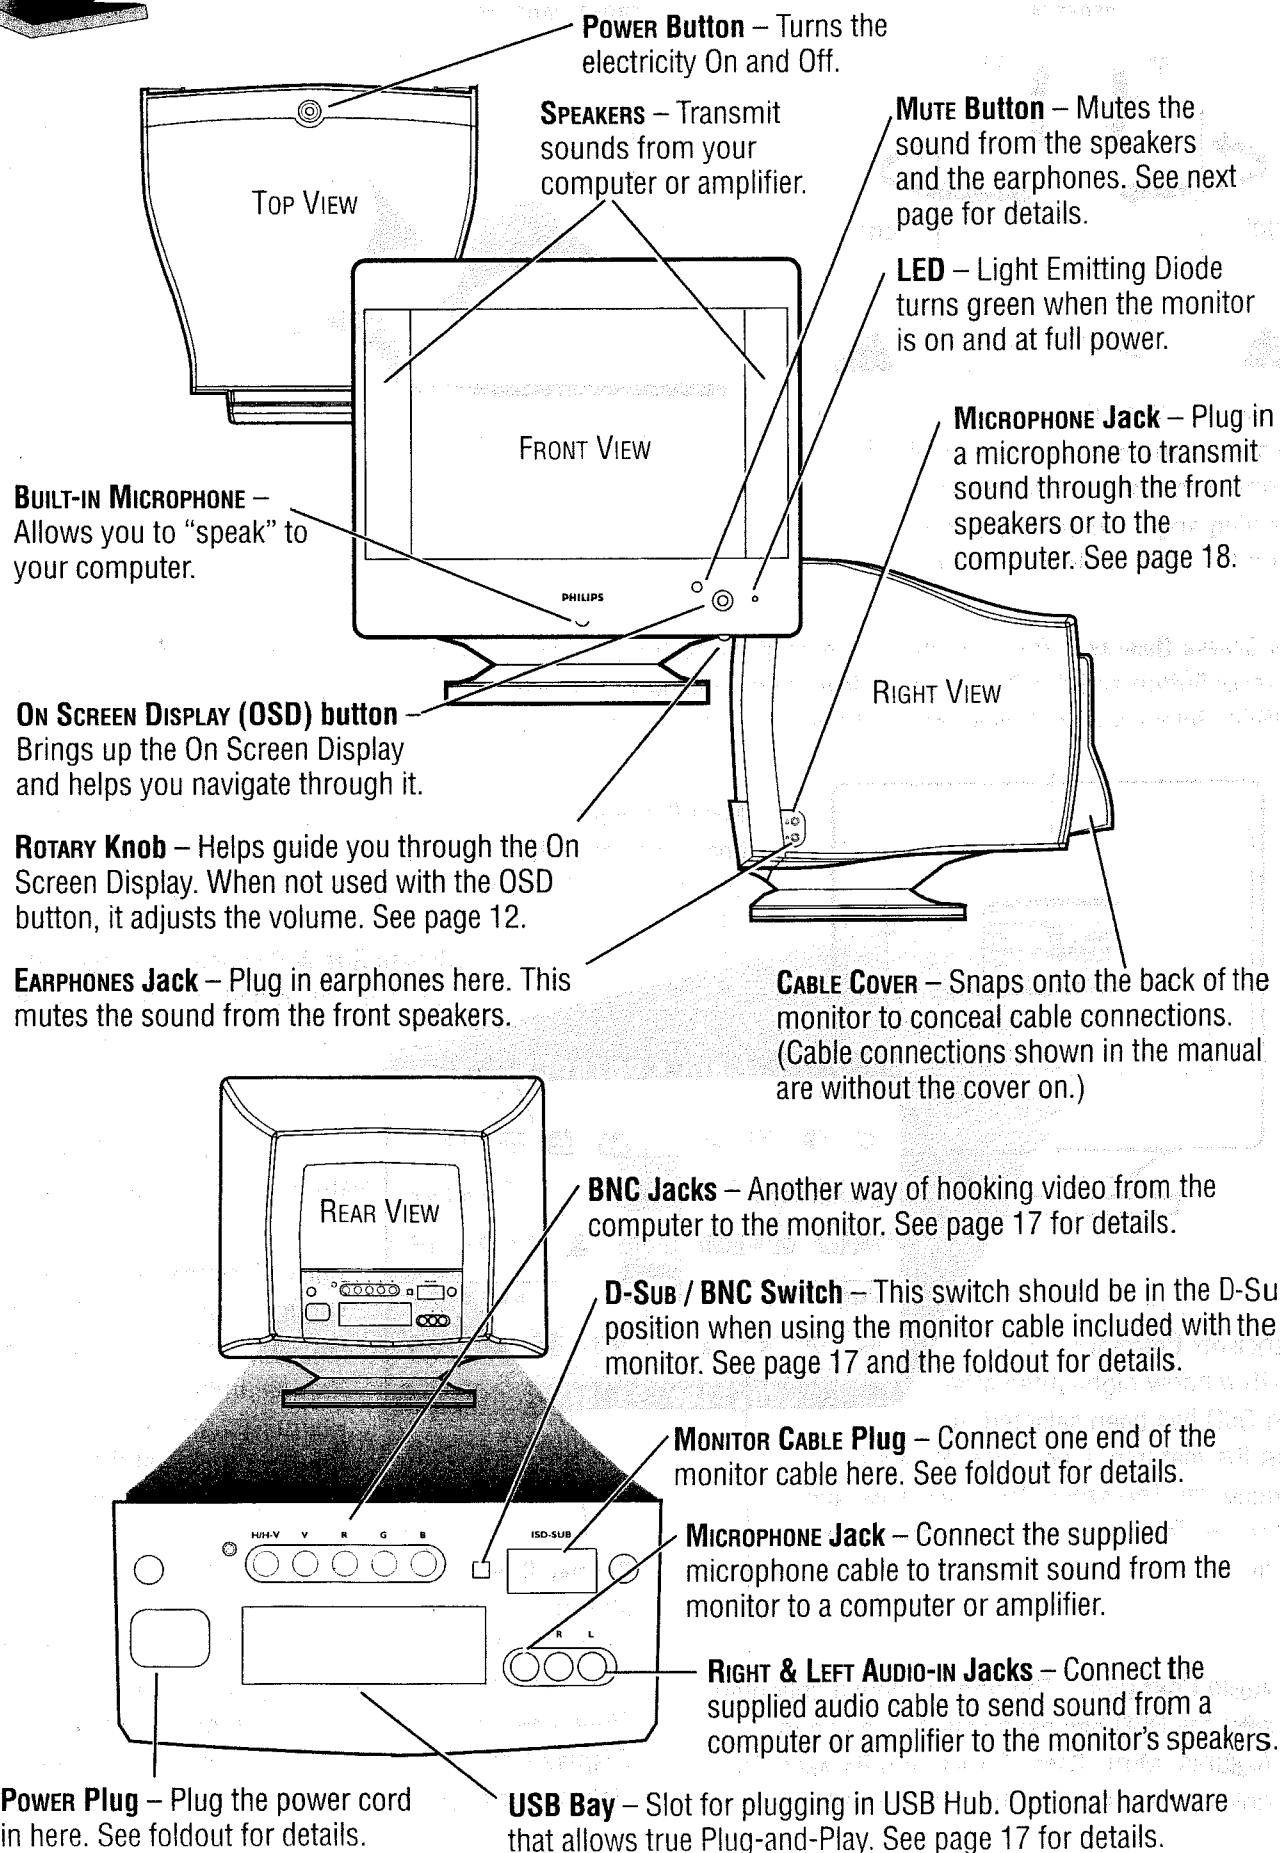

## DESCRIPTION OF CONTROLS

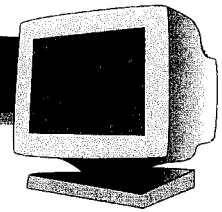


### PEDESTAL

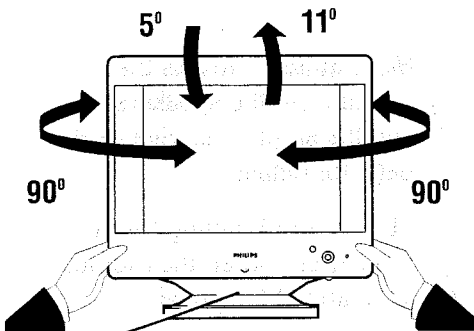


**PEDESTAL** – With the built-in pedestal, you can tilt and swivel the monitor to the most comfortable viewing angle. To best use your monitor, always place it at eye level.

### FRONT-PANEL MUTE BUTTON

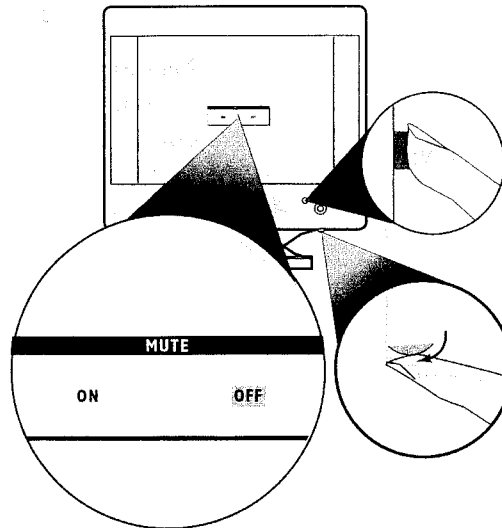

**USING THE FRONT-PANEL MUTE BUTTON** – To turn the mute On and Off, first press the MUTE button. Next, turn the ROTARY knob to highlight either On or Off. Then, press the MUTE button again. *For another way to mute the sound, see page 14.*

**ON SCREEN DISPLAY** – Your monitor is preset at the factory. However, you can adjust it using the ON SCREEN DISPLAY button and the ROTARY knob described on page 2. The way to do so is through the On Screen Display (OSD). Below is a brief description of the six On Screen Display windows.

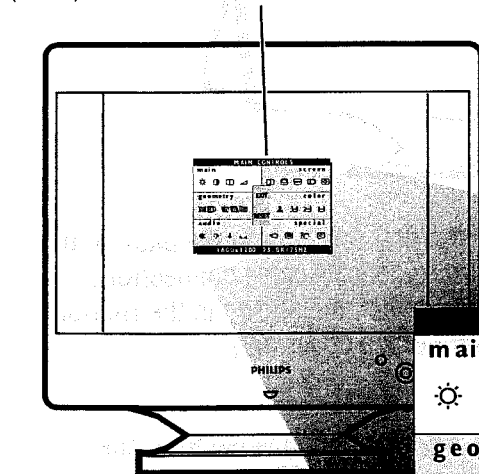

**MAIN CONTROLS** – The first window highlighted after the OSD has been selected. It has four features: BRIGHTNESS, CONTRAST, DEGAUSS, and VOLUME. To adjust these features, turn to pages 4 - 5.


**SCREEN SIZE & POSITION** – The second window highlighted after the OSD has been selected. It has five features: FULL SIZE, HORIZONTAL POSITION, HORIZONTAL SIZE, VERTICAL POSITION, and VERTICAL SIZE. To adjust these features, turn to pages 6 - 8.

**COLOR TEMPERATURE** – The third window highlighted after the OSD has been selected. It has four features: CAD/CAM, DTP, PHOTO RETOUCH, and USER PRESETS. To adjust these features, turn to pages 8 - 9.

**GEOMETRY CONTROLS** – The sixth window highlighted after the OSD has been selected. It has five features: PINCUSHION, BALANCED PINCUSHION, TRAPEZOID, PARALLELOGRAM, and ROTATION. To adjust these features, turn to page 15.

**AUDIO CONTROLS** – The fifth window highlighted after the OSD has been selected. It has four features: MUTE, BASS, TREBLE, and BALANCE. To adjust these features, turn to page 14.

**SPECIAL CONTROLS** – The fourth window highlighted after the OSD has been selected. It has four features: LANGUAGE, ADVANCED CONTROLS, OSD CONTROLS, and VIDEO INPUT. To adjust these features, turn to pages 10 - 13. *Note: LANGUAGE allows you to change the On Screen Display from English to French, Spanish, German, or Italian. See page 10 for details.*

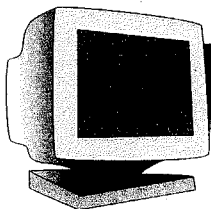


# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## MAIN CONTROLS WINDOW

### BRIGHTNESS

To adjust your screen's brightness, follow the steps below. Brightness is the overall intensity of the light coming from the screen. A 50% brightness level is recommended.

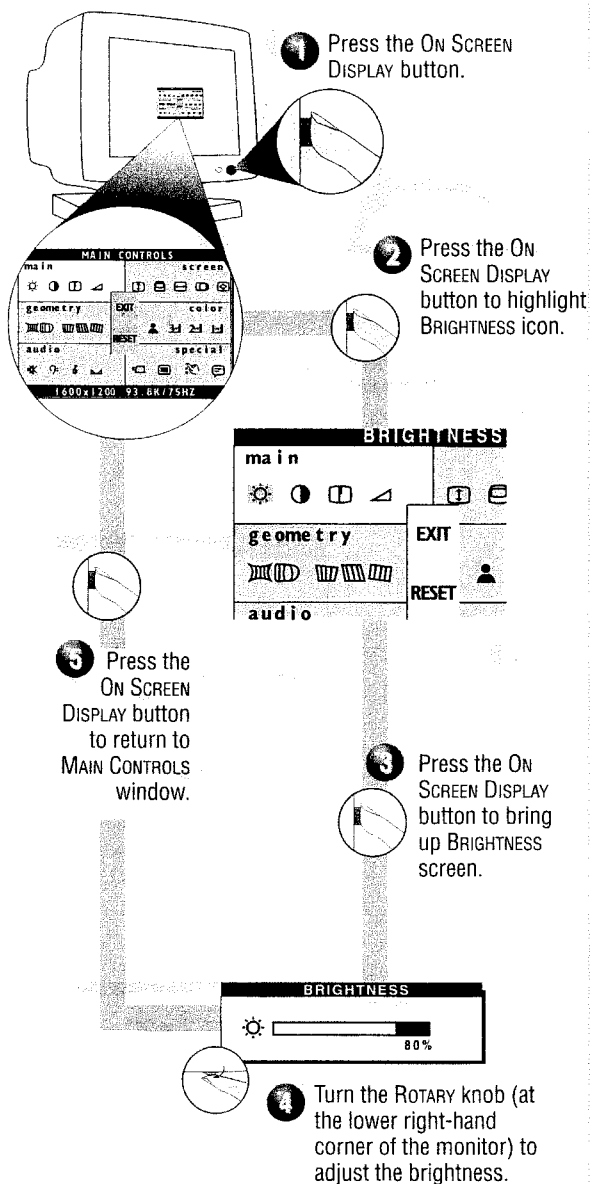


#### SMART HELP

##### After returning to MAIN CONTROLS ...

... to continue to CONTRAST, turn the ROTARY knob until CONTRAST icon is highlighted. Next, follow steps 3 - 5 under CONTRAST.  
... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

### CONTRAST

To adjust your screen's contrast, follow the steps below. Contrast is the difference between the light and dark areas on the screen. A 100% contrast level is recommended.

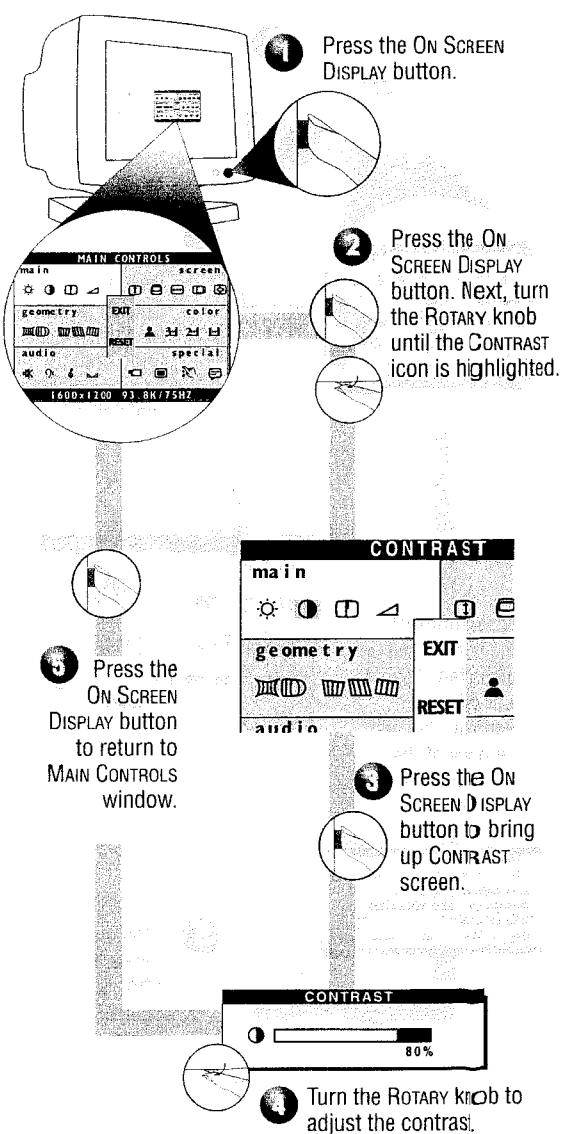


#### SMART HELP

##### After returning to MAIN CONTROLS ...

... to continue to DEGAUSS, turn the ROTARY knob until DEGAUSS icon is highlighted. Next, follow steps 3 - 4 under DEGAUSS (on the next page).  
... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)


# HOW TO USE THE ON SCREEN DISPLAY (OSD)

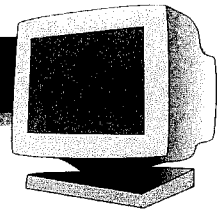

## MAIN CONTROLS WINDOW

### DEGAUSS

**1** To degauss your screen, follow the steps below. Degaussing removes electromagnetic build up that may distort the color on your screen.

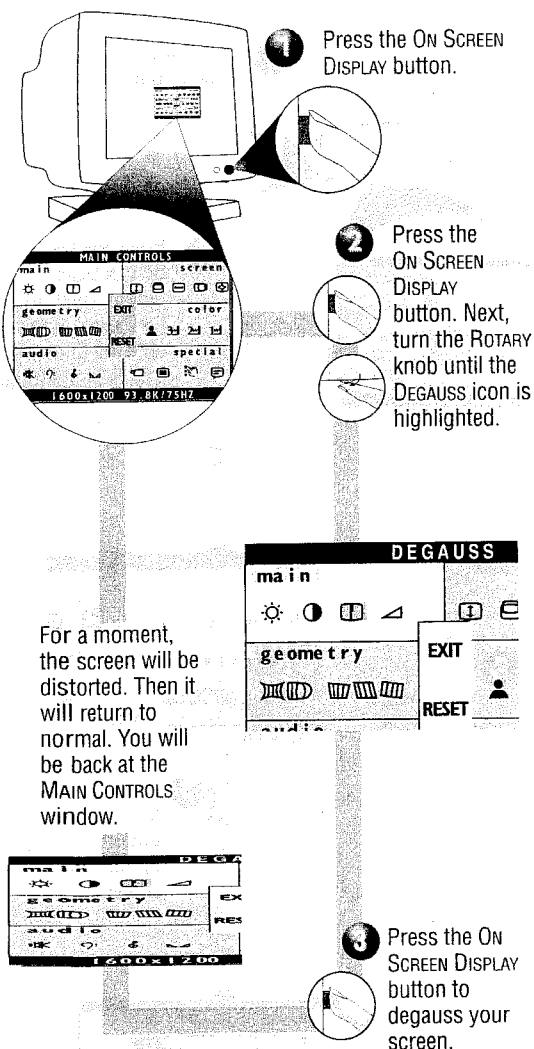

### SMART HELP


#### After returning to MAIN CONTROLS...

... to continue to VOLUME, turn the ROTARY knob until VOLUME icon is highlighted. Next, follow steps 3 - 5 under VOLUME.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

### VOLUME

**1** To adjust your monitor's volume, follow the steps below. The volume control adjusts the sound from the two front-mounted speakers or the earphones jack.

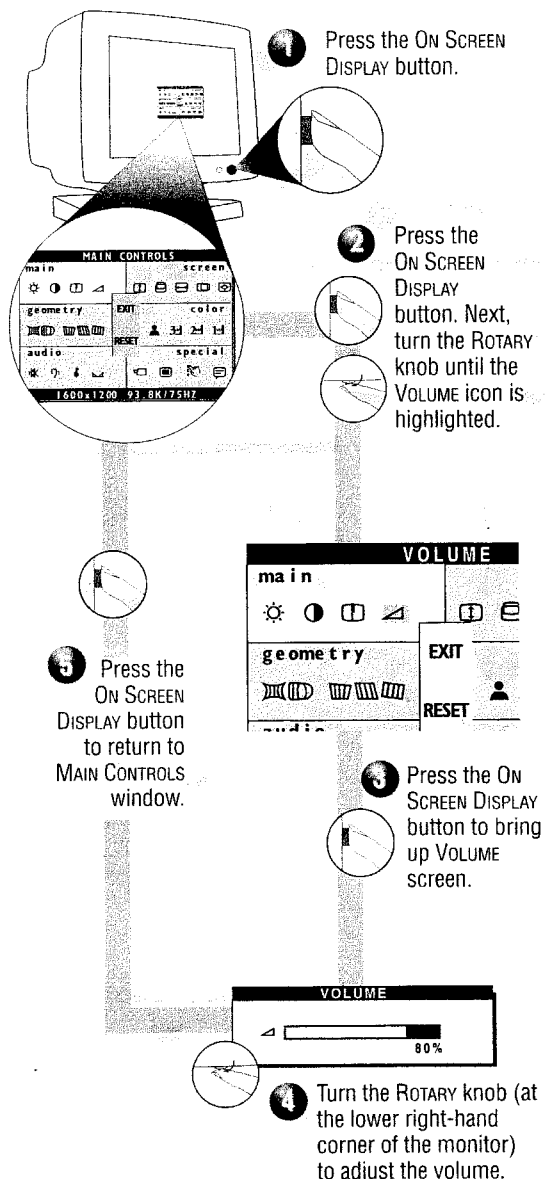


### SMART HELP

#### After returning to MAIN CONTROLS...

... to continue to the SCREEN SIZE & POSITION window, turn the ROTARY knob until EXIT is highlighted. Next, press the OSD button. Turn to the next page and follow steps 2 - 5 under Full Size.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

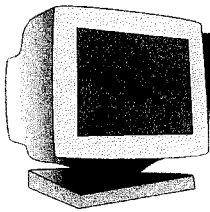


# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## SCREEN SIZE & POSITION WINDOW

### FULL SIZE


 Full Size allows you to adjust the image on your screen to its maximum height and width. If nothing happens when you use this feature, the image is already at full size. You can use Full Size to both enable and disable this feature. *Note: Full Size only works with the monitor's factory presets.*

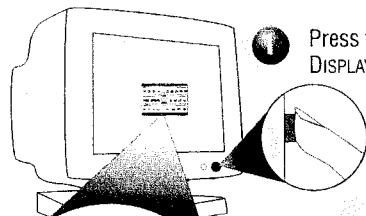

1 Press the On Screen Display button.




2 Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the On Screen Display button. The FULL SIZE icon is highlighted.

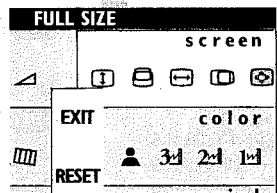

The image will automatically adjust to full size. You can now go on to your next adjustment.

3 Press the On Screen Display button.

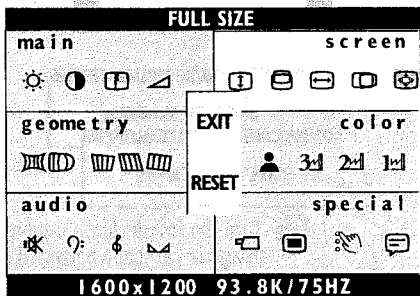


### SMART HELP


#### After returning to SCREEN SIZE & POSITION ...

... to continue to HORIZONTAL POSITION, turn the ROTARY knob until HORIZONTAL POSITION is highlighted. Next, follow steps 3 - 5 under HORIZONTAL POSITION.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

### HORIZONTAL POSITION


 Horizontal Position shifts the image on your screen either to the left or right. Use this feature if your image does not appear centered.

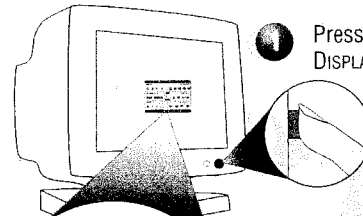

1 Press the On Screen Display button.

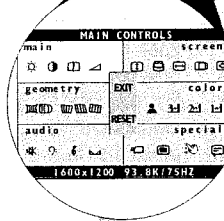

2 Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until HORIZONTAL POSITION is highlighted.

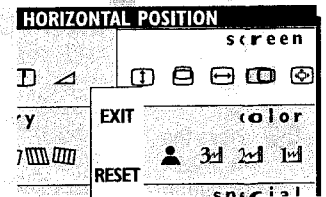

3 Press the On Screen Display button to return to SCREEN SIZE & POSITION.

3 Press the On Screen Display button to bring up HORIZONTAL Position screen.



4 Turn the ROTARY (at the lower right-hand corner of the monitor) knob until the image is horizontally balanced.

### SMART HELP

#### After returning to SCREEN SIZE & POSITION ...


... to continue to HORIZONTAL SIZE, turn the ROTARY knob until HORIZONTAL SIZE is highlighted. Next, follow steps 3 - 5 under HORIZONTAL SIZE (on the next page).

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)



# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## SCREEN SIZE & POSITION WINDOW

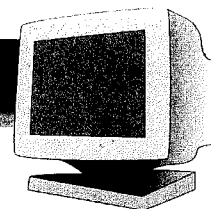

### HORIZONTAL SIZE

Horizontal Size expands or contracts the image on your screen, pushing it out toward the left and right sides or pulling it in toward the center.

- Press the ON SCREEN DISPLAY button.
- Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until HORIZONTAL Size is highlighted.
- Press the ON SCREEN DISPLAY button to return to SCREEN SIZE & POSITION.
- Press the ON SCREEN DISPLAY button to bring up HORIZONTAL Size screen.
- Turn the ROTARY knob (at the lower right-hand corner of the monitor) until the image is the horizontal size you want.

### VERTICAL POSITION VERTICAL SIZE

Vertical Position adjusts the image on your screen either up or down. Use this feature if your image does not appear centered. Vertical Size expands or contracts the image on your screen, pushing it out toward the top and bottom sides or pulling it in toward the center.

- Press the ON SCREEN DISPLAY button.
- Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until VERTICAL Position or VERTICAL Size is highlighted.
- Press the ON SCREEN DISPLAY button to return to SCREEN SIZE & POSITION.
- Press the ON SCREEN DISPLAY button to bring up VERTICAL Position or VERTICAL Size screen.
- Turn the ROTARY knob until the image is vertically balanced or the vertical size you want.

#### SMART HELP

##### After returning to SCREEN SIZE & POSITION ...

... to continue to VERTICAL POSITION, turn the ROTARY knob until VERTICAL Position is highlighted. Next, follow steps 3 - 5 under VERTICAL POSITION.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

#### SMART HELP

##### After returning to SCREEN SIZE & POSITION ...

... to continue to GEOMETRY WINDOW, turn the ROTARY knob until EXIT is highlighted. Next, press the OSD button. Then follow steps 2a - 2c under GEOMETRY WINDOW on the next page.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

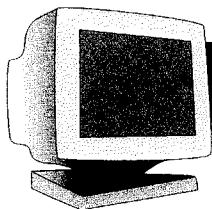

# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## COLOR TEMPERATURE WINDOW


**9300 K CAD/CAM / 6500 K DTP  
5500 K PHOTO RETOUCH**

1


2

3


Your monitor has three preset options you can choose from. One 1 for Computer Aided Design (CAD) work. Two 2 for Desktop Publishing (DTP). And three 3 for Photo Retouch. When you select an option, the computer automatically adjusts itself for that selection.

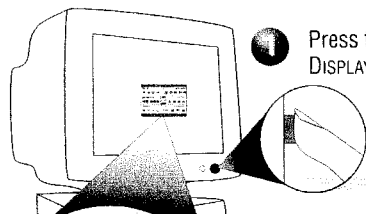

1 Press the On SCREEN DISPLAY button.

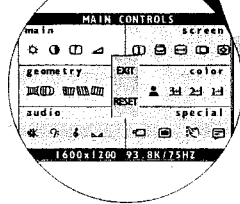


2 Turn the ROTARY knob until the COLOR window is highlighted. Then press the On SCREEN DISPLAY button.

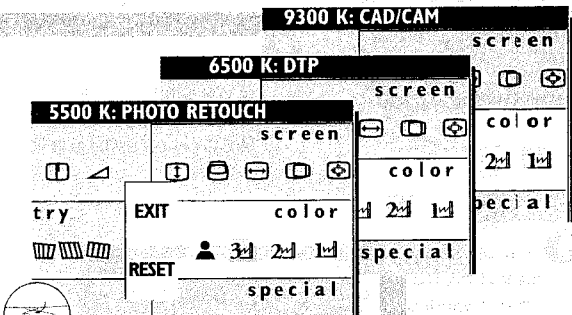

3 Turn the ROTARY knob until CAD/CAM, DTP, OR PHOTO RETOUCH is highlighted.

After each preset setting is saved, the on screen display automatically returns to the COLOR TEMPERATURE window. To save the next present setting, simply repeat the steps listed here.

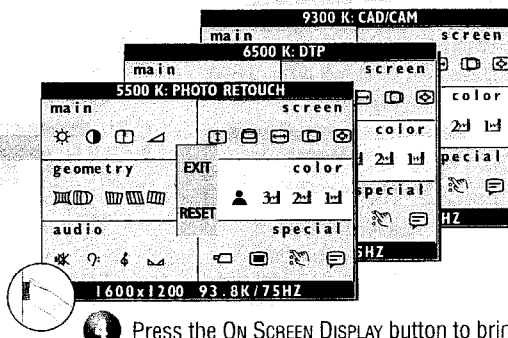

4 Press the On SCREEN DISPLAY button to bring up and save the preset settings for 9300 K CAD/CAM, 6500 K DTP, or 5500 K PHOTO RETOUCH.

### SMART HELP


#### After returning to COLOR TEMPERATURE ...

... to continue to USER PRESETS, turn the ROTARY knob until USER PRESETS is highlighted. Next, follow steps 3 - 9 under USER PRESETS on the next page.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)


# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## COLOR TEMPERATURE WINDOW

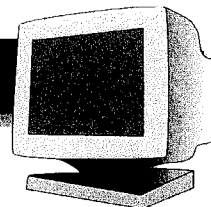


### USER PRESETS

If you need to adjust any of the three preset options (CAD/CAM, DTP, or PHOTO RETOUCH), follow the steps below to modify the colors that appear on your screen. You can make individual adjustments to each of the preset options.

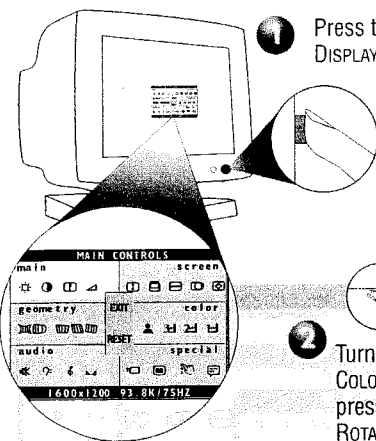

1 Press the On Screen Display button.


2 Turn the ROTARY knob until the COLOR window is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until USER PRESETS icon is highlighted.

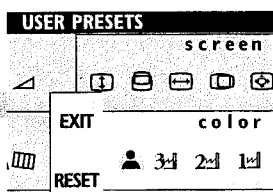

3 Press the On Screen Display button to bring up the User PRESETS window.



4 You will now be back at the User PRESETS window. See SMART HELP below for options.

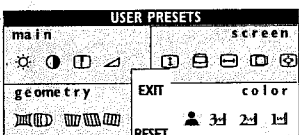

5 If necessary, turn the ROTARY knob until 1 of the User PRESETS is highlighted. Next, press the On Screen Display button.

6 To exit User PRESET 1, press the On Screen Display button. Next, turn the ROTARY knob until the EXIT box is highlighted. Then, press the On Screen Display button.



7 When done with green, press the On Screen Display button. BLUE will be highlighted.



 
To adjust the blue, press the On Screen Display button again. Then, turn the ROTARY knob to increase or decrease the blue.



8 When done with red, press the On Screen Display button. GREEN will be highlighted.



To adjust the green, press the On Screen Display button again. Then, turn the ROTARY knob to increase or decrease the green.



9 First, press the On Screen Display button. RED will be highlighted.



Next, to adjust the red, press the On Screen Display button again. Then, turn the ROTARY knob to increase or decrease the red.



### SMART HELP

#### USER PRESETS


GO BACK

1 2

To exit User PRESETS (step 3 above), turn the ROTARY knob until the Go Back icon is highlighted. Go BACK appears by the icon when highlighted. Next, press the On Screen Display button. You will be back at the COLOR TEMPERATURE window.

#### After returning to COLOR TEMPERATURE ...

- ... to continue to USER PRESET 2 OR 3, repeat steps 3 through 8, selecting either User PRESET 2 or User PRESET 3.
- ... to continue to SPECIAL CONTROLS window, turn the ROTARY knob until EXIT is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Now, follow steps 2 - 5 under SPECIAL CONTROLS on the next page.
- ... to exit the On Screen Display completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

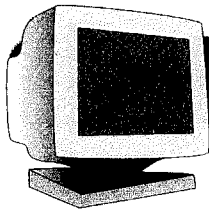

# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## SPECIAL CONTROLS WINDOW

### LANGUAGE

The ON SCREEN DISPLAY shows its settings in one of five languages. The default is English, but you can select French, Spanish, German, or Italian.

- 1 Press the ON SCREEN DISPLAY button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Then, press the ON SCREEN DISPLAY button to highlight LANGUAGE icon.
- 3 Press the ON SCREEN DISPLAY button to confirm your selection and return to SPECIAL CONTROLS.
- 4 Press the ON SCREEN DISPLAY button to bring up LANGUAGE screen.
- 5 Turn the ROTARY knob (at the lower right-hand corner of the monitor) until desired language is selected.

The diagram shows the OSD menu structure: MAIN CONTROLS (main, screen, geometry, color, audio, special) with a highlighted 'special' option. The 'LANGUAGE' screen shows options: ENGLISH, FRANCAIS, ESPANOL, DEUTSCH, ITALIANO. The final step shows the monitor with the selected language at the bottom right corner.

### SMART HELP

#### After returning to SPECIAL CONTROLS...

... to continue to ADVANCED CONTROLS, turn the ROTARY knob until ADVANCED CONTROLS icon is highlighted. Next, follow steps 3 - 6 under ADVANCED CONTROLS.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

### ADVANCED CONTROLS CORNER CORRECTION

ADVANCED CONTROLS is a set of five adjustments. They include CORNER CORRECTION, VERTICAL LINEARITY, MOIRE, ROTARY DEFAULT, and POWER SAVING. CORNER CORRECTION "squares up" the corners of an image on the screen. To adjust your CORNER CORRECTION, follow the steps below.

- 1 Press the ON SCREEN DISPLAY button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the ADVANCED CONTROLS icon is highlighted.
- 3 Press the ON SCREEN DISPLAY button to bring up ADVANCED CONTROLS screen.
- 4 Press the ON SCREEN DISPLAY button to bring up CORNER CORRECTION screen.
- 5 Turn the ROTARY knob until desired corner correction is selected.
- 6 If necessary, turn the ROTARY knob until CORNER CORRECTION is highlighted. Then, press the ON SCREEN DISPLAY button.

The diagram shows the OSD menu structure: MAIN CONTROLS (main, screen, geometry, color, audio, special) with a highlighted 'special' option. The 'ADVANCED CONTROLS' screen shows options: CORNER CORRECTION, VERTICAL LINEARITY, MOIRE, ROTARY DEFAULT, POWER SAVING. The 'CORNER CORRECTION' screen shows a slider from 0 to 50%.

### SMART HELP


#### After returning to ADVANCED CONTROLS...

... to continue to VERTICAL LINEARITY, turn the ROTARY knob until VERTICAL LINEARITY icon is highlighted. Next, follow steps 4 - 6 under VERTICAL LINEARITY (on the next page).

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

# HOW TO USE THE ON SCREEN DISPLAY (OSD)



## SPECIAL CONTROLS WINDOW

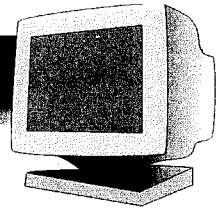

### ADVANCED CONTROLS VERTICAL LINEARITY

**ADVANCED CONTROLS** is a set of five adjustments, including **VERTICAL LINEARITY**. Linearity is the degree with which the actual location of a pixel on the screen corresponds with its intended location. To adjust your **VERTICAL LINEARITY**, follow the steps below.

 
- 1 Press the On Screen Display button.
- 2 Turn the ROTARY knob until **SPECIAL CONTROLS** is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until the **ADVANCED CONTROLS** icon is highlighted.
- 3 Press the On Screen Display button to add your adjustment and to bring up **ADVANCED CONTROLS** screen.
- 4 Press the On Screen Display button to bring up **ADVANCED CONTROLS** screen.
- 5 Turn the ROTARY knob to adjust the vertical linearity.
- 6 Turn the ROTARY knob until **VERTICAL LINEARITY** is highlighted. Then, press the On Screen Display button.

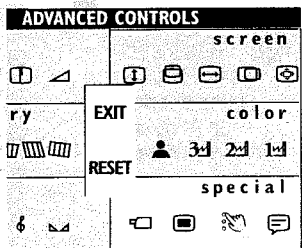

### ADVANCED CONTROLS MOIRE

**ADVANCED CONTROLS** is a set of five adjustments, including **MOIRE**. **MOIRE** is a fringe pattern arising from the interference between two superimposed line patterns. To adjust your **MOIRE**, follow the steps below. *Note: Use only if necessary. By activating **MOIRE**, sharpness can be affected.*

- 1 Press the On Screen Display button.
- 2 Turn the ROTARY knob until **SPECIAL CONTROLS** is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until the **ADVANCED CONTROLS** icon is highlighted.
- 3 Press the On Screen Display button to add your adjustment and to bring up **ADVANCED CONTROLS** screen. See **SMART HELP** to select **VERTICAL MOIRE** or turn **MOIRE** Off.
- 4 Press the On Screen Display button to bring up **ADVANCED CONTROLS** screen.
- 5 Turn the ROTARY knob to adjust the moire.
- 6 Press the On Screen Display button to bring up **ADVANCED CONTROLS** screen.
- 7 Turn the ROTARY knob until **MOIRE** is highlighted. Then, press the On Screen Display button.
- 8 Turn the ROTARY knob until **HORIZONTAL MOIRE** is highlighted. Then, press the On Screen Display button.
- 9 Turn the ROTARY knob until **MOIRE** is highlighted. Then, press the On Screen Display button.

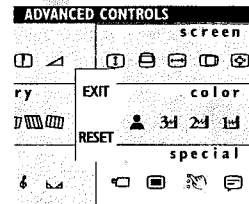

#### SMART HELP

##### After returning to **ADVANCED CONTROLS** ...

... to continue to **MOIRE**, turn the ROTARY knob until **MOIRE** icon is highlighted. Next, follow steps 4 - 7 under **MOIRE**.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

#### SMART HELP

To select **VERTICAL MOIRE** or to turn **Moire** off, follow the steps above, selecting **VERTICAL MOIRE** or **Moire** off in step 5.

##### After returning to **ADVANCED CONTROLS** ...

... to continue to **ROTARY DEFAULT**, turn the ROTARY knob until **ROTARY DEFAULT** icon is highlighted. Next, follow steps 4 - 6 under **ROTARY DEFAULT**. ... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

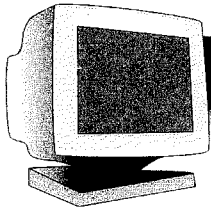


# HOW TO USE THE ON SCREEN DISPLAY (OSD)


## SPECIAL CONTROLS WINDOW

### ADVANCED CONTROLS ROTARY DEFAULT

**ROTARY DEFAULT** allows you to pick the feature your ROTARY knob will default to when not used in adjusting your ON SCREEN DISPLAY. The normal default is volume. To select your ROTARY DEFAULT, follow the steps below.

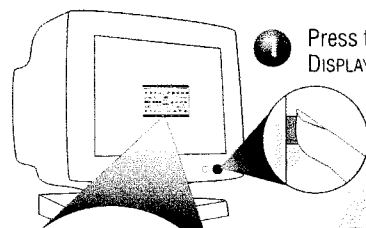


**1** Press the ON SCREEN DISPLAY button.

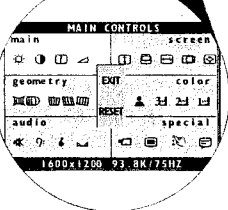


**2** Turn the ROTARY knob until **SPECIAL CONTROLS** is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the **ADVANCED CONTROLS** icon is highlighted.

**3** Press the ON SCREEN DISPLAY button to add your adjustment and return to **ADVANCED CONTROLS**.

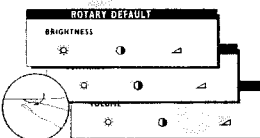

**4** Turn the ROTARY knob to select **BRIGHTNESS**, **CONTRAST**, or **VOLUME**.

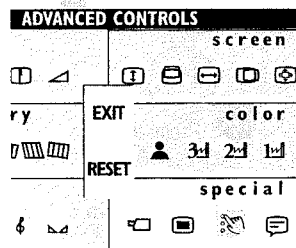

**5** Press the ON SCREEN DISPLAY button to bring up **ADVANCED CONTROLS** screen.



**6** Turn the ROTARY knob until **ROTARY DEFAULT** is highlighted. Then, press the ON SCREEN DISPLAY button.

### SMART HELP


#### After returning to **ADVANCED CONTROLS** ...

... to continue to **POWER SAVING**, turn the ROTARY knob until **POWER SAVING** is highlighted. Next, follow steps 3 - 6 under **POWER SAVING**.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

### ADVANCED CONTROLS POWER SAVING

**POWER SAVING** helps save energy when the monitor is on but not being used. After a preset time, the monitor will go blank if not being used. To select **POWER SAVING**, follow the steps below.

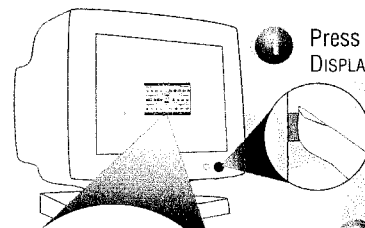


**1** Press the ON SCREEN DISPLAY button.

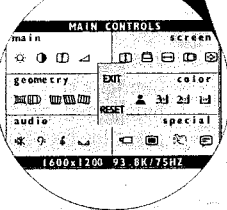


**2** Turn the ROTARY knob until **SPECIAL CONTROLS** is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the **ADVANCED CONTROLS** icon is highlighted.

**3** Press the ON SCREEN DISPLAY button to add your adjustment and return to **ADVANCED CONTROLS**.

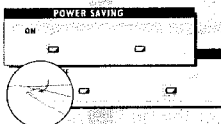

**4** Turn the ROTARY knob to select **POWER SAVING** On or Off.

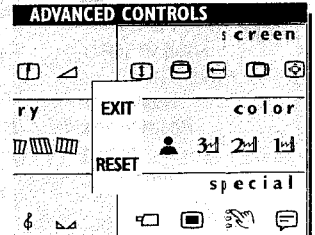

**5** Press the ON SCREEN DISPLAY button to bring up **ADVANCED CONTROLS** screen.



**6** Turn the ROTARY knob until **POWER SAVING** is highlighted. Then, press the ON SCREEN DISPLAY button.

### SMART HELP

#### After returning to **ADVANCED CONTROLS** ...


... to continue to **OSD CONTROLS**, turn the ROTARY knob until **GO BACK** is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob to **OSD CONTROLS** and go to the next page.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)



# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## SPECIAL CONTROLS WINDOW

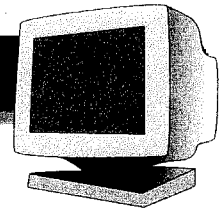

### OSD CONTROLS

WITH OSD CONTROLS, you can set the time for the On Screen Display to time out, and change the vertical and horizontal position of the OSD on the monitor screen.

- 1 Press the On Screen Display button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until the OSD CONTROLS icon is highlighted.
- 3 Turn the ROTARY knob to select either VERTICAL or HORIZONTAL Position and repeat steps 3 - 6.
- 4 Press the On Screen Display button to add your change and return to OSD CONTROLS.
- 5 Press the On Screen Display button to bring up OSD CONTROLS screen.
- 6 Press the On Screen Display button to bring up TIMER screen.
- 7 Turn the ROTARY knob to select 05, 10, 25 seconds, or OFF.

### SMART HELP

#### After returning to SPECIAL CONTROLS ...

... to continue to OSD CONTROLS, turn the ROTARY knob until OSD CONTROLS icon is highlighted. Then, follow steps 3 - 6 under OSD CONTROLS.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

### VIDEO INPUT

VIDEO INPUT helps determine what you see on the screen. It is set at 0.7V(olts), but if the video input signal is different than the output signal, you may want to change it to 1.0V.

- 1 Press the On Screen Display button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until the VIDEO INPUT icon is highlighted.
- 3 Press the On Screen Display button to save your selection and return to SPECIAL CONTROLS.
- 4 Press the On Screen Display button. The VIDEO INPUT screen appears.
- 5 Turn the ROTARY knob to select either 0.7V or 1.0V.

### SMART HELP


#### After returning to OSD CONTROLS ...

... to continue to Audio Controls, turn the ROTARY knob until Go Back is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob to Audio Controls window and go to the next page.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)





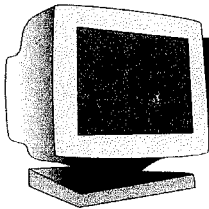


# HOW TO USE THE ON SCREEN DISPLAY (OSD)


## AUDIO CONTROLS WINDOW

### MUTE, BASS, TREBLE, BALANCE


Follow the steps below to modify the sound that comes from your speakers. You can make individual adjustments to each of the preset options (MUTE, BASS, TREBLE, or BALANCE).

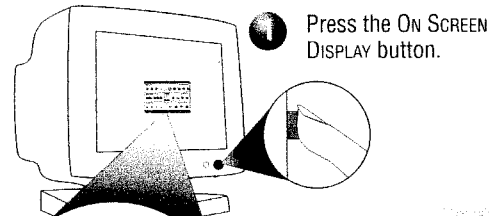

**1** Press the On Screen Display button.

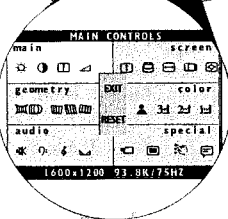

**2a** Turn the ROTARY knob until the AUDIO CONTROLS window is highlighted. Next, press the On Screen Display button. Then, if necessary, turn the ROTARY knob until MUTE icon is highlighted. If you have sound, MUTE OFF appears at the top of the on screen display.

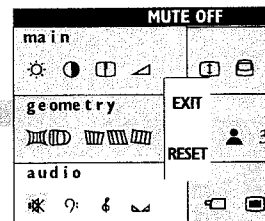

**2b** Press the On Screen Display button to mute the sound from your speakers and to return to AUDIO CONTROLS window. MUTE ON appears at the top of the on screen display.

**3c** When done, press the On Screen Display button to save the change and return the screen to AUDIO CONTROLS.




**3b** Turn the ROTARY knob to adjust the balance.



**3a** To select BALANCE, turn the ROTARY knob until BALANCE icon is highlighted. Then, press the On Screen Display button.


**4c** When done, press the On Screen Display button to save the change and return the screen to AUDIO CONTROLS.

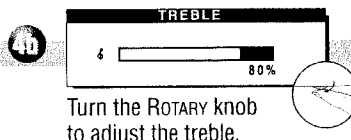

**4b** Turn the ROTARY knob to adjust the treble.

**4a** To select TREBLE, turn the ROTARY knob until TREBLE icon is highlighted. Next, press the On Screen Display button.

 **3a** To select BASS, turn the ROTARY knob until BASS icon is highlighted. Next, press the On Screen Display button.



**3b** Turn the ROTARY knob to adjust the bass.

**3c** When done, press the On Screen Display button to save the change and return the screen to AUDIO CONTROLS.

### SMART HELP

#### To exit Audio Controls ...

... but continue on to GEOMETRY CONTROLS, turn the ROTARY knob until EXIT is highlighted. Next, press the On Screen Display button. Then go to step 2a on page 15.


... completely, press the On Screen Display button and hold for two seconds. The On Screen Display will disappear. All change will be saved.

To cancel Mute, repeat step 2b, or press the MUTE button on the front of the monitor.

To make changes to one item, follow the steps for that item. Then follow the instructions To exit Audio Controls ....

# HOW TO USE THE ON SCREEN DISPLAY (OSD)


## GEOMETRY CONTROLS WINDOW

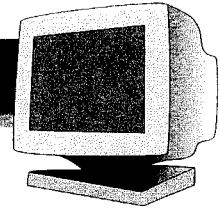


### PINCUSHION, BALANCED PINCUSHION, TRAPEZOID, PARALLELOGRAM, ROTATION




Follow the steps below to adjust any of the five preset options (PINCUSHION, BALANCED PINCUSHION, TRAPEZOID, PARALLELOGRAM, or ROTATION). You can make individual adjustments to each of the preset options. *Note: use these features only when the picture is not square.*

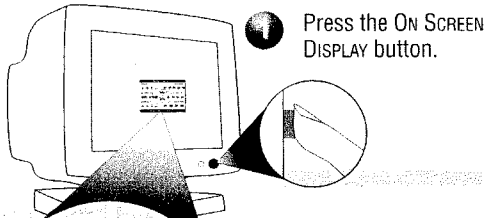


1 Press the On SCREEN DISPLAY button.

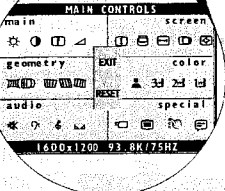

2a Turn the ROTARY knob until the GEOMETRY CONTROLS window is highlighted. Next, press the On SCREEN DISPLAY button. Then, if necessary, turn the ROTARY knob until PINCUSHION icon is highlighted.

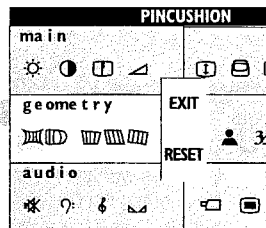

2b Press the On SCREEN DISPLAY button. Then, turn the ROTARY knob to adjust the pincushion.

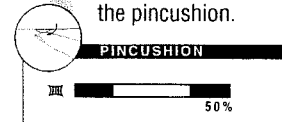

2c When done, press the On SCREEN DISPLAY button to save the change and return to GEOMETRY CONTROLS window.

 
3a To select BALANCED PINCUSHION, turn the ROTARY knob until BALANCED PINCUSHION is highlighted. Next, press the On SCREEN DISPLAY button.



3b To select PARALLELOGRAM or ROTATION, turn the ROTARY knob until PARALLELOGRAM or ROTATION icon is highlighted.  
3c Next, press the On SCREEN DISPLAY button. Then follow steps 4b and 4c to make the appropriate changes.



4c When done, press the On SCREEN DISPLAY button. This will save the change and return the screen to GEOMETRY CONTROLS window.



4b Turn the ROTARY knob to adjust the trapezoid.

4a To select TRAPEZOID, turn the ROTARY knob until TRAPEZOID icon is highlighted. Next, press the On SCREEN DISPLAY button.



5c When done, press the On SCREEN DISPLAY button. This will save the change and return the screen to GEOMETRY CONTROLS.



5b Turn the ROTARY knob (on the lower right-hand corner of the monitor) to adjust the balanced pincushion.

### SMART HELP


#### To exit GEOMETRY CONTROLS . . .

. . . but continue to another window, turn the ROTARY knob until EXIT is highlighted. Next, press the On SCREEN DISPLAY button. Then, turn the ROTARY knob until that window is highlighted. Now, press the On SCREEN DISPLAY button and follow the instructions for that window.

. . . completely, press the On SCREEN DISPLAY button and hold for two seconds. The On Screen Display will disappear. All changes will be saved.

To make changes to one item, follow the steps for that item. Then, follow "To exit GEOMETRY CONTROLS . . ."

To return to factory presets, see "To Reset an Individual Window" on page 16.

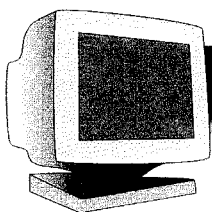


# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## EXIT AND RESET


### EXIT & RESET FROM A WINDOW

Choosing EXIT allows you to go to another window. Choosing RESET returns all the settings in that window to factory presets.


#### TO EXIT AN INDIVIDUAL WINDOW

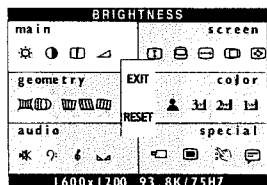

- 1 Make sure you are at a window. For example, MAIN CONTROLS. An icon will be highlighted. For example, BRIGHTNESS.

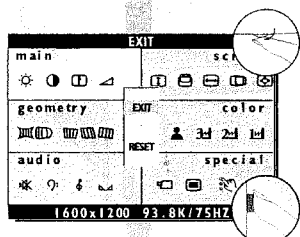


- 2 Turn the ROTARY knob until EXIT is highlighted. Next, press the ON SCREEN DISPLAY button.

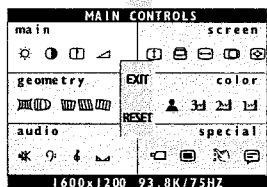


- 3 An entire window is now highlighted. Turn the ROTARY knob to another window and begin adjustments, or turn the knob until EXIT is highlighted as shown in EXIT FROM OSD (at right).


#### TO RESET AN INDIVIDUAL WINDOW

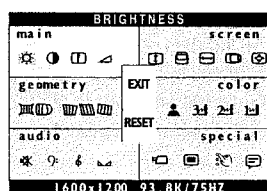

- 1 Make sure you are at a window. For example, MAIN CONTROLS. An icon will be highlighted. For example, BRIGHTNESS.

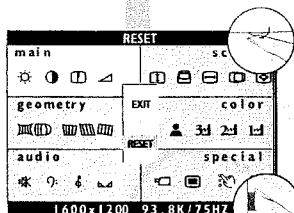

- 2 Turn the ROTARY knob until RESET is highlighted. Next, press the ON SCREEN DISPLAY button.

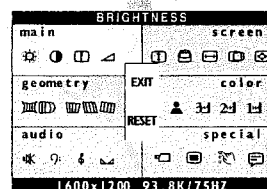


- 3 The first icon in the reset window is now highlighted. Turn the ROTARY knob to select another icon and begin adjustments, or turn the knob until EXIT is highlighted as shown above.


### EXIT & RESET FROM THE ON SCREEN DISPLAY

Exiting from the On Screen Display removes the On Screen Display from the monitor screen. Resetting from the On Screen Display returns everything in all the windows to factory presets.

#### TO EXIT AN ENTIRE ON SCREEN DISPLAY

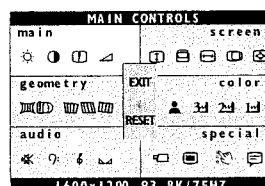


- 1 Make sure you have exited from all icons in a window. (See TO EXIT FROM AN INDIVIDUAL WINDOW.) For example, MAIN CONTROLS will be highlighted.

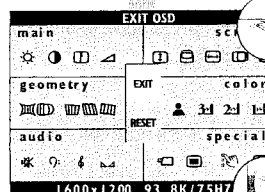


- 2 Turn the ROTARY knob until EXIT is highlighted. Next, press the ON SCREEN DISPLAY button. The On Screen Display will disappear.


#### RESET ENTIRE ON SCREEN DISPLAY

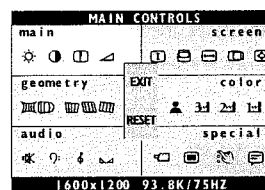


- 1 Make sure you have exited from all icons in a window. (See TO EXIT FROM AN INDIVIDUAL WINDOW.) For example, MAIN CONTROLS will be highlighted.

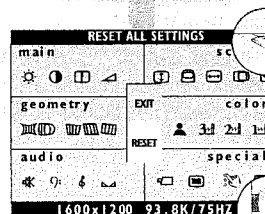

- 2 Turn the ROTARY knob until RESET is highlighted. Next, press the ON SCREEN DISPLAY button.

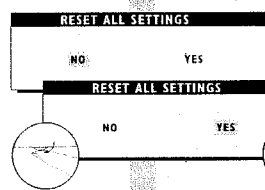


- 3 Turn the ROTARY knob to select NO or YES. Then press the ON SCREEN DISPLAY button.

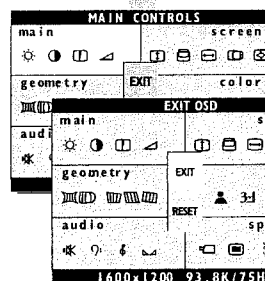

- 4 If NO is selected, the On Screen Display appears and MAIN CONTROLS is highlighted. If YES is selected, the Exit OSD screen appears.

## ADDITIONAL HOOK UP OPTIONS

### BNC AND USB SET UPS

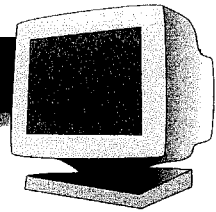

#### BNC CONNECTIONS

BNC is another way to connect the monitor to the computer. This connection requires an optional BNC cable. It can be connected to either a Macintosh- or IBM-compatible computer. For those who work with graphics or designs, this option may be better.

**Note:** Be sure to flip the D-Sub/BNC switch to BNC when using this connection.


##### For an IBM-compatible computer:

1. Turn off the computer.
2. Connect the (optional) BNC monitor cable and set D-Sub/BNC switch to BNC.
3. Connect the power cable.
4. Turn on the monitor. Then turn on the computer.
5. If you have Windows '95, follow the "If you have Windows '95" steps on the Setting Up foldout sheet.

##### For a Macintosh-type computer:

1. Connect the Mac adapter to one end of the monitor cable.
2. Turn off the computer.
3. Connect the (optional) BNC monitor cable and set D-Sub/BNC switch to BNC.
4. Connect the power cable.
5. Turn on the monitor. Then turn on the computer.

D-Sub/BNC Switch

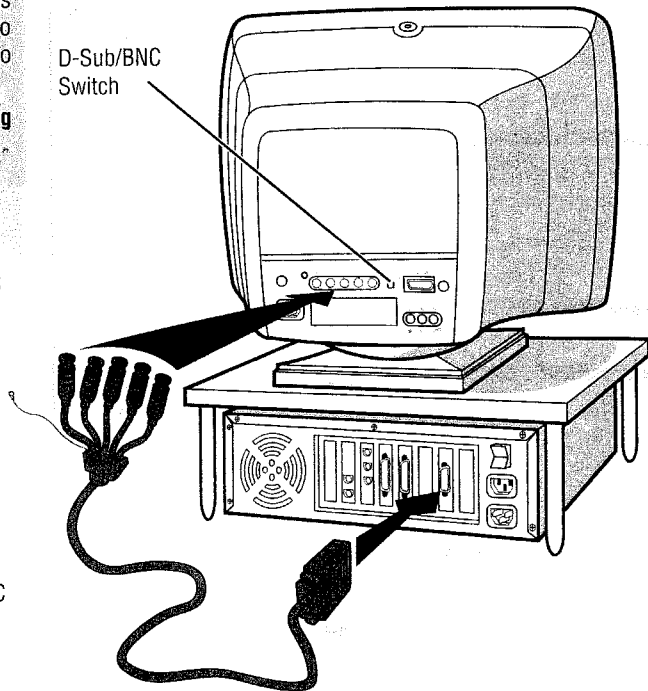

Refer to the "Setting Up your Philips monitor" foldout for a more detailed guide to setting up your monitor.


#### USB CONNECTIONS

USB (Universal Serial Bus) is an innovation in connecting your IBM-compatible computer to your monitor. By using the USB, you will be able to connect your keyboard, mouse, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. Plus, you will have true plug-and-play capability. While the software is still being developed, Philips has included the hardware so you will be ready to take advantage of this next generation in computer development.


##### For an IBM-compatible Computer:

1. Turn off the computer.
2. Connect the (optional) USB Hub and cable to the computer and to the monitor. (Computer must have USB port.)
3. Connect the power cable.
4. Turn on the monitor. Then turn on the computer.
5. With the installation of the correct software, you will be able to connect specially-made peripherals to the monitor.

**Note:** USB Hub and cables sold separately. USB Bay exists in back of monitor.

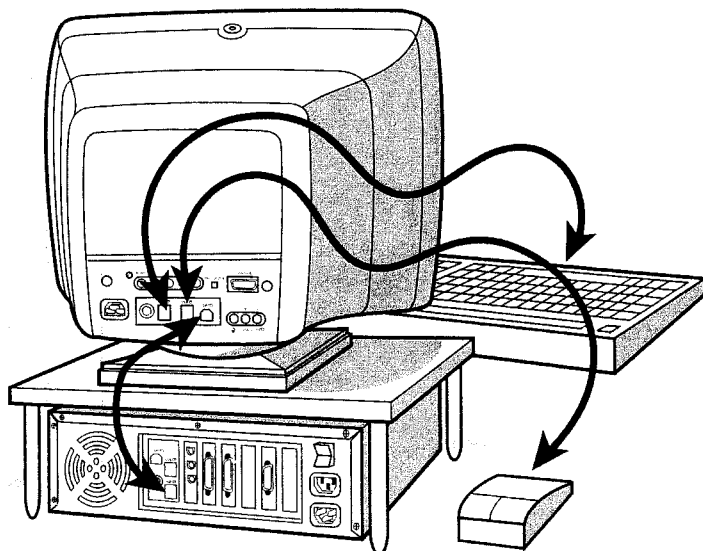

Refer to the "Setting Up your Philips monitor" foldout for a more detailed guide to setting up your monitor.

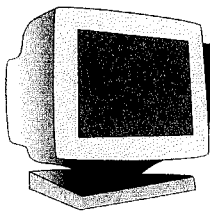

## ADDITIONAL INFORMATION


### AUDIO HOOK UPS AND POWER SAVING FEATURE

#### MICROPHONE AND EARPHONES JACKS

In addition to built-in speakers and microphone, you can connect this monitor to optional earphones and a microphone. The jacks are on the right side of the monitor.

To use the microphone with your computer or an amplifier, make the connections shown below.

**Note:** When the earphones are plugged in, there will be no sound from the built-in speakers.

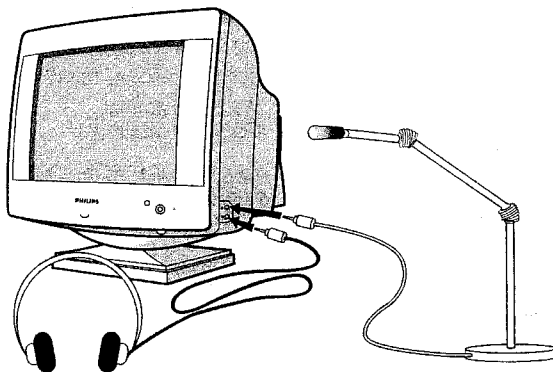


#### MICROPHONE AND AUDIO-IN JACKS

A microphone jack is on the back of the monitor. Use it and the supplied cable to connect your monitor to your computer or an amplifier (if either has the right type of jack).

On the back of this monitor there is also one set of left and right audio-in jacks. Use them and the supplied cable to connect your monitor to your computer or an amplifier (if either has the right type of jacks).

See page 2 for more detailed illustrations of the jacks' locations.

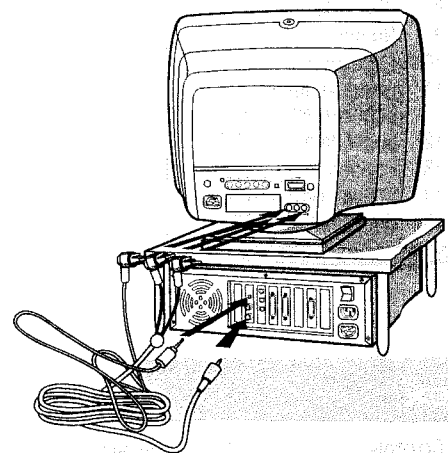

Refer to the owner's manuals included with your earphones and microphone for a detailed guide to setting up these items.

#### AUTOMATIC POWER SAVINGS & PRESET RESOLUTION MODES

If you have VESA's DPMS compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If input from a keyboard, mouse, or other device is detected, the monitor automatically "wakes up." The table at left shows the power consumption and signalling of this automatic power-saving feature. To turn this feature on and off, see page 12. The table at right shows the 12 factory preset resolution modes. The maximum number of modes is 16. This leaves room for additions.

Power Management Definition						
VESA's mode	Video	H-sync	V-sync	Power used	Power saving(%)	LED color
ON	Active	Yes	Yes	<130W	0%	Green
Stand-by	Blanked	No	Yes	< 15W	87.5%	Yellow
Suspend	Blanked	Yes	No	< 15W	87.5%	Yellow
OFF	Blanked	No	No	< 5W	95.8%	Amber

This monitor is Energy Star compliant and power management compatible.




AS AN ENERGY STAR PARTNER, PHILIPS HAS DETERMINED THAT THIS PRODUCT MEETS THE ENERGY STAR GUIDELINES FOR ENERGY EFFICIENCY.

The proper operation of the function requires a computer with VESA DPMS power management capabilities. When used with a computer equipped with VESA DPMS, the monitor is Energy Star compliant.

Factory Preset Resolution Modes				
MODE	RESOLUTION	H. FREQ. (KHz)	V. FREQ. (Hz)	STANDARD
1	640 x 400	31.5	70	VGA
2	640 x 480	31.5	60	VGA
3	640 x 480	37.5	75	VESA/75
4	800 x 600	46.9	75	VESA/75
5	800 x 600	53.7	85	VESA/85
6	1024 x 768	60	75	VESA/75
7	1024 x 768	68.6	85	VESA/85
8	1152 x 870	69.0	75	MAC
9	1152 x 900	71.8	76	UN SPARC
10	1280 x 1024	80.0	75	VESA/75
11	1280 x 1024	91.0	85	VESA/85
12	1600 x 1200	93.8	75	VESA/75

## ADDITIONAL INFORMATION


COMING TO TERMS WITH THIS BOOK

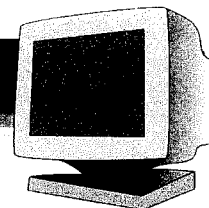

### PIN ASSIGNMENT

The 15-pin D-sub connector (male) of the signal cable:

 Pin No.	Assignment
1	Red video input
2	Green video input
3	Blue video input
4	Identical output - connected to pin 10
5	Self test
6	Red video ground
7	Green video ground
8	Blue video ground
9	No pin
10	Logic ground
11	Identical output - connected to pin 10
12	Serial data line (SDA)
13	H. Sync / H+V
14	V. Sync (VCLK for DDC)
15	Data clock line (SCL)



### SPECIFICATIONS

#### GENERAL

##### CRT

Screen size	:19" (48.2 cm) flat & square
Viewable Image Size (VIS)	:17.9"
Focusing method	:Dynamic focus
Dot pitch	:0.22 mm (horizontal)
Phosphor	:P22 or equivalent, medium short persistence

Screen treatment	:Arase
------------------	--------

##### Display area

Factory preset	:340 mm (H) x 255 mm (V)
Maximum usable	:364 mm (H) x 272.5 mm (V)

##### Scanning frequency

Horizontal (line)	:30-95kHz (AutoScan)
Vertical (frame)	:50-160 Hz (AutoScan)

##### Input power

:100-240 VAC, 50-60 Hz

##### Power consumption

:120 Watt normal, 130 Watt max.

##### Thermal dissipation

:341.3 BTU normal,  
409.5 BTU maximum

##### Input signal

Video	:0.7 or 1.0 Vpp, 75 Ohm impedance
Sync	:Separate sync. TTL level Composite sync. TTL level

##### Pedestal

Tilt	:5° forward, 11° backward
Swivel	:90° left, 90° right

##### Physical

Unit dimension (WxHxD)	:485 x 490 x 515 mm (19.1" x 19.3" x 20.3")
Net weight	:24.5 kg (53.9 lbs.)

##### Operating conditions

Temperature	:0° C - 40° C
Humidity	:10% - 90%

##### Storage conditions

Temperature	:-40° C - 60° C
Humidity	:5% - 95%


### INDEX

Audio Controls	3, 14	On Screen Display	2
Automatic Power Saving	18	OSD button	2
Balance	14	OSD Controls	13
Balanced Pincushion	15	Parallelogram	15
Bass	14	Pedestal	2
BNC jacks	2	Photo Retouch	8, 9
BNC set up	17	Pin Assignment	19
Brightness	4	Pincushion	15
Built-in microphone	2	Power button	Set Up Guide, 2
Cable Cover	2	Power plug	Set Up Guide, 2
CAD/CAM	8, 9	Power Saving	12
Color Temperature	3, 8-9	Reset	16
Contrast	4	Resolution Modes	18
Corner Correction	10	Right & Left Audio in jacks	2
Degauss	5	Rotary Default	12
Description of controls	2, 3	Rotary knob	2
D-Sub/BNC switch	2, 17	Rotation	15
DTP	8, 9	Safety precautions	1
Earphones jack	2, 17	Screen Size & Position	3, 6-8
End-of-life disposal	1	Speakers	2
Exit	16	Special Controls	3, 10-13
Features	1	Specifications	19
Full Size	6	Trapezoid	15
Geometry Controls	3, 15	Treble	14
Glossary	19	Troubleshooting	20, Set Up Guide
Hook Ups	Set Up Guide, 17	USB hub	2, 17
Horizontal Position	6	USB set up	17
Horizontal Size	7	User Presets	9
Language	10	Vertical Linearity	11
Main Controls	3, 4-5	Vertical Position	7
Maintenance	1	Vertical Size	7
Microphone jacks	2, 17	Video Input	13
Moire	11	Volume	5
Monitor cable plug	2	Warranty	21
Mute	14		
Mute button	2, 3		

### GLOSSARY

Here are a few definitions that may help you.

Degauss	The process by which metal parts of the monitor are demagnetized in order to reduce screen distortion and color impurity.
D-Sub/ BNC	Two ways of connecting your monitor to your computer. Your monitor comes with a D-Sub cable. For work with a heavy emphasis on graphics, a BNC cable is recommended.
Geometry	A set of controls that allows you to adjust the alignment of the picture on the monitor screen. The goal is to "square up" the picture. This is done by adjusting such items as balanced pincushion, pincushion, parallelogram, rotation, and trapezoid.
Moire	A fringe pattern caused by the interference between two superimposed line patterns.
USB	Universal Serial Bus. A way to connect your computer, monitor, and peripherals for true Plug-and-Play functions.

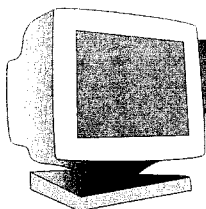

## ADDITIONAL INFORMATION

### WHAT TO DO IF SOMETHING ISN'T WORKING

#### TROUBLESHOOTING

Having trouble? Something not working? Before calling for help, try these suggestions.

##### HAVING THIS PROBLEM?

No Picture  
(Power LED not lit)

##### CHECK THESE ITEMS

Make sure the Power cable is plugged in the wall and back of the monitor.  
Power button on top of the monitor should be in the ON position.  
Disconnect the monitor from the power outlet for about one minute.

No Picture  
(Power LED is Amber  
or Yellow in color)

Make sure the computer is turned on.  
Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 17.  
Make sure the monitor cable is properly connected to your computer.  
Check to see if the monitor cable has bent pins.  
The Energy Saving Feature may be activated. See pages 12 and 18 for more detail.

No Picture  
(Power LED is Green  
in color)

Make the Brightness and Contrast controls are set correctly. See page 4 for details.  
Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 17.  
Make sure the monitor cable is properly connected to your computer.  
Check to see if the monitor cable has bent pins.  
Make sure the computer Power button is on.

Screen says



when you turn on  
the monitor.

Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 17.  
Make sure the monitor cable is properly connected to your computer. See Setting Up foldout.  
Check to see if the monitor cable has bent pins.  
Make sure the computer is turned on

No Color

If you are using a non-VESA-DDC standard video card, consult your local Philips dealer or service organization to obtain an adapter.

Color appears blotchy

The picture may need degaussing. See page 5 for details.  
Remove any nearby magnetic objects.  
Face the monitor East for best picture quality.

Missing one or  
more colors

Check user settings of Color Temperature. See pages 8 and 9 for details.  
Make sure the monitor cable is properly connected to your computer.  
Check to see if the monitor cable has bent pins.

Dim Picture

Adjust the Brightness and Contrast controls. See page 4 for details.  
Check the Video Input selection and switch from 0.7 volts to 1.0 volts or 1.0 volts to 0.7 volts. See page 13.  
Check your video card and the manual instructions for it. It may be a non-VESA-DDC Standard card.

Picture is too large  
or too small

Adjust the Horizontal and/or Vertical Size. See pages 7 and 8 for details.

Edges of the picture  
are not square

The geometry controls require adjusting. See page 15 for details.

Picture has a double  
image

Eliminate the use of a video extension cable and/or video switch box.  
Face the monitor East for best picture quality.

Picture is not sharp

Check to make sure Moire is switched off. See page 11.

No Audio

Make sure mute is not activated. See pages 2 and 14 for details.  
Rotary Default may be set to Brightness or Contrast. See page 12 for details.  
Make sure the Right & Left Audio in cable is securely plugged into the monitor and the audio source.  
See pages 2 and 18 for details.

Unstable Picture

Increase your refresh rate. Consult your computer manual for details.

Windows '95 cannot  
find your video card

Select "Super VGA" under STANDARD DISPLAY TYPES, or contact your video card manufacturer for the right drivers.



# Setting Up your Philips monitor

Installation de votre moniteur Philips.

Configuración de su monitor Philips.

This foldout is designed to help you use your monitor as soon as possible. Refer to your owner's manual for detailed information. You may also contact us at our web site: <http://www.monitors.be.philips.com>


Ce dépliant est conçu pour vous aider à utiliser votre moniteur du plus vite possible. Consulter votre manuel d'utilisateur pour des informations détaillées. Vous pouvez aussi nous contacter sur notre site Web: <http://www.monitors.be.philips.com>

Esta hoja plegable está diseñada para ayudarle a usar su monitor tan pronto como sea posible. Consulte su manual si desea información detallada. También puede comunicarse con nosotros a través de nuestra página web: <http://www.monitors.be.philips.com>

To hook up your monitor to a Macintosh-type computer, follow the steps below. To hook up your monitor to an IBM-compatible computer, follow step 1, then turn over this foldout. In either case, before installing this monitor, please refer to the user's guide of your computer and video adapter to see if this equipment needs any additional setting.

Suivre les étapes suivantes pour connecter votre moniteur à un ordinateur du type Macintosh. Pour connecter votre moniteur à un ordinateur compatible IBM, suivre la première étape, puis tourner ce dépliant. En tout cas, avant l'installation de votre moniteur, veuillez vous référer au manuel d'utilisateur de votre ordinateur et carte vidéo pour voir si cet équipement a besoin d'installation supplémentaire.

Para conectar su monitor a un ordenador tipo Macintosh, siga los pasos que se presentan a continuación. Para conectar su monitor a un ordenador compatible con IBM, siga el paso 1, luego voltee esta página. En ambos casos, antes de instalar este monitor, consulte la guía del usuario de su ordenador y de su adaptador de vídeo, para

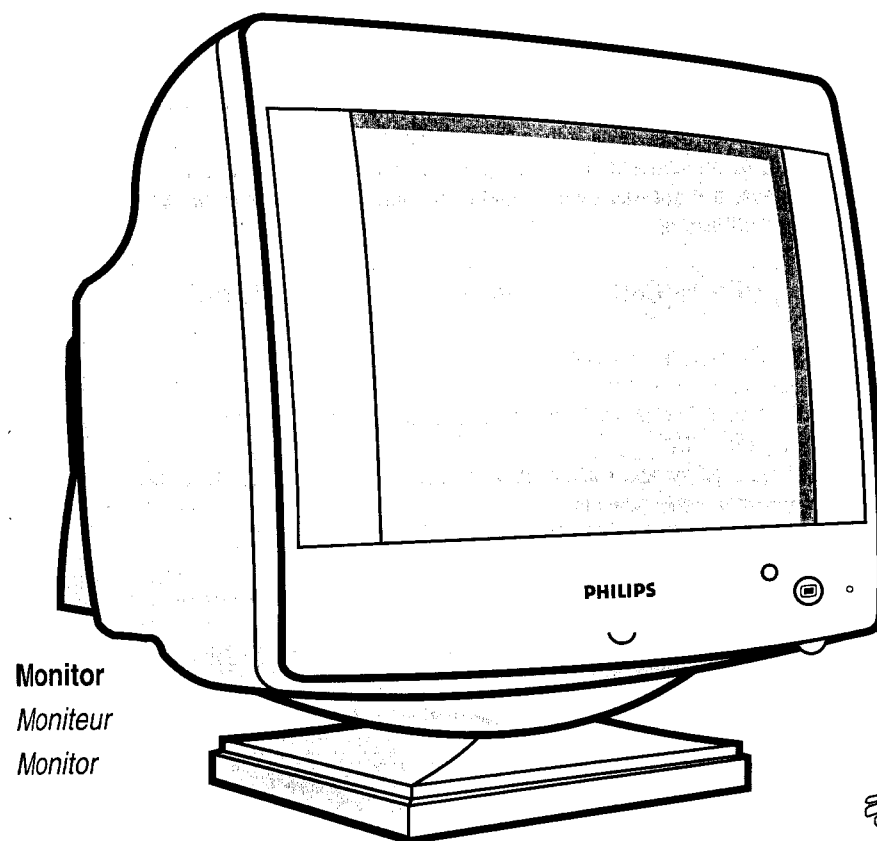

Monitor  
Moniteur  
Monitor


## 1 Unpack all the parts. Déballer toutes les pièces. Desembale todas las piezas.

Monitor cable  
Câble du moniteur  
Cable del monitor


Macintosh adapter (optional)  
Carte Macintosh (optionnelle)  
Adaptador de Macintosh (opcional)

Power cable  
(Appearance may vary.)  
Câble de puissance (l'apparence varie)  
Cable de energía (su aspecto puede variar)


Audio cable  
Câble audio  
Cable de audio

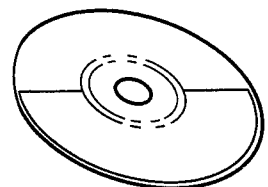

CD ROM or Floppy Disk  
CD-ROM ou Floppy Disk  
CD ROM or Floppy Disk

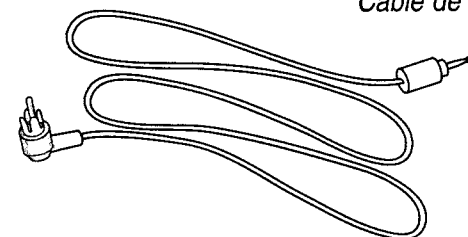


Microphone cable  
Câble du microphone  
Cable del micrófono

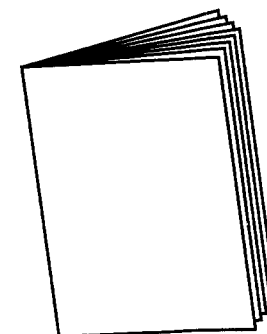

Owner's manual  
Manuel d'utilisateur  
Manual del propietario


## 2 Connect the special Mac adapter (May not be included.) to one end of the monitor cable.

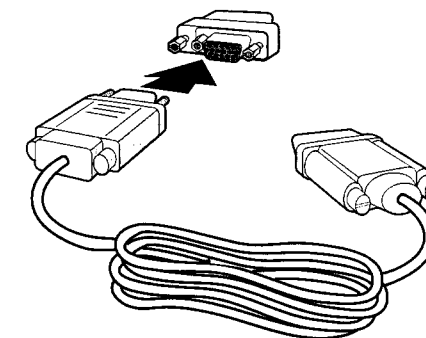

Connecter la carte spéciale Mac (pas toujours incluse) à une extrémité du câble du moniteur.

Conecte el adaptador especial de Mac (puede no estar incluido) a un extremo del cable del monitor.


## 3 Turn off the computer. Then connect the monitor cable.

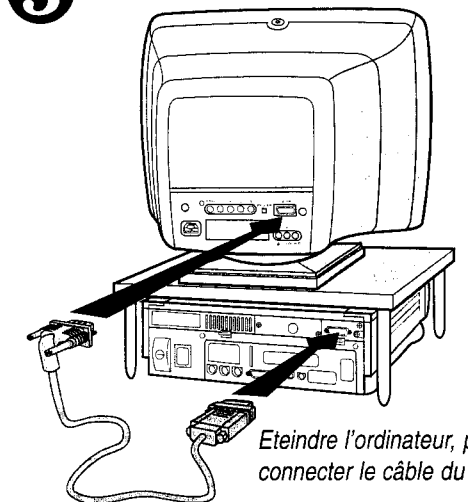

Eteindre l'ordinateur, puis connecter le câble du moniteur

Apague el ordenador. Luego conecte el cable del monitor.


## 4 Connect the power cable. Make sure the power plug and the wall socket are easily accessible.

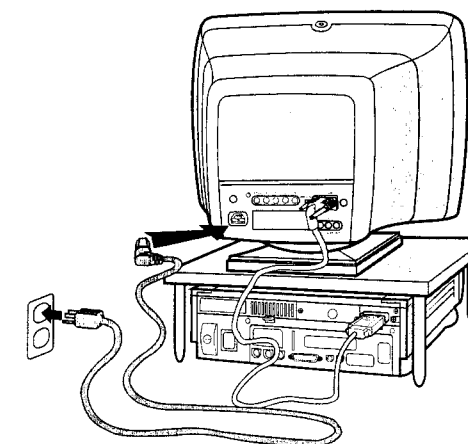

Connecter le câble de puissance. S'assurer que la fiche secteur et la prise murale soient facilement accessibles.

Conecte el cable de energía. Verifique que se pueda acceder fácilmente al tomacorriente y al enchufe de pared.

## 5 Turn on the monitor. Then turn on the computer.

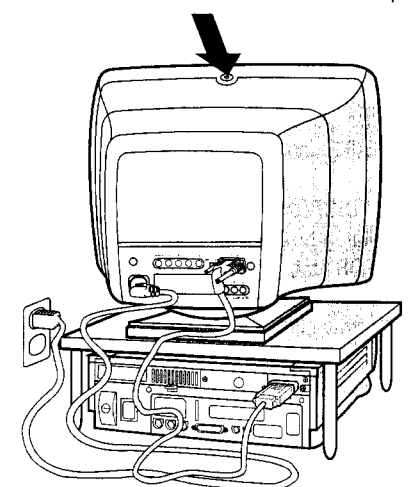

Allumer le moniteur, puis l'ordinateur.

Encienda el monitor. Luego encienda el ordenador.

# Setting Up *your Philips monitor*

*Installation de votre moniteur Philips.*


*Configuración de su monitor Philips.*

*IBM-compatible computer hookup continued from step 1 on other side.*

*Connecter l'ordinateur compatible IBM, suite de la première étape de l'autre côté.*

*Conexión del ordenador compatible con IBM (continuación del paso 1 del otro lado de la página).*


**2** Turn off the computer. Then connect the monitor cable.

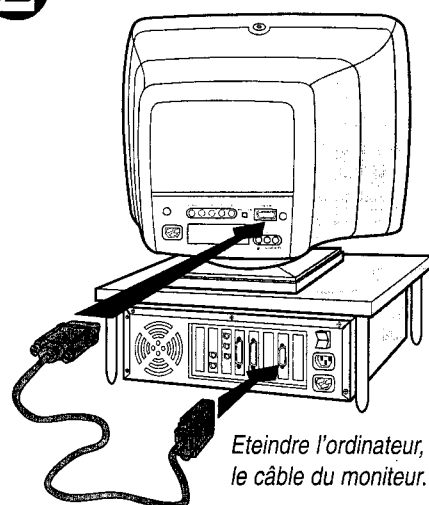

*Eteindre l'ordinateur, puis connecter le câble du moniteur.*

*Apague el ordenador. Luego conecte el cable del monitor.*


**3** Connect the power cable. Make sure the power plug and the wall socket are easily accessible.

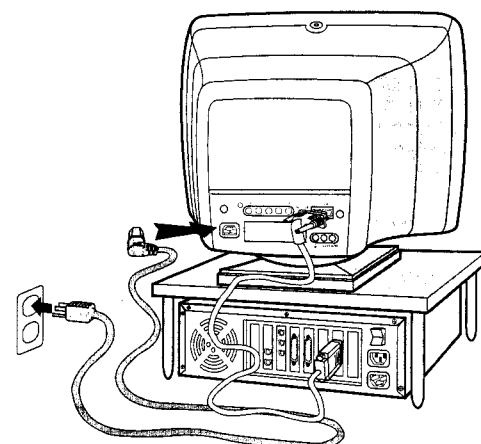

*Connecter le câble de puissance. S'assurer que la fiche secteur et la prise murale soient facilement accessibles.*

*Conecte el cable de energía. Verifique que se pueda acceder fácilmente al tomacorriente y al enchufe de pared.*

**4** Turn on the monitor. Then turn on the computer.

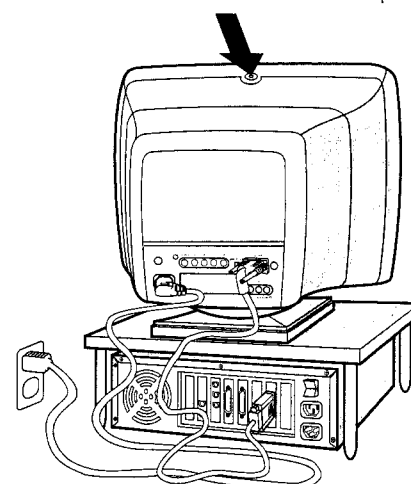

*Allumer le moniteur, puis l'ordinateur.*

*Encienda el monitor. Luego encienda el ordenador.*

## If you have Windows '95...

follow these steps to complete setting up your monitor.

1. Start Windows '95 and install CD ROM supplied with this monitor.
2. Click on the "START" icon. Next, click on the "SETTINGS" icon. Then click on "CONTROL PANEL."
3. Double-click on "DISPLAY" icon. Next, click on "SETTINGS" tab. Then click on "ADVANCED PROPERTIES" dialog box.
4. Click on "MONITOR" tab.
- 5a. If you have an old computer, click on "CHANGE" dialog box. Next, "SELECT DEVICE" screen appears. Now click on "HAVE DISK" dialog box. and select CD-ROM drive  
Or
- 5b. If you have a new computer, "SELECT DEVICE" screen automatically appears. Click on "HAVE DISK" dialog box and select CD-ROM drive.
6. Select "OK" in the "INSTALL FROM DISK" dialog box. If model name of the Philips monitor is correct, click "OK" tab in the "SELECT DEVICE" dialog box.
7. Click "CLOSE" tab in the "ADVANCED PROPERTIES" dialog box. If your Windows '95 version is different or you need more detailed installation information, please refer to the Windows '95 user's manual. **For additional information on the monitor, please refer to the owner's manual.**

## Si vous avez Windows '95...

suivez les étapes suivantes pour terminer l'installation de votre moniteur.

1. Démarrer Windows 95 et installer le CD-ROM fourni avec votre moniteur.
2. Cliquer sur l'icône "DÉMARRER", ensuite, cliquer sur l'icône "PARAMETRES", puis cliquer sur l'icône "Panneau de configuration".
3. Cliquer deux fois sur l'icône "AFFICHER", ensuite cliquer sur l'onglet "PARAMETRES", puis cliquer sur la boîte de dialogue "PROPRIETES AVANCEES".
4. Cliquer sur l'onglet "MONITEUR".
- 5a. Si vous avez un ancien ordinateur, cliquer sur la boîte de dialogue "CHANGER". ensuite l'écran "SELECTIONNER UNITE" apparaît. Maintenant cliquer sur la boîte de dialogue "DISQUETTE FOURNIE", et sélectionner le lecteur CD-ROM.  
ou
- 5b. Si vous avez un ordinateur récent, l'écran "SELECTIONNER UNITE" apparaît automatiquement. Cliquer sur la boîte de dialogue "DISQUETTE FOURNIE" et sélectionner le lecteur CD-ROM.
6. Sélectionner "OK" dans la boîte de dialogue "INSTALLER A PARTIR DE LA DISQUETTE". Si le nom du modèle de moniteur Philips est correct, cliquer sur l'onglet "OK" dans la boîte de dialogue SELECTIONNER UNITE"
7. Cliquer sur l'onglet "FERMER" dans la boîte de dialogue "PROPRIETES AVANCEES". Si votre version Windows 95 est différente ou si vous voulez des informations plus détaillées sur l'installation, veuillez vous référer au manuel d'utilisateur de Windows 95. **Pour des informations complémentaires sur le moniteur, veuillez vous référer au manuel d'utilisateur.**

## WHAT TO DO IF YOUR MONITOR ISN'T WORKING

Make sure...

- ...the Power cable is plugged in the wall and the rear of the monitor.
- ...the Power button on top of the monitor should be in the ON position.
- ...the monitor cable is properly connected to the back of the monitor and the computer.
- ...to check to see if the monitor cable has bent pins.
- ...the D-Sub/BNC switch on the rear of the monitor is in the correct position.

See pages 2 and 17 of the owner's manual for details.

**See page 20 of the owner's manual for troubleshooting tips.**

**For warranty questions, please see your owner's manual.**

## QUE FAIRE SI VOTRE MONITEUR NE MARCHE PAS

S'assurer...

- ...que le câble de puissance soit branché dans le mur et à l'arrière du moniteur.
- ...que le bouton Marche/Arrêt au dessus de votre moniteur soit sur MARCHE.
- ...que le câble du moniteur soit bien connecté à l'arrière du moniteur et de l'ordinateur.
- ...de vérifier que le câble du moniteur n'ait pas de fiches tordues.
- ...que l'interrupteur D-Sub/BNC à l'arrière du moniteur soit en position correcte.

Voir page 24 et 39 de votre manuel d'utilisateur pour plus de détails.

**Voir page 42 du manuel d'utilisateur pour des conseils de dépannage.**

**Si vous avez des questions concernant la garantie, veuillez consulter votre manuel d'utilisateur.**

## ¿QUÉ HACER SI SU MONITOR NO FUNCIONA?

Verifique...

- ...si el cable de energía está enchufado a la fuente de energía y a la parte posterior del monitor.
- ...si el botón de alimentación en la parte superior del monitor está en la posición ON.
- ...si el cable del monitor está debidamente conectado a la parte posterior del monitor y del ordenador.
- ...que las clavijas del cable del monitor no estén dobladas.
- ...que el interruptor D-Sub/BNC en la parte posterior del monitor esté en la posición correcta. Si desea más detalles, consulte las páginas 46 y 61 del manual del propietario.

**En la página 64 del manual del propietario encontrará consejos sobre la localización de fallas.**

**Para consultas sobre la garantía, consulte el manual del propietario.**

## Si tiene Windows '95...

siga estos pasos para finalizar la configuración de su monitor.

1. Inicie Windows '95 e instale el CD ROM que se suministra con su monitor.
2. Haga clic en el icono "INICIO". Luego haga clic en el icono "CONFIGURACIÓN". Luego haga clic en "PANEL DE CONTROL".
3. Haga doble clic en el icono "PANTALLA". A continuación haga clic en la etiqueta "CONFIGURACIÓN" y luego en el cuadro de diálogo "PROPIEDADES AVANZADAS".
4. Haga clic en la etiqueta "MONITOR".
- 5a. Si usted tiene un ordenador viejo, haga clic en el cuadro de diálogo "CAMBIAR". Luego aparece la pantalla "SELECCIÓN DE DISPOSITIVO". Ahora haga clic en el cuadro de diálogo "UTILIZAR DISCO" y seleccione la unidad CD-ROM.  
O
- 5b. Si tiene un ordenador nuevo, aparece automáticamente la pantalla "SELECCIONAR DISPOSITIVO". Haga clic en el cuadro de diálogo "UTILIZAR DISCO" y seleccione la unidad CD-ROM.
6. Seleccione "ACEPTAR" en el cuadro de diálogo "INSTALAR DESDE DISCO". Si el nombre del modelo del monitor Philips está correcto, haga clic en la etiqueta "ACEPTAR" del cuadro de diálogo "SELECCIÓN DE DISPOSITIVO".
7. Haga clic en la etiqueta "CERRAR" del cuadro de diálogo "PROPIEDADES AVANZADAS". Si su versión de Windows '95 es diferente o necesita información más detallada acerca de la instalación, consulte el manual del usuario de Windows '95. **Si desea información adicional acerca del monitor, consulte el manual del propietario.**